

[manuals.plus](#) /› [Ortizan](#) /› [Ortizan M10 Portable Bluetooth Speaker User Manual](#)

## Ortizan M10

# Ortizan M10 Portable Bluetooth Speaker User Manual

Model: M10

## 1. INTRODUCTION

Thank you for choosing the Ortizan M10 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

## Package Contents

- Ortizan M10 Portable Bluetooth Speaker
- USB-C Charging Cable
- AUX Audio Cable
- User Manual

## 2. PRODUCT OVERVIEW

The Ortizan M10 is a powerful portable Bluetooth speaker designed for robust sound and outdoor use, featuring IPX7 waterproofing, dynamic RGB lighting, and karaoke functionality.



Image: Ortizan M10 Portable Bluetooth Speaker, showcasing its design and waterproof capability.

## Controls and Ports

Familiarize yourself with the speaker's buttons and connection ports for easy operation.



Image: Detailed view of the speaker's control buttons, including power, volume, play/pause, EQ, mode, and light controls.

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Up (+):** Increase volume.
- **Volume Down (-):** Decrease volume.
- **Play/Pause Button:** Play or pause audio. Answer/end calls.
- **EQ Button:** Cycle through different equalizer sound modes (Deep Bass, 3D Surround, Clear Vocals).
- **Mode Button (M):** Switch between Bluetooth, AUX, and TF card playback modes.
- **Light Button:** Change or turn off the RGB light effects.
- **Microphone Input:** 6.35mm jack for dynamic microphones (for karaoke function).
- **USB-C Charging Port:** For charging the speaker.
- **AUX Input:** 3.5mm jack for wired audio connection.
- **TF Card Slot:** For playing music directly from a TF (MicroSD) card.

## 3. SETUP

### 3.1 Charging the Speaker

Before first use, fully charge the speaker. Use the provided USB-C charging cable and a compatible 9V/2A PD fast charger for optimal charging speed.

- Connect the USB-C cable to the speaker's charging port.
- Connect the other end to a power adapter (not included).
- The charging indicator light will show the charging status.



Image: The Ortizan M10 speaker being charged via its USB-C port.

### 3.2 Power On/Off

- **To Power On:** Press and hold the Power button for approximately 2-3 seconds until you hear an audible prompt and the indicator light turns on.
- **To Power Off:** Press and hold the Power button for approximately 2-3 seconds until you hear an audible prompt and the indicator light turns off.

### 3.3 Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device

is connected.

- Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue light). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
- On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
- Select "Ortizan M10" from the list of devices.
- Once connected, you will hear a confirmation sound, and the blue indicator light will remain solid.



Image: The Ortizan M10 speaker establishing a Bluetooth connection with a mobile phone.

### 3.4 AUX Input

To play audio from a device without Bluetooth, use the provided AUX audio cable.

- Connect one end of the 3.5mm AUX cable to the speaker's AUX input port.
- Connect the other end to the audio output jack of your device.
- The speaker will automatically switch to AUX mode, or you can press the 'M' (Mode) button to select it.

### 3.5 TF Card Playback

Insert a TF (MicroSD) card with music files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Audio Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up:** Press the '+' button.
- **Volume Down:** Press the '-' button.
- **Next Track:** Press and hold the '+' button.
- **Previous Track:** Press and hold the '-' button.

### 4.2 Equalizer (EQ) Modes

The Ortizan M10 offers professional EQ sound with three distinct modes.

- Press the 'EQ' button to cycle through the available sound profiles:

- **Deep Bass:** Enhances low-frequency sounds for a powerful bass experience.
- **3D Surround Sound:** Creates a wider, more immersive audio field.
- **Crystal-Clear Vocals:** Optimizes mid-range frequencies for clear voice reproduction.



Image: Internal view of the Ortizan M10 speaker, illustrating its dual subwoofers, tweeters, and passive radiators for 100W sound output.

### 4.3 True Wireless Stereo (TWS) Pairing

Pair two Ortizan M10 speakers together for a combined 200W stereo sound experience.

- Ensure both M10 speakers are powered on and not connected to any Bluetooth device.
- On one speaker (this will be the primary speaker), press and hold the 'TWS' button (often integrated with the Mode or Play/Pause button, refer to specific button icons if available).
- The primary speaker will search for the secondary speaker. Once connected, you will hear a confirmation sound.
- Now, connect your device to the primary speaker via Bluetooth as described in section 3.3. Audio will play in stereo across both speakers.

# TRUE WIRELESS STEREO

Pair 2 to get 200W super powerful stereo

○ ○ ○ ○



Image: Two Ortizan M10 speakers positioned to demonstrate True Wireless Stereo pairing for enhanced audio.



Image: Visual representation of two Ortizan M10 speakers wirelessly connecting to form a stereo sound system.

## 4.4 RGB Dynamic Light Show

The speaker features a 7-color LED light show with 4 dynamic effects that synchronize with your music.

- Press the 'Light' button to cycle through different light modes or to turn the lights off.



Image: The Ortizan M10 speaker showcasing its RGB breathing light feature, illuminating the environment.

## 4.5 Karaoke Function

Connect a dynamic microphone to the 6.35mm microphone jack to use the karaoke function.

- Ensure the speaker is powered on.
- Plug a dynamic microphone into the 6.35mm microphone input port.
- Adjust the microphone volume and speaker volume as needed.

## 5. MAINTENANCE

Proper care ensures the longevity and performance of your Ortizan M10 speaker.

### 5.1 Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

- Ensure all ports are dry before charging or connecting other devices.

## 5.2 Waterproof Care (IPX7)

The Ortizan M10 is IPX7 waterproof, meaning it can be submerged in water up to 1 meter for 30 minutes. However, proper care is still essential.

- Ensure all port covers are securely closed before exposing the speaker to water.
- After exposure to water, especially saltwater or chlorinated water, rinse the speaker with fresh water and dry it thoroughly before charging or using ports.
- Do not intentionally submerge the speaker for extended periods or beyond specified depths.



Image: The Ortizan M10 speaker floating in water, highlighting its IPX7 waterproof design for outdoor use.

## 5.3 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to maintain battery health.

## 6. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power button not held long enough	Charge the speaker fully; Press and hold the Power button for 2-3 seconds.
No sound	Volume too low; Incorrect input mode; Device not connected	Increase speaker and device volume; Press 'M' button to select correct mode; Re-pair Bluetooth device.
Bluetooth connection unstable or fails	Device too far; Interference; Speaker not in pairing mode	Move device closer to speaker; Avoid obstacles; Ensure speaker is in Bluetooth pairing mode (flashing blue light).
TWS pairing fails	Speakers already connected to other devices; Not in TWS pairing mode	Disconnect both speakers from any Bluetooth devices; Ensure both are in TWS pairing mode (refer to section 4.3).
Karaoke microphone not working	Incorrect microphone type; Microphone not fully plugged in	Ensure a dynamic microphone is used; Check microphone connection.

## 7. SPECIFICATIONS

<b>Model Name</b>	M10
<b>Speaker Type</b>	Portable Bluetooth Speaker with Subwoofer
<b>Output Power</b>	100 Watts (200W with TWS pairing)
<b>Bluetooth Version</b>	5.0
<b>Waterproof Rating</b>	IPX7
<b>Battery Capacity</b>	18000mAh Lithium Ion
<b>Playtime</b>	Up to 24 hours (varies by volume and light usage)
<b>Charging Port</b>	USB-C (9V/2A PD fast charging compatible)
<b>Audio Inputs</b>	Bluetooth, 3.5mm AUX, TF Card
<b>Microphone Input</b>	6.35mm (for dynamic microphones only)
<b>Dimensions (L x W x H)</b>	37.4 x 13.3 x 14.1 cm
<b>Weight</b>	3.67 kg
<b>Compatible Devices</b>	Smartphones, Tablets, Laptops, Projectors, Televisions

## 8. SAFETY INFORMATION

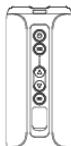
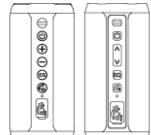
Please observe the following safety guidelines for safe operation:

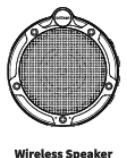
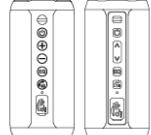
- Do not disassemble, repair, or modify the speaker. This may cause damage, electric shock, or fire.
- Keep the speaker away from extreme temperatures, direct sunlight, and open flames.
- Do not expose the speaker to corrosive liquids.
- Ensure the charging port is dry before connecting the charging cable.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.

## 9. WARRANTY AND SUPPORT

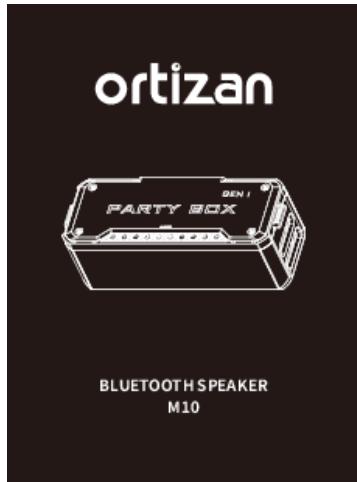
Ortizan products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your purchase or visit the official Ortizan website.

### Related Documents - M10

 Wireless Speaker User Manual Model:X8	<p><a href="#"><u>Ortizan X8 Wireless Speaker User Manual</u></a></p> <p>Comprehensive user manual for the Ortizan X8 Wireless Speaker, detailing features, specifications, button configurations, usage instructions for Bluetooth and TWS modes, TF card and AUX-in functionality, auto power-off, charging, care, and warranty information.</p>
 Wireless Speaker User Manual Model:X30	<p><a href="#"><u>Ortizan X30 Wireless Speaker User Manual</u></a></p> <p>Explore the features, specifications, and usage instructions for the Ortizan X30 Wireless Speaker. This user manual covers Bluetooth 5.3 connectivity, IPX7 water resistance, 50W output, TWS pairing, and more.</p>
 Wireless Speaker User Manual Model:X10	<p><a href="#"><u>Ortizan X10 Wireless Bluetooth Speaker User Manual</u></a></p> <p>User manual for the Ortizan X10 Wireless Bluetooth Speaker. Learn about features, specifications, setup, operation, care, and warranty information for your device.</p>

 Wireless Speaker User Manual Mode : S3	<p><a href="#">Ortizan S3 Wireless Speaker User Manual - Bluetooth 5.0, IPX7 Waterproof</a></p> <p>Explore the features, specifications, and usage guide for the Ortizan S3 Wireless Speaker. Learn about its Bluetooth 5.0, IPX7 waterproof rating, 24-hour playtime, and T-W-S capabilities.</p>
 Wireless Speaker User Manual Model: X10	<p><a href="#">X10 Wireless Speaker User Manual</a></p> <p>User manual for the X10 Wireless Speaker, detailing features, specifications, button configuration, usage instructions, care, and warranty information.</p>
 Wireless Speaker User Manual Model: X8	<p><a href="#">Ortizan X8 Wireless Speaker User Manual</a></p> <p>User manual for the Ortizan X8 Wireless Speaker, detailing features, specifications, button configuration, usage instructions, and care.</p>

Documents - Ortizan – M10



[\[pdf\] User Manual Guide SAR Rating](#)

RGB Manual Download Ortizan Speakers Headphones Outdoor speakers User Guide M10 drive google file d 1FuVUDCCFVw3V1zad Yv569UAbzp8uazQ view usp sharing |||

**M EQ BLUETOOTH SPEAKER M10** M EQ M EQ IC Caution: This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: 1 This device may not cause interference; and 2 This device must accept any interference, including interference that ...

lang:fr score:37 filesize: 691.6 K page\_count: 45 document date: 2024-04-29