

Timex TW2V84500JR

Timex UFC Men's Colossus 45mm Watch Instruction Manual

Model: TW2V84500JR

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Timex UFC Men's Colossus 45mm Watch (Model: TW2V84500JR). Please read this manual thoroughly to ensure proper use and care of your timepiece.

2. PRODUCT OVERVIEW

The Timex UFC Men's Colossus watch combines robust design with practical features. Key components and features are outlined below.

Key Features:

- Officially licensed UFC Product
- 8-inch gold-tone bracelet
- Black octagonal dial with analog and digital display
- Mineral glass lens
- Water resistant up to 100 meters (330 feet)
- INDIGLO® Night-Light
- World Time, Stopwatch, Silent Alarm, Chime functions

Watch Components:

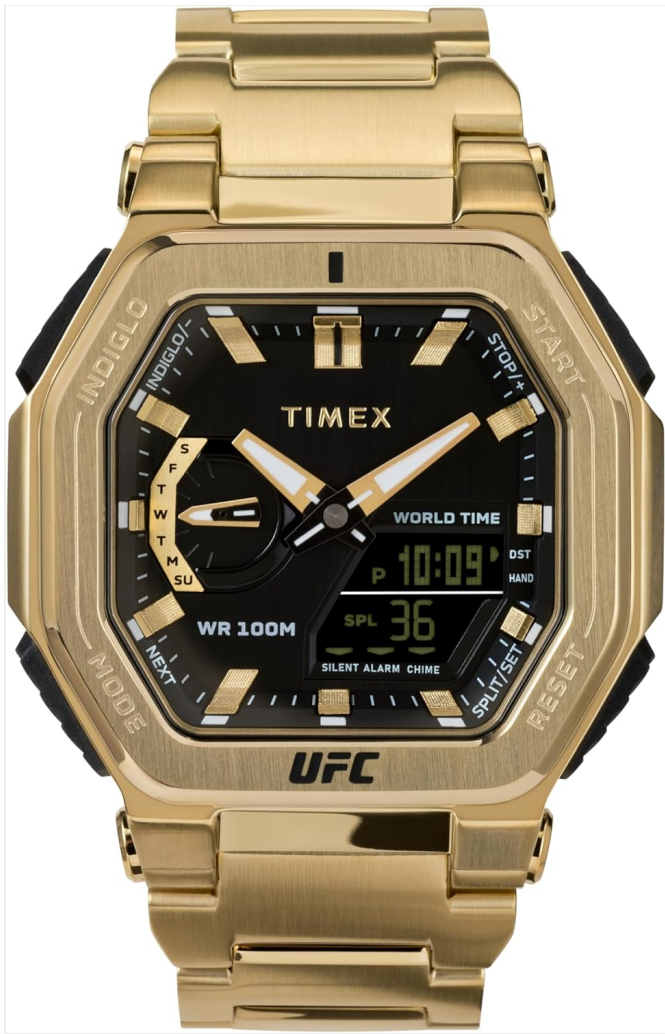


Figure 2.1: Front view of the watch, showing the octagonal dial, analog hands, digital display, and control buttons.



Figure 2.2: Side profile of the watch, highlighting the case thickness and button placement.



Figure 2.3: Rear view of the watch, showing the gold-tone bracelet and clasp with UFC branding.



Figure 2.4: Close-up of the watch case back, detailing water resistance, battery type (CR2025), and Timex branding.



Figure 2.5: Detailed view of the watch case back, showing manufacturing information and specifications.



Figure 2.6: Diagram illustrating key features such as rugged case design, 100M water resistance, combo dial with digital features, and molded rubber straps.

3. SETUP AND INITIAL CONFIGURATION

Your watch comes with a pre-installed battery. Follow these general steps to set the time and date. Specific button functions are detailed in the 'Operating' section.

3.1 Setting Time and Date:

1. Press the **MODE** button repeatedly until you reach the Time Set mode (usually indicated by flashing digits).
2. Use the **START/+** or **RESET/-** buttons to adjust the flashing digit (hours, minutes, seconds, year, month, day).
3. Press the **NEXT** button to move to the next setting field.
4. Once all settings are correct, press the **MODE** button to exit the Time Set mode.

Note: For detailed instructions on specific time zone settings or other advanced features, please refer to the comprehensive manual available on the Timex website.

3.2 Bracelet Adjustment:

The gold-tone bracelet can be adjusted by removing links to achieve a comfortable fit. This procedure typically requires specialized tools and is best performed by a professional jeweler or watch repair service to avoid damage.

4. OPERATING YOUR WATCH

Your Timex UFC Colossus watch features multiple modes and functions accessible via the side buttons.

4.1 Button Functions:

- **INDIGLO®:** Activates the watch's night-light for visibility in low-light conditions.
- **MODE:** Cycles through different watch modes (e.g., Time, World Time, Stopwatch, Alarm).
- **START/+:** Used to start functions (like stopwatch) or increment values during setting.
- **RESET/- (SPLIT/SET):** Used to reset functions (like stopwatch) or decrement values during setting. Also used for split times in stopwatch mode.
- **NEXT:** Advances to the next setting field or option within a mode.

4.2 Watch Modes:

- **Time Mode:** Displays current time, day, and date.
- **World Time Mode:** Allows viewing of time in different global cities/time zones.
- **Stopwatch Mode:** Measures elapsed time. Use START to begin, RESET to stop and clear.
- **Silent Alarm Mode:** Set a daily alarm. The watch will vibrate or provide a silent alert at the set time.
- **Chime Mode:** Activates an hourly chime.

5. MAINTENANCE AND CARE

Proper care will extend the life and maintain the appearance of your Timex watch.

5.1 Water Resistance:

This watch is water resistant up to 100 meters (330 feet). This means it is suitable for showering, swimming, and snorkeling. It is **not** suitable for scuba diving. Do not operate buttons while the watch is wet or submerged to prevent water ingress.

5.2 Cleaning:

Clean your watch regularly with a soft, damp cloth. For the metal bracelet, a soft brush can be used to remove dirt from crevices. Avoid using harsh chemicals or abrasive materials, which can damage the finish.

5.3 Battery Replacement:

The watch uses one CR2025 Lithium Metal battery. When the battery needs replacement, it is recommended to have it done by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and compromise water resistance.

6. TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions.

- **Difficulty Setting Time:** Ensure you are in the correct setting mode and using the appropriate buttons (START/+ and RESET/-) to adjust values, and NEXT to move between fields. If issues persist, the watch may require a full reset (consult the Timex website for model-specific reset procedures).
- **Digital Display Not Visible / Faint:** This typically indicates a low battery. Replace the CR2025 battery as described in the Maintenance section.
- **Analog Hands Not Moving:** Check if the watch is in a power-saving mode or if the battery is depleted. If the digital

display is working but analog hands are not, a professional inspection may be required.

- **INDIGLO® Light Not Bright Enough:** The brightness of the INDIGLO® night-light is designed for low-light visibility and may appear less bright in moderately lit environments. This is a characteristic of the feature and not typically a malfunction.

7. SPECIFICATIONS

Model Number	TW2V84500JR
Case Diameter	45mm
Water Resistance	100 meters (330 feet)
Battery Type	CR2025 Lithium Metal (included)
Lens Material	Mineral Glass
Bracelet Material	Gold-Tone Metal
Approximate Weight	11.82 ounces

8. WARRANTY AND SUPPORT




For warranty information, product registration, or further assistance, please visit the official Timex website or contact Timex customer support. Keep your proof of purchase for warranty claims.
Official Timex Website: www.timex.com



© 2023 Timex. All rights reserved. UFC is a registered trademark.

Related Documents - TW2V84500JR

	<p>Timex UFC Kick Digital Watch Operating Instructions</p> <p>Comprehensive operating instructions for the Timex UFC Kick Digital watch, covering features, modes, stopwatch, alarm, time/date settings, and battery replacement.</p>
	<p>Timex Digital Watch User Manual and Battery Safety Guide</p> <p>Comprehensive user manual for the Timex Digital Watch, detailing operation of time, stopwatch, countdown timer, and alarm functions. Includes essential battery safety warnings, handling instructions, and replacement guidelines.</p>
	<p>Руководство по эксплуатации часов Timex</p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>

	<p>Timex Analog Watch User Manual - Features, Settings, and Care</p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>
	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex Atelier Marine M1a User Manual and International Warranty</p> <p>Comprehensive user manual and international warranty details for the Timex Atelier Marine M1a watch. Includes product specifications, instructions for setting the time and adjusting the bracelet, and warranty coverage information.</p>