

## Spigen S570W

# Spigen S570W Selfie Stick Tripod Stand User Manual

Model: S570W

## 1. INTRODUCTION AND OVERVIEW

The Spigen S570W Selfie Stick Tripod Stand is a versatile accessory designed for capturing photos and videos with your smartphone. It features MagSafe compatibility for secure phone attachment, an extendable design, and a detachable Bluetooth remote control for convenient operation.



Figure 1.1: Spigen S570W Selfie Stick Tripod Stand in use with a smartphone.

Key features include:

- **MagSafe Compatibility:** Strong magnetic force for seamless integration with MagSafe devices and accessories.
- **Reinforced Tripod Stand:** Constructed from durable aluminum alloy with dual-braced legs and anti-slip silicone pads for enhanced stability.
- **Lightweight and Portable:** Weighs approximately 163g, making it suitable for travel, vlogging, and live streaming.

- **Extendable Design:** Adjustable height up to 24.4 inches (620mm) for various shooting angles.
- **Rechargeable Bluetooth Remote:** Magnetic, rechargeable Bluetooth 5.0 remote control for capturing shots up to 10 meters away.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Spigen S570W Selfie Stick Tripod Stand
- Rechargeable Bluetooth Remote Control
- USB Charging Cable (USB-A to USB-C)
- User Manual

# Included Components

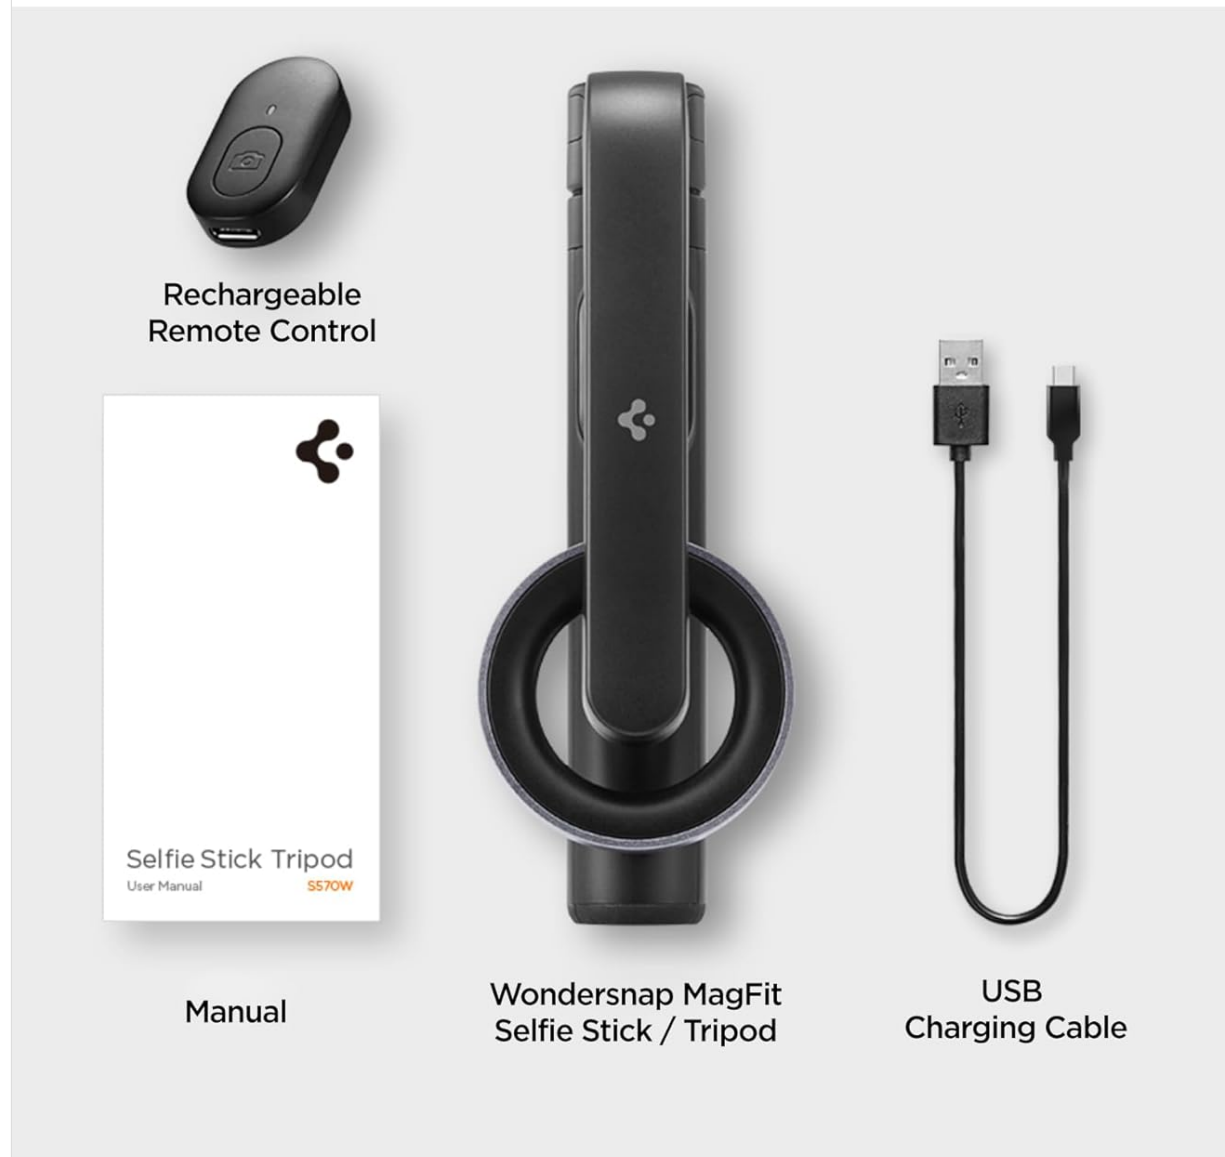 


Figure 2.1: Contents of the Spigen S570W package, including the selfie stick, remote, and charging cable.

## 3. SETUP

### 3.1 Charging the Remote Control

1. Locate the Bluetooth remote control. It is magnetically attached to the handle of the selfie stick.
2. Detach the remote control from the handle.
3. Connect the provided USB charging cable to the remote control's USB-C port and a compatible USB power source.
4. Allow the remote to charge fully before first use. A full charge provides up to 50,000 shots or 6 months of standby time.

### Stable and Extendable Selfie Stick / Tripod

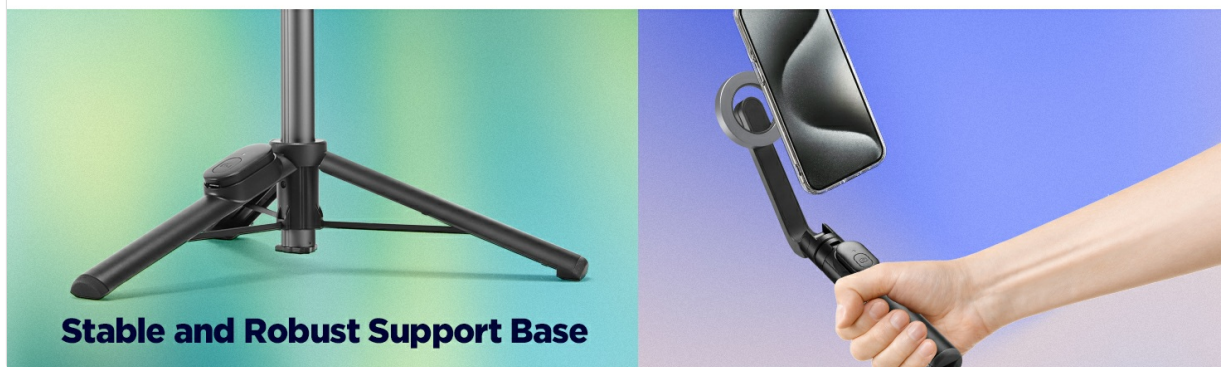 


Figure 3.1: The magnetic, rechargeable Bluetooth remote control with its USB-C charging port.

### 3.2 Pairing the Bluetooth Remote Control

1. Ensure the remote control is charged.
2. Turn on the remote control (refer to the remote for a power button or indicator light).
3. On your smartphone, navigate to the Bluetooth settings.
4. Search for available devices and select "Spigen S570W" or a similar name.
5. Once paired, the remote control is ready for use.

### 3.3 Attaching Your Smartphone

The S570W is designed for MagSafe compatible devices and cases.

1. Ensure your smartphone or its case has MagSafe compatibility.
2. Align the back of your MagSafe-compatible smartphone or case with the magnetic holder on the selfie stick.
3. The strong magnetic force will securely attach your phone.

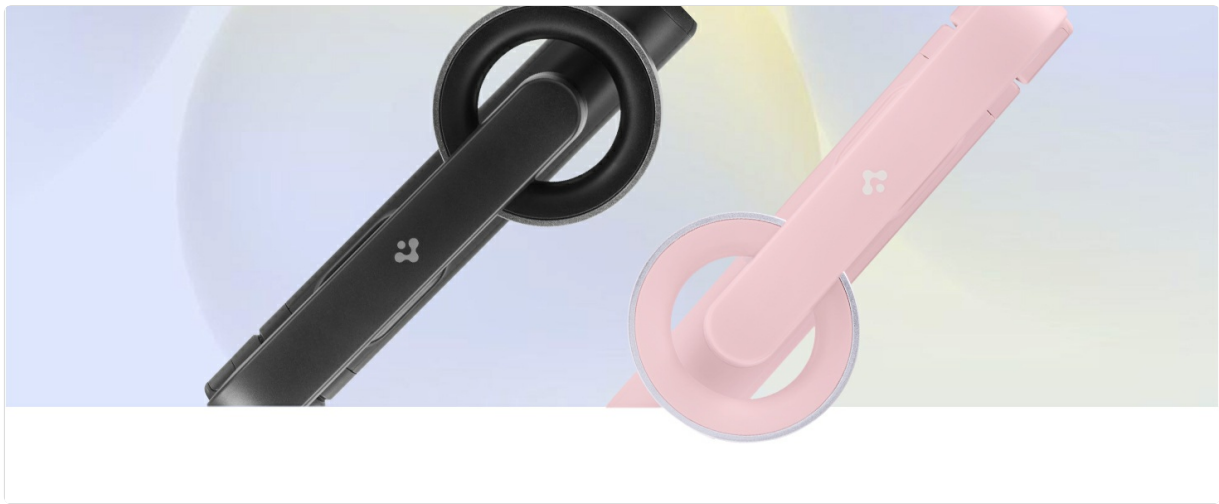 


Figure 3.2: Demonstrating the strong magnetic attachment of a MagSafe-compatible phone to the selfie stick.

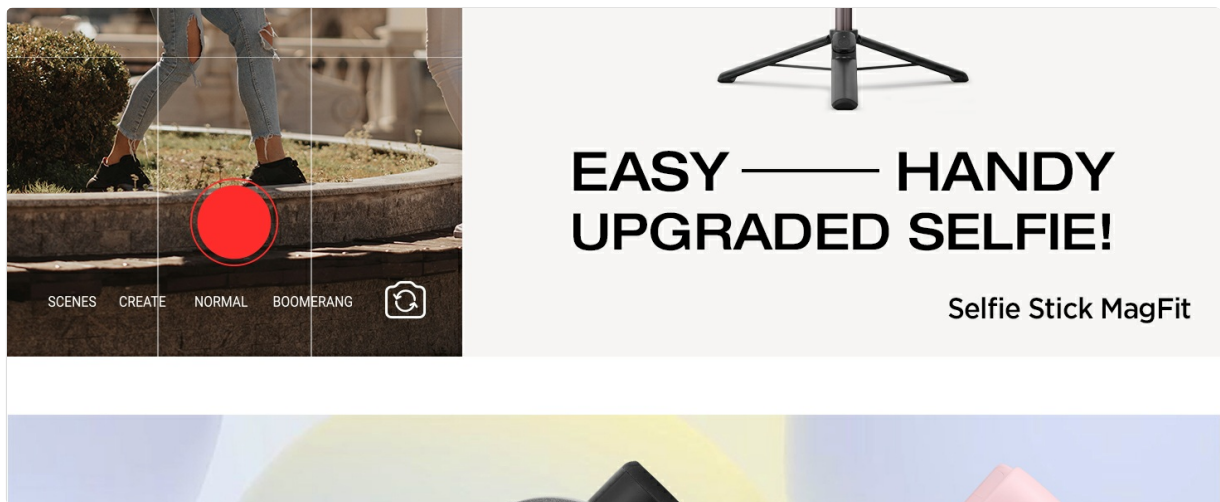 


Figure 3.3: Examples of MagSafe built-in devices and MagSafe cases compatible with the S570W.

## 4. OPERATING INSTRUCTIONS

### 4.1 Extending the Selfie Stick

1. Hold the handle firmly.
2. Gently pull the phone holder upwards to extend the telescopic arm.
3. Extend to your desired length, up to a maximum of 24.4 inches (620mm).

Durable with a Dual-braced tripod structure.

# Sturdy and Stable Selfie stick / Tripod.



Figure 4.1: The selfie stick fully extended, demonstrating its maximum length.

## 4.2 Using as a Tripod Stand

1. While holding the handle, gently push the bottom part of the handle outwards.
2. The three legs will unfold to form a stable tripod base.
3. Place the tripod on a flat, stable surface.
4. Adjust the telescopic arm to your desired height.



# Easy Shooting with Bluetooth Remote Control

Bluetooth Remote Control with USB-C Charging (Includes USB Charging Cable)



Figure 4.2: The sturdy tripod structure with dual-braced legs, anti-slip silicone pads, and aluminum auxiliary frame.

## 4.3 Using the Bluetooth Remote Control

1. Ensure the remote control is paired with your smartphone (refer to Section 3.2).
2. Open your smartphone's camera application.
3. Press the button on the remote control to capture a photo or start/stop video recording.
4. The remote operates effectively up to 10 meters (33 feet) away.

## 4.4 Adjusting the Phone Holder Angle

The phone holder can be rotated to achieve various shooting angles.

- Gently rotate the magnetic phone holder to adjust the angle.
- The holder supports rotation up to 180 degrees for flexible positioning.

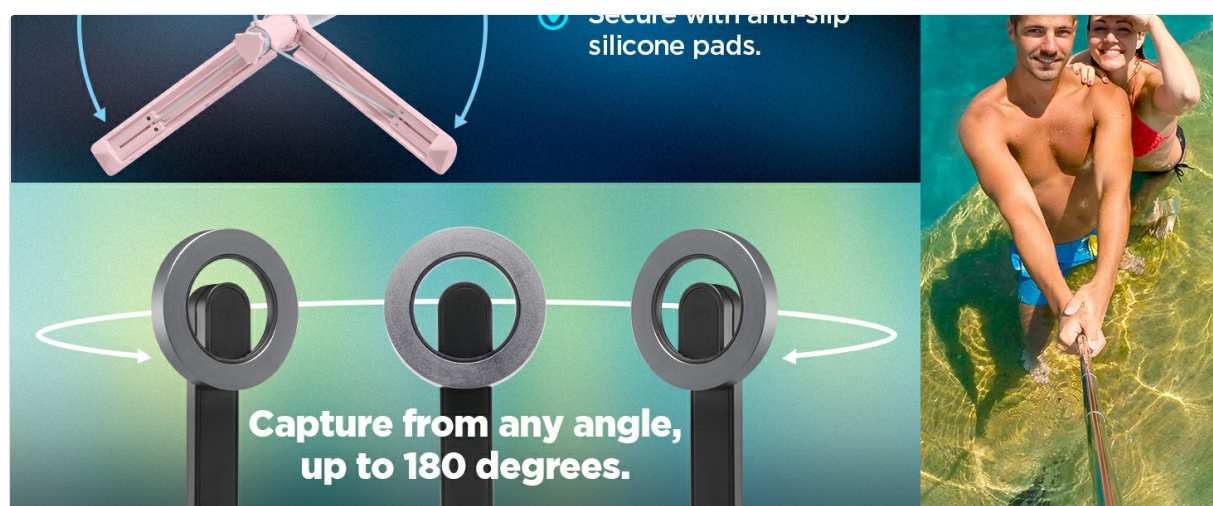 


Figure 4.3: The phone holder can be rotated to capture images from various angles.

## 5. MAINTENANCE

- **Cleaning:** Wipe the selfie stick and remote control with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the tripod legs are folded and the telescopic arm is retracted for compact storage.
- **Battery Care:** Recharge the remote control regularly, even if not in frequent use, to maintain battery

health.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not pairing.	Remote battery low; Bluetooth not enabled on phone; remote not in pairing mode; interference.	Charge the remote control. Ensure Bluetooth is enabled on your phone. Turn the remote off and on again to re-enter pairing mode. Move closer to the phone.
Remote control not taking photos/videos.	Not paired; camera app not open; remote out of range.	Verify successful pairing. Open your phone's camera app. Ensure the remote is within 10 meters of the phone.
Phone not securely attaching to holder.	Phone/case not MagSafe compatible; foreign objects on magnetic surface.	Ensure your phone or case is MagSafe compatible. Clean the magnetic surface of both the phone/case and the holder.
Tripod feels unstable.	Uneven surface; legs not fully extended/locked; excessive weight.	Place the tripod on a flat, stable surface. Ensure all three legs are fully extended and locked into position. Do not exceed the recommended weight limit (6.6 lbs).

## 7. SPECIFICATIONS

Model Number	S570W (AMP06402)
Product Dimensions (Folded)	6.58 x 2.39 x 2.11 inches
Item Weight	5.8 ounces (164 Grams)
Maximum Height	24.4 inches (620 Millimeters)
Minimum Height	6.57 inches (167.02 Millimeters)
Weight Limit	6.6 Pounds
Bluetooth Version	5.0
Remote Control Range	Up to 10 meters
Battery Type	1 Lithium Ion battery (included)
Special Features	Lightweight, Portable, Adjustable, Remote Control, Slip Resistant, MagSafe Compatible
Compatible Devices	iPhone 12 series and newer, Pixel 10 series, MagSafe Compatible Cases for Galaxy S25, S24, Z Fold 7, Z Flip 7 Series, and more.



## 8. WARRANTY AND SUPPORT

---

Spigen products are designed for quality and durability. For specific warranty information, please refer to the warranty card included with your product or visit the official Spigen website.

For technical support, troubleshooting assistance, or inquiries regarding your Spigen S570W Selfie Stick Tripod Stand, please contact Spigen customer service through their official website or the contact information provided in your product packaging.

### Online Resources:

- Official Spigen Website: [www.spigen.com](http://www.spigen.com)