



[Manuals.plus](#) /

› [Aspes](#) /

› Aspes AL8200ED Washing Machine User Manual

Aspes AL8200ED

Aspes AL8200ED Washing Machine User Manual

Model: AL8200ED | Brand: Aspes

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using your washing machine. Keep it for future reference.

- Ensure the washing machine is properly installed and grounded before use.
- Do not allow children to play with or operate the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances.
- Always close the water tap after use.

2. PRODUCT OVERVIEW

The Aspes AL8200ED is a front-loading washing machine designed for efficient laundry care. It features an 8 kg capacity and a maximum spin speed of 1200 RPM.



Figure 2.1: Front view of the Aspes AL8200ED Washing Machine, showing the control panel, detergent dispenser, door, and service filter cover.

2.1. Control Panel

The control panel includes a program selector knob, function buttons, and a digital display for cycle information.

- **Program Selector Knob:** Used to select the desired wash program (e.g., Cotton, Synthetics, Delicates, Quick

Wash).

- **Temperature Button:** Adjusts the wash temperature.
- **Spin Speed Button:** Modifies the spin speed.
- **Start/Pause Button:** Initiates or pauses the selected program.
- **Display:** Shows remaining time, error codes, and selected options.

3. SETUP AND INSTALLATION

3.1. Unpacking

Carefully remove all packaging materials. Ensure all transit bolts are removed from the rear of the machine before operation. Failure to do so will cause damage.

3.2. Positioning

Place the washing machine on a firm, level surface. Adjust the leveling feet to ensure stability and prevent vibration during operation.

3.3. Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks. Position the drain hose into a standpipe or sink, ensuring it is securely fixed.

3.4. Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate of the appliance.

4. OPERATING INSTRUCTIONS

4.1. Before Each Wash

- Sort laundry by fabric type, color, and degree of soiling.
- Check pockets for small items.
- Load laundry into the drum, ensuring not to overload.
- Add appropriate detergent and fabric softener to the dispenser compartments.

4.2. Program Selection

1. Turn the program selector knob to choose the desired wash program.
2. Use the temperature and spin speed buttons to adjust settings if needed.
3. Press the Start/Pause button to begin the cycle.

4.3. Common Wash Programs

Program	Description	Typical Use
Cotton	For durable cotton items.	Towels, bed linen, shirts.
Synthetics	For synthetic or mixed fabrics.	Blouses, shirts, mixed garments.
Delicates	Gentle wash for delicate items.	Lingerie, silk, lace.

Program	Description	Typical Use
Quick Wash	Short cycle for lightly soiled items.	Lightly worn clothes.

5. MAINTENANCE AND CARE

5.1. Cleaning the Detergent Dispenser

Regularly clean the detergent dispenser drawer to prevent residue buildup. Remove the drawer and rinse it under running water.

5.2. Cleaning the Drum

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) periodically to clean the drum and remove odors.

5.3. Cleaning the Pump Filter

The pump filter should be cleaned regularly to prevent blockages. Locate the filter cover at the bottom front of the machine, open it, and carefully drain any residual water before unscrewing and cleaning the filter.

5.4. Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Start/Pause not pressed.	Check power supply; Close door firmly; Press Start/Pause.
Water not filling	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check water supply.
Excessive vibration	Transit bolts not removed; Machine not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry.
Water not draining	Drain hose kinked; Pump filter blocked.	Straighten hose; Clean pump filter.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	AL8200ED
Brand	Aspes
Capacity	8 kg

Feature	Specification
Max. Spin Speed	1200 RPM
Energy Class	E
Control Type	Pulsador (Button)
Material	Stainless Steel (Drum)
Product Weight	50 Kilograms

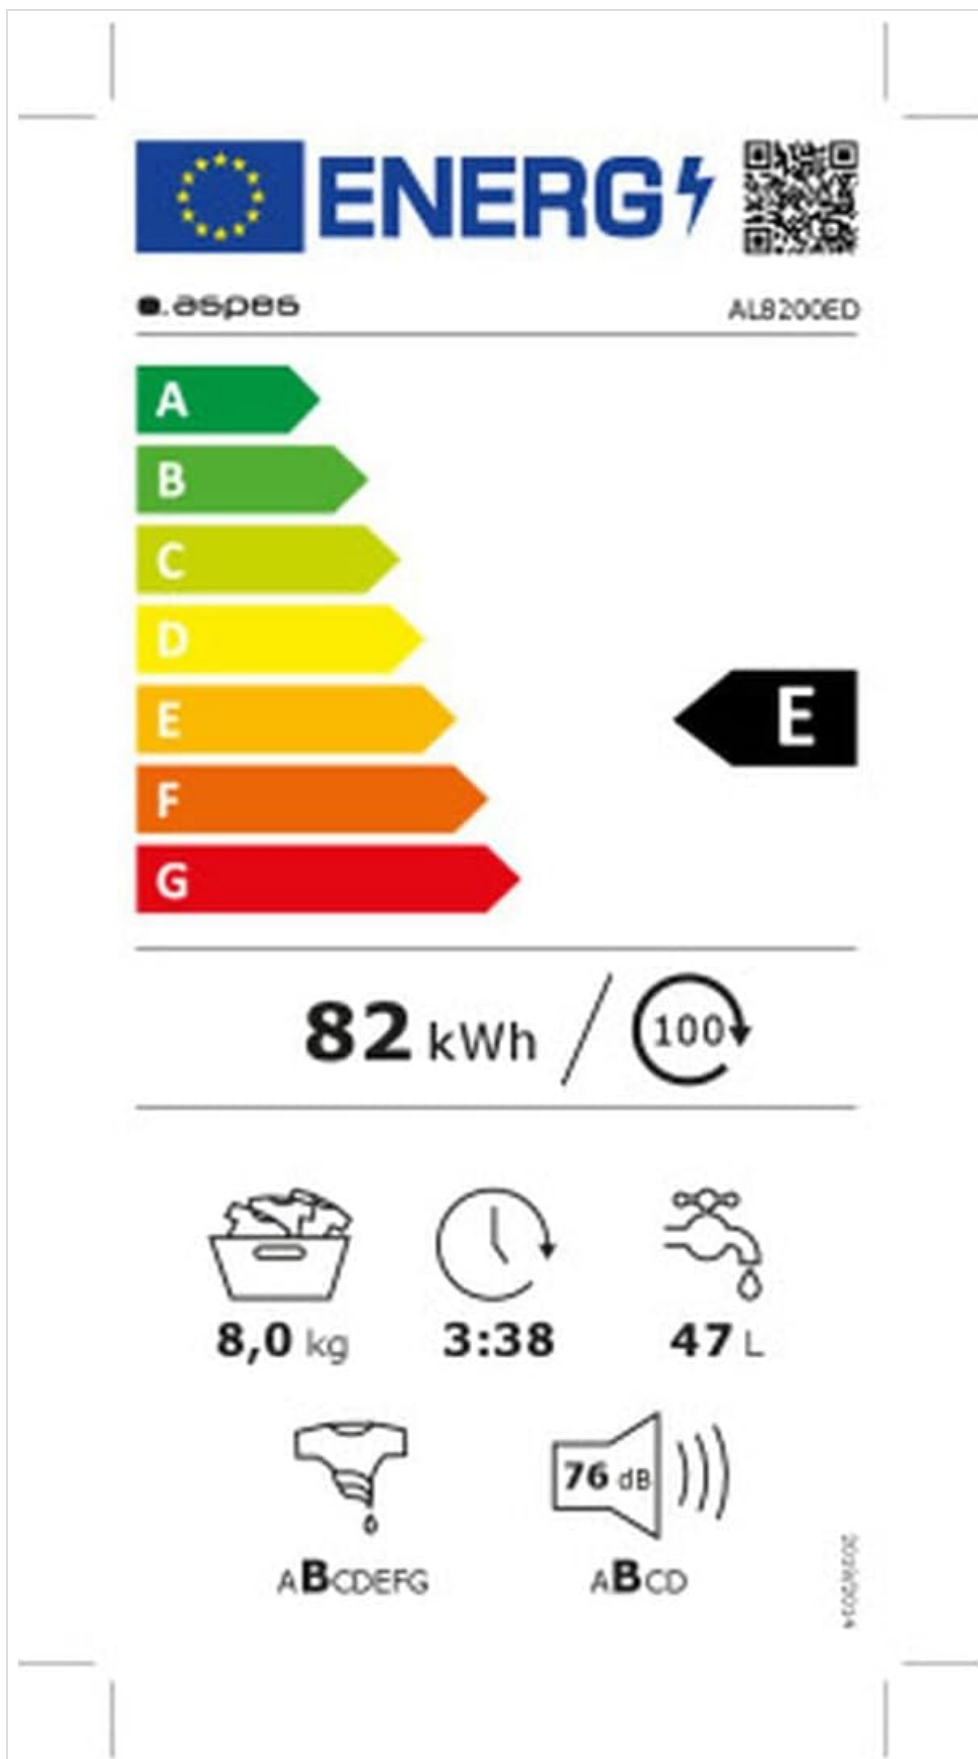


Figure 7.1: Energy efficiency label for the Aspes AL8200ED, showing energy class E, 82 kWh/100 cycles, 8.0 kg capacity, 3:38 cycle duration, 47 L water consumption, and 76 dB noise level.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Aspes website. Keep your purchase receipt as proof of purchase.

For technical assistance or spare parts, contact Aspes customer service.