

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ninja](#) /
- › [Ninja Combi All-in-One Multicooker, Oven, & Air Fryer Instruction Manual](#)

## Ninja SFP701

# Ninja Combi All-in-One Multicooker, Oven, & Air Fryer Instruction Manual

Model: SFP701 | Brand: Ninja

## INTRODUCTION

---

The Ninja Combi All-in-One Multicooker, Oven, & Air Fryer (Model SFP701) is a versatile kitchen appliance designed to simplify meal preparation. It combines multiple cooking functions, including multicooking, oven baking, and air frying, to deliver complete meals efficiently.

This appliance features revolutionary Ninja Combi Cooker Technology, which integrates HyperSteam and Air Fry functions to ensure food is juicy on the inside and crispy on the outside. With its 14-in-1 functionality, it aims to reduce kitchen clutter and streamline cooking processes.



Image: The Ninja Combi appliance, showcasing its sleek design and digital control panel. The interior shows food cooking on two levels, demonstrating its multi-tier cooking capability.

## INCLUDED COMPONENTS

---

The Ninja Combi SFP701 comes with the following components:

- Ninja Combi Multicooker Unit
- Combi Cooker Pan
- Bake Tray
- Crisper Tray
- Recipe Book (with 20 chef-created recipes and cooking charts)



## Included accessories

Comes with a bake tray, crisper plate, and Combi Cooker Pan, which doubles as a serving dish.

Image: A visual representation of the included accessories: the Combi Cooker Pan, Crisper Plate, and Bake Tray, demonstrating how they fit within the unit.

### SETUP

---

Before first use, ensure all packaging materials are removed from the unit and its accessories. Place the Ninja Combi on a clean, dry, and level surface. Ensure there is adequate clearance around the unit for proper ventilation, especially from the rear exhaust vent.

Wash the Combi Cooker Pan, Bake Tray, and Crisper Tray with warm, soapy water, then rinse and dry thoroughly. Wipe the exterior of the main unit with a damp cloth.

Plug the appliance into a grounded electrical outlet. The unit is now ready for operation.

### OPERATING INSTRUCTIONS

---

The Ninja Combi offers 14 versatile cooking functions, accessible via the control panel. Refer to the included recipe book

and cooking charts for specific guidance on various food types and functions.

## Understanding the Control Panel



# 14-in-1 functionality

Create thousands of different meals,  
including pasta and rice dishes, all in one cooker.

Image: A detailed view of the Ninja Combi's control panel, highlighting the function selection buttons and the digital display for temperature and time settings.

- **Power Button:** Turns the unit on or off.
- **Function Selection:** Use the up/down arrows to cycle through the available cooking functions.
- **Temperature/Time Adjustment:** Use the dedicated buttons to set desired temperature and cooking duration.
- **Start/Stop Button:** Initiates or pauses the cooking cycle.

## Cooking Functions Overview

The Ninja Combi features two main cooking zones: Combi Cooker and Air Fry/Stovetop. Each zone offers specific functions:

Combi Cooker Functions	Air Fry / Stovetop Functions
Combi Meals	Air Fry
Combi Crisp	Bake
Combi Bake	Broil
Rice/Pasta	Pizza
Steam	Toast
Proof	Sear/Sauté
Sous Vide	Slow Cook

## Key Features in Operation

- **Complete Meals in 15 Minutes:** The Combi Meals function allows for simultaneous cooking of proteins, vegetables, and grains, significantly reducing cooking time.
- **Ninja Combi Cooker Technology:** This technology combines HyperSteam for juicy interiors and Air Fry for crispy exteriors.



## Ninja Combi™ Cooker Technology

HyperSteam and Air Fry combine to create juicy insides and deliciously crispy outsides—all at once.

Image: An internal diagram of the Ninja Combi, showing the airflow for Air Fry and steam distribution for HyperSteam, explaining how these technologies work together.

- **Frozen to Table:** The HyperSteam function can rapidly thaw and cook frozen ingredients to a safe temperature in under 30 minutes, eliminating the need for prior defrosting.



## Never defrost again

Go from frozen to table in under 30 minutes. HyperSteam rapidly thaws and cooks food to a safe temperature, while Air Fry crisps food to perfection.

Image: The Ninja Combi in use, with a user removing cooked food, illustrating the convenience of cooking directly from frozen.

- **Family-Sized Capacity:** The unit is designed to accommodate meals for up to 8 people, fitting items like a 6-lb roast chicken, 2 lbs of fries, or 1.5 boxes (24 oz) of pasta.



MULTICOOKER



OVEN



AIR FRYER



## One cooker does it all

Make all your favorites or create new recipes,  
all with one cooker.

Image: A whole roast chicken being cooked inside the Ninja Combi, highlighting its spacious interior suitable for family-sized meals.

### Official Product Video

Watch this official product overview video for a visual guide on using your Ninja Combi.

Your browser does not support the video tag.

Video: A comprehensive product overview demonstrating the features and ease of use of the Ninja Combi Multicooker.

### MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Ninja Combi. Always unplug the unit and allow it to cool completely before cleaning.

- **Accessories:** The Combi Cooker Pan, Bake Tray, and Crisper Tray are dishwasher safe for easy cleanup. For stubborn food residue, soak in warm, soapy water before washing.
- **Interior:** Wipe the interior of the unit with a damp cloth after each use, especially after using steam functions, to prevent residue buildup and odors. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.

- **Drip Tray:** The unit has a fixed drip tray. To clean, absorb any accumulated liquid with a dry towel or paper towels.



## Replaces your countertop oven

Cook up to a 6-lb whole chicken, 10" pizza,  
or a 5-lb roast.

Image: The Combi Cooker Pan, Bake Tray, and Crisper Tray placed in a dishwasher, emphasizing their dishwasher-safe design for convenient cleaning.

### TROUBLESHOOTING

---

If you encounter issues with your Ninja Combi, refer to the following common troubleshooting tips:

- **Unit Not Turning On:** Ensure the power cord is securely plugged into a grounded electrical outlet. Check if the outlet is functional by plugging in another appliance.
- **Food Not Cooking Evenly:** Ensure the correct cooking function and temperature are selected. For Combi Meals, stir or rotate food halfway through the cooking cycle if necessary. Do not overcrowd the trays.
- **"ADD POT" Error:** This error may indicate that the Combi Cooker Pan is not properly seated or detected. Ensure the pan is correctly placed in the unit.
- **Smoke or Odor During First Use:** A slight odor or smoke may occur during the initial uses due to manufacturing

residues. This is normal and should dissipate quickly. Ensure adequate ventilation.

- **Excessive Steam/Moisture:** Ensure the unit is placed in a well-ventilated area. Some steam release is normal during operation, especially with steam-based functions.

For issues not covered here, consult the full product manual or contact Ninja customer support.

## SPECIFICATIONS

---

Specification	Detail
Brand	Ninja
Model Name	Ninja Combi™ All-in-One Multicooker, Oven, and Air Fryer Bundle
Item Model Number	SFP701
Product Dimensions	14.92"D x 15.43"W x 13.11"H
Item Weight	20.2 pounds
Color	Grey
Control Type	Knob
Power Source	AC adapter
UPC	622356604178

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your Ninja Combi or visit the official Ninja website. Keep your purchase receipt for warranty claims.

For additional support, you can visit the [Ninja Store on Amazon](#).