

## Severin KA 9315

# Severin KA 9315 Duo Filter Coffee Machine Instruction Manual

Model: KA 9315 | Brand: Severin

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. This manual provides essential information for the safe and efficient operation of your Severin KA 9315 Duo Filter Coffee Machine.

- Always connect the appliance to a properly installed earthed socket.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- This appliance is intended for household use only.
- Keep the appliance out of reach of children.
- Do not operate the appliance if it has been dropped, if there are visible signs of damage, or if it malfunctions.
- Unplug the appliance from the mains socket after use, before cleaning, and in case of malfunction.
- Surfaces of the appliance may become hot during operation. Avoid contact with hot parts.
- Only fill the water reservoir with cold, fresh water.
- Do not open the filter holder during the brewing process.

## 2. PRODUCT OVERVIEW

The Severin KA 9315 is a dual filter coffee machine designed for efficient and simultaneous preparation of coffee. It features two independent brewing systems, each capable of brewing up to 8 cups, making it suitable for larger households, offices, or events.



Image: Front view of the Severin KA 9315 Duo Filter Coffee Machine with two thermal jugs.

### Key Features:

- Simultaneous preparation of two 8-cup coffee batches.
- Two thermal jugs with practical brew-through lids to keep coffee hot.
- Two front water level indicators for convenient operation and clear overview.
- Integrated cable storage compartment for easy organization of the power cord.
- Automatic shut-off function for safety and energy saving.

### 3. COMPONENTS

Familiarize yourself with the various parts of your coffee machine:

- **Main Unit:** Houses the heating element, water reservoirs, and brewing mechanisms.
- **Water Reservoirs:** Two separate reservoirs, each with a water level indicator.
- **Filter Holders:** Two removable, pivotable filter holders for coffee grounds.
- **Thermal Jugs:** Two insulated jugs designed to keep coffee warm.
- **Brew-Through Lids:** Lids for the thermal jugs that allow coffee to brew directly into them.

- **On/Off Switches:** Two illuminated switches to control each brewing side independently.



Image: Top view of the coffee machine with both filter holders open, showing the internal structure.



Image: Close-up of one of the water level indicators, showing cup markings.



Image: One of the black thermal coffee jugs with a handle and lid.

## 4. SETUP

### 4.1 Unpacking and First Use

1. Remove all packaging materials and stickers from the appliance.
2. Clean the thermal jugs, filter holders, and lids with warm soapy water. Rinse thoroughly and dry.
3. Before brewing coffee for the first time, operate the machine with cold water only (without coffee grounds) for two full brewing cycles to clean the internal components.

### 4.2 Placement

- Place the coffee machine on a stable, level, and heat-resistant surface.
- Ensure there is sufficient space around the appliance for ventilation and to access the water reservoirs and filter holders.
- Do not place the appliance near hot surfaces or open flames.

### 4.3 Power Connection

- Ensure the voltage specified on the rating plate matches your local mains supply.
- Plug the power cord into a suitable earthed wall socket.

## 5. OPERATING INSTRUCTIONS

This section describes how to brew coffee using your Severin KA 9315.

1. **Fill Water Reservoir:** Open the lid of the desired water reservoir. Fill the reservoir with cold, fresh water up to the desired level indicated by the cup markings. Do not exceed the maximum fill line.



Image: A hand pouring water into one of the coffee machine's water reservoirs.

2. **Insert Filter and Coffee Grounds:** Pivot out the filter holder. Insert a standard paper filter (size 1x4) into the filter holder. Add the desired amount of ground coffee into the filter. As a general guideline, use approximately 6-7 grams of coffee per cup (125 ml). Pivot the filter holder back into place.



Image: A paper filter with ground coffee placed inside the pivotable filter holder.

3. **Place Thermal Jug:** Ensure the thermal jug, with its brew-through lid, is correctly positioned under the filter holder.
4. **Start Brewing:** Press the On/Off switch for the desired brewing side. The indicator light will illuminate, and the brewing process will begin.
5. **After Brewing:** Once the brewing cycle is complete, the appliance will automatically switch off. The thermal jug will keep the coffee warm for an extended period.
6. **Serving:** To pour coffee, press the lever on the jug's lid.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

### 6.1 Daily Cleaning

- Always unplug the appliance before cleaning.
- Remove the filter holders and thermal jugs. Wash them with warm soapy water, rinse thoroughly, and dry.
- Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaning agents.

## 6.2 Descaling

Depending on water hardness and frequency of use, descaling should be performed regularly (e.g., every 2-4 weeks). Use a commercially available descaling agent suitable for coffee machines and follow the manufacturer's instructions. After descaling, run two full brewing cycles with fresh water to rinse the appliance.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; On/Off switch not pressed; No water in reservoir.	Check power connection; Press On/Off switch; Fill water reservoir.
Coffee is too weak.	Too little coffee grounds; Coffee grounds too coarse.	Increase amount of coffee grounds; Use finer ground coffee.
Coffee overflows from filter.	Too much coffee grounds; Filter clogged; Jug not correctly placed.	Reduce coffee grounds; Clean filter holder; Ensure jug is correctly positioned.
Appliance leaks.	Water reservoir overfilled; Components not correctly assembled.	Do not exceed max fill line; Check all removable parts are securely in place.

## 8. SPECIFICATIONS

<b>Brand</b>	Severin
<b>Model Number</b>	9315
<b>Color</b>	Black
<b>Dimensions (L x W x H)</b>	25.5 x 39.5 x 36.6 cm
<b>Weight</b>	4.39 Kilograms
<b>Capacity</b>	16 Cups (2 x 8 cups)
<b>Power</b>	2000 Watts (2 x 1000W)
<b>Voltage</b>	220 Volts
<b>Material</b>	Plastic
<b>Special Feature</b>	Automatic Shut-off, Thermal Jugs
<b>Country of Origin</b>	China

## 9. WARRANTY AND SUPPORT

Severin products are manufactured to high-quality standards and are subject to strict quality controls. In the unlikely event of a defect, please contact your retailer or the official Severin customer service for assistance. Please retain your proof of purchase for warranty claims.

For further information, spare parts, or service inquiries, please visit the official Severin website or contact

their customer support directly.