

[manuals.plus](#) /

- > [Nokia](#) /
- > [Nokia C300 User Manual](#)

Nokia TA-1515

Nokia C300 User Manual

Model: TA-1515

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Nokia C300 smartphone. The Nokia C300 is designed for reliable performance, featuring a large 6.517-inch HD+ LCD screen, a versatile triple rear 13MP camera, and an 8MP front camera. It operates on Android 12 and is powered by an octa-core processor for efficient multitasking. The device features a durable polycarbonate body and toughened display glass.



Image: Front and back view of the Nokia C300 smartphone in Ocean Blue. The front displays the time and date, while the back shows the triple camera module and Nokia branding.

2. WHAT'S IN THE Box

Upon unboxing your Nokia C300, please ensure all the following items are present:

- Nokia C300 Smartphone
- USB Cable (Type-C)
- Power Adapter
- SIM Tray Ejector

- Quick Start Guide (separate document)
- Safety Booklet (separate document)



In the Box

Charger
Quick Start Guide
Safety Booklet
USB Type C Cable



Image: A visual representation of the Nokia C300 and its included accessories: a USB Type-C cable, a power adapter, and a SIM tray ejector tool.

3. SETUP

3.1 Inserting the SIM Card

1. Power off your Nokia C300.
2. Locate the SIM card tray on the side of the device.
3. Insert the SIM tray ejector tool into the small hole next to the tray and press gently until the tray pops out.
4. Place your Nano-SIM card(s) into the designated slot(s) on the tray, ensuring the gold contacts face downwards.
5. Carefully push the SIM tray back into the phone until it clicks into place.

3.2 Initial Power On and Setup

1. Press and hold the power button until the Nokia logo appears.
2. Follow the on-screen instructions to select your language, connect to a Wi-Fi network, and set up your Google account.
3. You will be prompted to transfer data from an old device, set up a screen lock, and review privacy settings.


3.3 Charging the Battery

Before first use, it is recommended to fully charge the device. Connect the USB cable to the phone's USB-C port and the power adapter, then plug the adapter into a wall outlet. The battery capacity is 4000 mAh, and a full charge typically takes approximately 3 hours.

4. OPERATING INSTRUCTIONS

4.1 Display and Navigation

The Nokia C300 features a 6.52-inch HD+ LCD V-notch display with a resolution of 1600 x 720 pixels and a 60 Hz refresh rate. Navigation is primarily touch-based, with on-screen gestures and a customizable navigation bar.

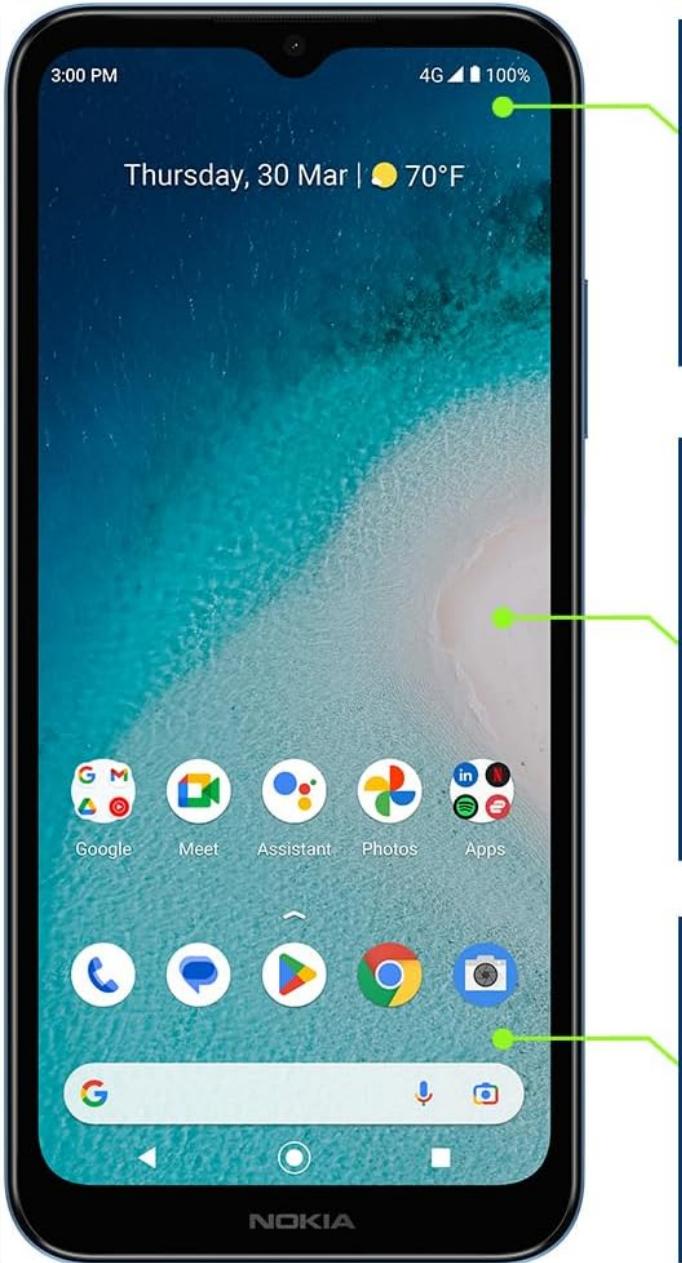

5G

4G Connectivity

Qualcomm® Snapdragon™
662 Mobile Platform



Memory & Storage

3 GB RAM, 32 GB Internal storage,
Single SIM

6.52

Edge-to-edge

6.517" HD+ LCD
V-notch display

Image: The Nokia C300's display showing the home screen with various app icons. Annotations highlight 4G connectivity, 3GB RAM/32GB internal storage, and the 6.52-inch HD+ LCD V-notch display.

4.2 Camera Features

The device is equipped with a triple rear camera system, featuring a 13MP main sensor, and an 8MP front-facing camera. Key camera functionalities include:

- **Portrait Mode:** For creating images with a blurred background effect.
- **Night Imaging:** Enhances photo quality in low-light conditions.
- **Video Recording:** Capture videos using both front and rear cameras.



13 MP triple-rear camera

8 MP front-facing camera,
portrait mode and powerful
night imaging



Image: A detailed view of the Nokia C300's triple-rear camera setup, highlighting the lenses and flash module.

4.3 Battery Management

The Nokia C300 is designed for extended use, offering up to 2-day battery life on a single charge. To optimize battery performance:

- Enable **Battery Saver** mode when the battery level is low.
- Utilize **Adaptive Battery** to limit battery usage for infrequently used apps.
- Reduce screen brightness and shorten screen timeout duration.
- Turn off Wi-Fi, Bluetooth, and GPS when not in use.



Image: The Nokia C300's battery settings screen, displaying options like Battery Saver, Super Battery Saver, and Adaptive Battery, with the battery level at 100%.

4.4 Connectivity

The Nokia C300 supports 4G connectivity and is universally compatible with major US carriers including AT&T, Verizon, T-Mobile, Boost, Cricket, H2O Wireless, Metro, Mint, Net10, and Tracfone. It also features Bluetooth and Wi-Fi for wireless connections.



T Mobile

metro
by T Mobile



cricket

**Consumer
Cellular**

verizon



Universal Carrier Compatibility*

*Compatible with GSM networks.

Image: The Nokia C300 smartphone displayed with logos of various compatible mobile network providers, emphasizing its universal carrier compatibility.

4.5 Software and Performance

The Nokia C300 comes pre-installed with the full version of Android 12, offering enhanced performance and security features. It is powered by a Qualcomm Snapdragon 662 Mobile Platform octa-core processor and includes 3GB of RAM for smooth multitasking.



Latest Android™ 12

Faster and more secure
performance.

Image: A close-up of the Nokia C300's screen, highlighting the Android 12 operating system and its benefits for performance and security.

5. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to *Settings > System > System update*
- **Storage Management:** Periodically clear unnecessary files and apps to free up internal storage (32GB) and maintain device speed. The device supports expandable memory up to 512GB via a microSD card (sold separately).
- **Environmental Conditions:** Avoid exposing the phone to extreme temperatures, direct sunlight, or excessive moisture.

6. TROUBLESHOOTING

6.1 Device Not Powering On

- Ensure the battery is charged. Connect the phone to the charger and wait a few minutes before attempting to power on.
- Perform a forced restart by holding the power button for approximately 10-15 seconds.

6.2 Poor Network Signal

- Check if your SIM card is correctly inserted.
- Move to an area with better network coverage.
- Restart the phone.
- Verify with your carrier that your plan is active and there are no service outages in your area.

6.3 Apps Crashing or Slow Performance

- Close background applications.
- Clear the cache of problematic apps (*Settings > Apps > [App Name] > Storage > Clear cache*).
- Ensure you have sufficient free storage space.
- Restart the device.

6.4 Screen Unresponsive

- Perform a forced restart.
- Ensure the screen is clean and free of moisture or debris.

7. SPECIFICATIONS

Feature	Specification
Model Name	C300
Item Model Number	TA-1515
Operating System	Android 12.0
Processor	Qualcomm Snapdragon 662 Mobile Platform (Octa-core, 1.9 GHz)
RAM	3 GB
Internal Storage	32 GB
Expandable Memory	Up to 512 GB (via microSD card)
Screen Size	6.52 Inches (6.517" HD+ LCD V-notch display)
Resolution	1600 x 720
Refresh Rate	60 Hz
Rear Camera	13 MP Triple Camera
Front Camera	8 MP
Battery Capacity	4000 mAh (Lithium Polymer)
Phone Talk Time	12 Hours

Charging Time	Approximately 3 Hours
Connectivity	4G, Bluetooth, USB (Type-C), Wi-Fi, GPS
Audio Jack	3.5 mm
Dimensions	6.56 x 3.02 x 0.34 inches
Weight	6.7 ounces
Color	Ocean Blue

8. WARRANTY AND SUPPORT

Your Nokia C300 smartphone is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Nokia website for detailed terms and conditions, including warranty duration and coverage specifics.

For technical support, software updates, or further assistance, please visit the official Nokia support website or contact their customer service. Keep your proof of purchase handy when seeking support.

© 2023 Nokia. All rights reserved.

Related Documents - TA-1515

<p>NOKIA</p> <p>Nokia C300 User Guide</p> <p><small>Issue 2023-09-29 Rev 00</small></p>	<p><u>Nokia C300 User Guide: Setup, Features, and Safety</u></p> <p>Comprehensive user guide for the Nokia C300 smartphone from HMD Global. Learn about setup, security, personalization, connectivity, apps, and essential safety information.</p>
<p>NOKIA</p> <p>Nokia C300 Buku Petunjuk</p> <p><small>Edisi DSK 001 11-09-2023</small></p>	<p><u>Panduan Pengguna Nokia C300: Panduan Lengkap untuk Ponsel Anda</u></p> <p>Temukan cara menggunakan Nokia C300 Anda dengan panduan pengguna ini. Pelajari tentang pengaturan, fitur, kamera, konektivitas, dan informasi keselamatan.</p>

<p>NOKIA</p> <p>Nokia C300 User Guide</p> <p>Issue 2023-08-19 en-GB</p>	<p>Nokia C300 User Guide: Setup, Features, and Safety Information</p> <p>Comprehensive user guide for the Nokia C300 smartphone. Learn how to set up your device, use its features, connect to networks, manage apps, and understand important safety information provided by HMD Global.</p>
 <p>NOKIA</p> <p>Nokia C300 User Guide</p> <p>Issue 2023-08-19 en-GB</p>	<p>Nokia C300 Get Started Guide and Safety Information</p> <p>Comprehensive guide for the Nokia C300 smartphone, covering initial setup, SIM card insertion, battery charging, device care, and essential safety information from HMD Global.</p>
<p>NOKIA</p> <p>Nokia C300 User Guide</p> <p>Issue 2023-08-01 en-GB</p>	<p>Nokia C300 User Guide: Comprehensive Guide to Setup, Features, and Safety</p> <p>Explore the Nokia C300 smartphone with this detailed user guide. Learn about device setup, essential functions like calls and messaging, internet connectivity, security features, battery optimization, and important safety information from HMD Global.</p>
<p>NOKIA</p> <p>Nokia C300 Manuale d'uso</p> <p>Version 2023-08-01 it-IT</p>	<p>Manuale Utente Nokia C300: Guida Completa e Funzionalità</p> <p>Scopri tutte le funzionalità del tuo smartphone Nokia C300 con questo manuale utente completo. Trova istruzioni dettagliate su configurazione, fotocamera, connessioni, sicurezza e molto altro.</p>