

[Manuals.plus](#) /

› [Ikea](#) /

› BILLY Bookcase User Manual

Ikea 905.220.38

BILLY Bookcase User Manual

Model: 905.220.38

PRODUCT OVERVIEW

The IKEA BILLY Bookcase, model 905.220.38, is a versatile and space-efficient storage unit designed for various living spaces. Its shallow depth allows for effective utilization of wall space, making it ideal for organizing smaller items in compact areas. The bookcase features adjustable shelves, providing flexibility to customize storage according to the size of your items.



This image displays the white IKEA BILLY Bookcase, model 905.220.38, from a front-facing perspective. The bookcase features a minimalist design with three internal shelves, two of which are adjustable. The side panels show multiple pre-drilled holes for shelf pin placement, allowing for flexible shelf height configuration. The unit has a shallow depth, making it suitable for various spaces.

The bookcase comes in a white finish and has overall dimensions of 40 cm (width) x 28 cm (depth) x 106 cm (height). Each shelf has a maximum load capacity of 14 kg.

SPECIFICATIONS

Attribute	Detail
Model Number	905.220.38
Color	White
Dimensions (W x D x H)	40 cm x 28 cm x 106 cm

Maximum Load per Shelf	14 kg
Number of Adjustable Shelves	2 (additional shelves can be added)
Mounting Type	Floor Mount
Primary Materials	Particleboard, Paper foil, Plastic edge, Fiberboard
Package Weight	14.35 kg
ASIN	B0C941TBVC

SETUP

Assembly of the BILLY Bookcase is required. Please follow the detailed instructions provided in the separate assembly guide that came with your product package. Ensure all components are present before beginning assembly.

Wall Attachment

For safety and stability, it is crucial to secure the bookcase to the wall. The type of screws required for wall attachment varies depending on your wall material (e.g., drywall, concrete, wood studs). **Specific mounting screws are not included** with the product. Please purchase and use screws and wall plugs appropriate for your specific wall type to ensure secure installation.

Always consult a professional if you are unsure about the correct wall attachment method for your home.

OPERATING INSTRUCTIONS

Adjusting Shelves

The BILLY Bookcase includes two adjustable shelves. To adjust a shelf's position:

1. Remove any items from the shelf you wish to move.
2. Carefully lift the shelf and remove the shelf pins from their current holes.
3. Insert the shelf pins into the desired new set of holes on both side panels, ensuring they are level.
4. Place the shelf back onto the pins, ensuring it is securely seated.

You can add additional BILLY shelves (sold separately) to further customize your storage space.

Attaching Doors (Optional)

The BILLY Bookcase is designed to allow for the attachment of compatible BILLY doors (sold separately). Doors can be chosen from various colors and designs to match your decor. Refer to the specific door assembly instructions for proper installation.

MAINTENANCE

To keep your BILLY Bookcase in optimal condition, follow these maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth and a mild cleaner. Then wipe dry with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or chemical polishes, as these can damage the surface finish.
- **Load Capacity:** Do not exceed the maximum load capacity of 14 kg per shelf to prevent damage or collapse. Distribute weight evenly.

- **Environmental Conditions:** Avoid placing the bookcase in direct sunlight or near heat sources, which can cause material degradation or discoloration over time.

TROUBLESHOOTING

If you encounter issues with your BILLY Bookcase, consider the following common solutions:

- **Instability/Wobbling:** Ensure the bookcase is securely attached to the wall using appropriate hardware. Check that all assembly screws are tightened. Verify that the floor is level; use furniture glides or shims if necessary.
- **Shelf Sagging:** This usually indicates overloading. Reduce the weight on the shelf and redistribute items. Ensure the shelf pins are fully inserted into the support holes.
- **Missing Parts:** If any parts were missing upon unboxing, refer to the assembly manual for a parts list and contact IKEA customer service for assistance.

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or additional product support, please refer to the documentation provided at the time of purchase or visit the official IKEA website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact IKEA customer service directly through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0C941TBVC>

More documents and user manuals: <https://manuals.plus/>