

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Oskar XL Changing Table Instruction Manual - White, Model 14710

Vicco 14710

Vicco Oskar XL Changing Table Instruction Manual

MODEL: 14710 - WHITE, 143 x 100 CM



Your guide to assembly, use, and care.

INTRODUCTION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your Vicco Oskar XL Changing Table. This changing unit, featuring a spacious changing surface and integrated drawers, is designed for convenience in your nursery. Please read this manual thoroughly before assembly and use, and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Important! Retain for future reference. Read carefully!

Do not leave the child unattended. If the furniture tips over, it can cause serious or fatal injuries. Therefore, anchor the furniture to the wall. Use fasteners suitable for your home's walls. All fasteners must always be sufficiently tightened and checked regularly. Follow each step of the instructions carefully. The upper level of bunk beds is not suitable for children under 6 years of age due to the risk of falling. Avoid attaching additional hooks or handles to all children's beds where children could get caught. Ensure that the distance between the bed and the wall prevents children from getting trapped. To increase safety in the crib area, always choose a mattress of the same size to prevent slipping. For changing tables, ensure you choose a changing pad suitable for the size of the changing unit and that offers sufficient protective edges. For any questions about fasteners, contact your trusted specialized retailer. Spare parts must be requested from the manufacturer or supplier. Do not use the item if it is defective. Changing tables can be used up to a weight of 11 kg and for approximately 2 years. Please avoid the danger of open flames and other sources of intense heat in the immediate vicinity of the changing table, such as electric radiators, gas stoves, etc.

SETUP AND ASSEMBLY

Assembly of the Vicco Oskar XL Changing Table is required. Please refer to the separate, detailed assembly instructions included with your product for step-by-step guidance. Ensure all components are present before beginning assembly.

- **Tools Required:** A screwdriver and a level are recommended for proper assembly.
- **Part Identification:** Carefully identify each panel and hardware piece before assembly. Some parts may be numbered or labeled.
- **Wall Anchoring:** As a critical safety measure, the changing table must be securely anchored to a wall using the provided hardware. Select appropriate fasteners for your wall type.
- **Fastener Tightness:** Ensure all screws and fasteners are tightened sufficiently but do not overtighten. Regularly check their tightness.



Image: Overview of the changing table structure, illustrating its various sections and drawers.



Image: The removable changing top, showing how it detaches from the main unit for versatile use.

OPERATING INSTRUCTIONS

The Vicco Oskar XL Changing Table is designed for safe and convenient diaper changing and storage.

- **Changing Surface:** Place a suitable changing pad (not included) on the designated changing surface. Ensure the pad fits securely and has protective edges. The changing surface is suitable for children up to 11 kg (approximately 2 years of age).
- **Storage Drawers:** Utilize the three spacious drawers for storing diapers, wipes, clothing, and other baby essentials.
- **Side Compartments:** The open side compartments provide additional storage for frequently used items, keeping them within easy reach.
- **Child Supervision:** Always keep your child supervised while on the changing table. Never leave a child unattended.



Image: The changing table in a typical nursery environment, showcasing its functional design.



Image: The changing table with its three drawers fully extended, demonstrating storage capacity.

MAINTENANCE

Proper maintenance ensures the longevity and safety of your changing table.

- **Cleaning:** The changing table is made from easy-to-clean material. Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Fastener Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain structural integrity.
- **Environmental Conditions:** Avoid placing the changing table near direct heat sources or in areas with extreme humidity fluctuations, which can affect the wood material.

TROUBLESHOOTING

If you encounter any issues with your Vicco Oskar XL Changing Table, refer to the following common solutions:

- **Drawers Not Sliding Smoothly:** Ensure the drawer runners are correctly installed and aligned. Check for any obstructions within the drawer tracks. Verify that the drawer boxes are assembled squarely.
- **Difficulty During Assembly:** Re-read the assembly instructions carefully, paying close attention to diagrams and part numbers. Ensure all parts are correctly oriented before tightening fasteners. Do not force components together.
- **Wobbling or Instability:** Confirm that all fasteners are securely tightened. Ensure the unit is placed on a flat, level surface. Verify that the wall anchoring is correctly installed and secure.
- **Missing or Damaged Parts:** If any parts are missing or damaged upon receipt, do not proceed with assembly. Contact the manufacturer or supplier for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Vicco
Model	14710
Color	White
Product Dimensions (L x W x H)	143 cm x 70 cm x 100 cm
Item Weight	66.9 Kilograms
Furniture Finish	Wood
Assembly Required	Yes
Maximum Changing Weight	11 kg (approx. 2 years)

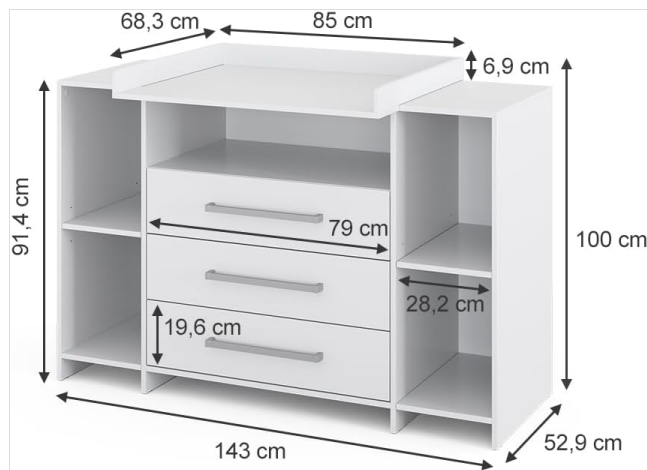


Image: Detailed dimensional drawing of the changing table, showing all key measurements.

WARRANTY AND SUPPORT

For any questions regarding your Vicco Oskar XL Changing Table, including inquiries about replacement parts or technical support, please contact the manufacturer or your trusted retailer. Please retain your proof of purchase for any warranty claims or support requests.

You can visit the official Vicco store for more information: [Vicco Store on Amazon](#)

© 2023 Vicco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C96T8H1X>

More documents and user manuals: <https://manuals.plus/>