

- Manuals.plus /
- > [Vicco](#) /
 - > Vicco Oskar Changing Table User Manual

Vicco Oskar (40347)

Vicco Oskar Changing Table Instruction Manual

Model: Oskar (40347)
Brand: Vicco

1. PRODUCT OVERVIEW

The Vicco Oskar Changing Table is a practical and stylish furniture piece designed to facilitate comfortable and safe diaper changes for infants. It features a spacious changing surface, three integrated drawers, and open shelving for convenient storage of baby essentials. Its optimal design ensures it blends well into any home environment.



Figure 1.1: The Vicco Oskar Changing Table in a typical nursery setup, showcasing its functional design with open shelves and drawers.

2. SAFETY INFORMATION

Important: Please read carefully and retain for future reference. Never leave your child unattended on the changing table.

- **Tip-Over Hazard:** Serious or fatal injuries can occur from furniture tip-overs. This furniture piece **must be anchored to the wall**. Use fastening hardware suitable for your home's walls.
- **Fasteners:** All assembly fasteners should always be adequately tightened and regularly checked for security.
- **Assembly Steps:** Follow each step of the manual carefully during assembly.
- **Entrapment Risk:** Avoid attaching additional hooks or handles to any children's beds where children could get caught. Ensure the distance between the bed and wall prevents entrapment.
- **Changing Pad:** For added safety, always choose a mattress/changing pad of the same size to prevent slipping. Ensure a suitable changing pad that matches the dimensions of the changing attachment and provides sufficient

protective edges.

- **Defects:** Do not use the item if there is any defect.
- **Weight and Age Limit:** The changing table is designed for use up to a weight of 11 kg and approximately 2 years of age.
- **Heat Sources:** Avoid the risk of open flames and other strong heat sources in the immediate vicinity of the changing unit, such as electric heaters, gas-heated ovens, etc.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Changing Table Unit
- Changing Attachment (removable top)
- Assembly Instructions (this manual)
- Assembly Hardware (screws, dowels, etc.)

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the detailed steps provided in the included assembly guide. It is recommended to have two people for assembly to ensure safety and ease of construction.

1. **Unpack Components:** Carefully unpack all parts and lay them out on a clean, soft surface to prevent scratches. Identify each component using the parts list in the separate assembly guide.
2. **Assemble Frame:** Begin by assembling the main frame of the changing table according to the diagrams. Ensure all connections are secure but do not overtighten screws until the unit is fully assembled.
3. **Install Drawers:** Assemble the drawer boxes and install the drawer slides onto both the drawers and the main frame. Insert the drawers into their designated slots.
4. **Attach Changing Attachment:** Secure the changing attachment to the top of the main unit. This piece is designed to be removable for extended use of the dresser.
5. **Wall Anchoring:** This is a critical safety step. Securely anchor the changing table to a wall using the provided anti-tip hardware. Choose appropriate wall plugs for your wall type (e.g., drywall, concrete).



Figure 4.1: The removable changing attachment shown above the dresser, illustrating how it can be detached for future use as a standard chest of drawers.



Figure 4.2: View of the changing table with all three drawers pulled out, demonstrating the ample storage space for baby essentials.

5. USAGE

The Vicco Oskar Changing Table is designed for ease of use and convenience during diaper changes.

- **Changing Surface:** Place a suitable changing pad (not included) on the top surface within the raised edges of the changing attachment. Always ensure the pad fits snugly.
- **Storage:** Utilize the three spacious drawers and open side shelves to organize diapers, wipes, creams, clothing, and other baby care items. Keep frequently used items within easy reach but out of the baby's grasp.
- **Post-Infant Use:** Once your child outgrows the need for a changing table (typically around 2 years or 11 kg), the changing attachment can be removed, converting the unit into a standard chest of drawers for continued use in a child's room or elsewhere.



Figure 5.1: The changing table fully stocked with baby items, demonstrating its practical storage solutions with both open shelves and accessible drawers.

6. MAINTENANCE

To ensure the longevity and appearance of your Vicco Oskar Changing Table, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a dry cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth to prevent moisture damage. Avoid abrasive cleaners or harsh chemicals.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain structural integrity and safety.
- **Avoid Moisture:** Protect the furniture from excessive moisture and direct sunlight, which can cause warping or discoloration.

7. TROUBLESHOOTING

If you encounter any issues with your changing table, consider the following common solutions:

- **Wobbly Unit:** Ensure all assembly screws are fully tightened. Verify that the unit is placed on a flat, level surface. If necessary, use furniture glides or shims to stabilize.
- **Drawers Not Sliding Smoothly:** Check that the drawer slides are correctly installed and aligned. Ensure no debris is obstructing the slides. Lubricate with a silicone spray if needed.

- **Missing Parts:** If you discover missing parts during assembly, refer to the package contents section and contact customer support for replacements. Do not attempt to substitute parts.

8. SPECIFICATIONS

Feature	Detail
Model Name	Oskar
Model Number	40347
Dimensions (L x W x H)	143 cm x 70 cm x 100 cm (56.3 x 27.6 x 39.4 inches)
Material	Composite Wood
Color	White/Sonoma
Number of Drawers	3
Weight Capacity (Changing Surface)	11 kg (24.25 lbs)
Recommended Age	Up to approx. 2 years
Assembly Required	Yes
Care Instructions	Wipe with a dry cloth

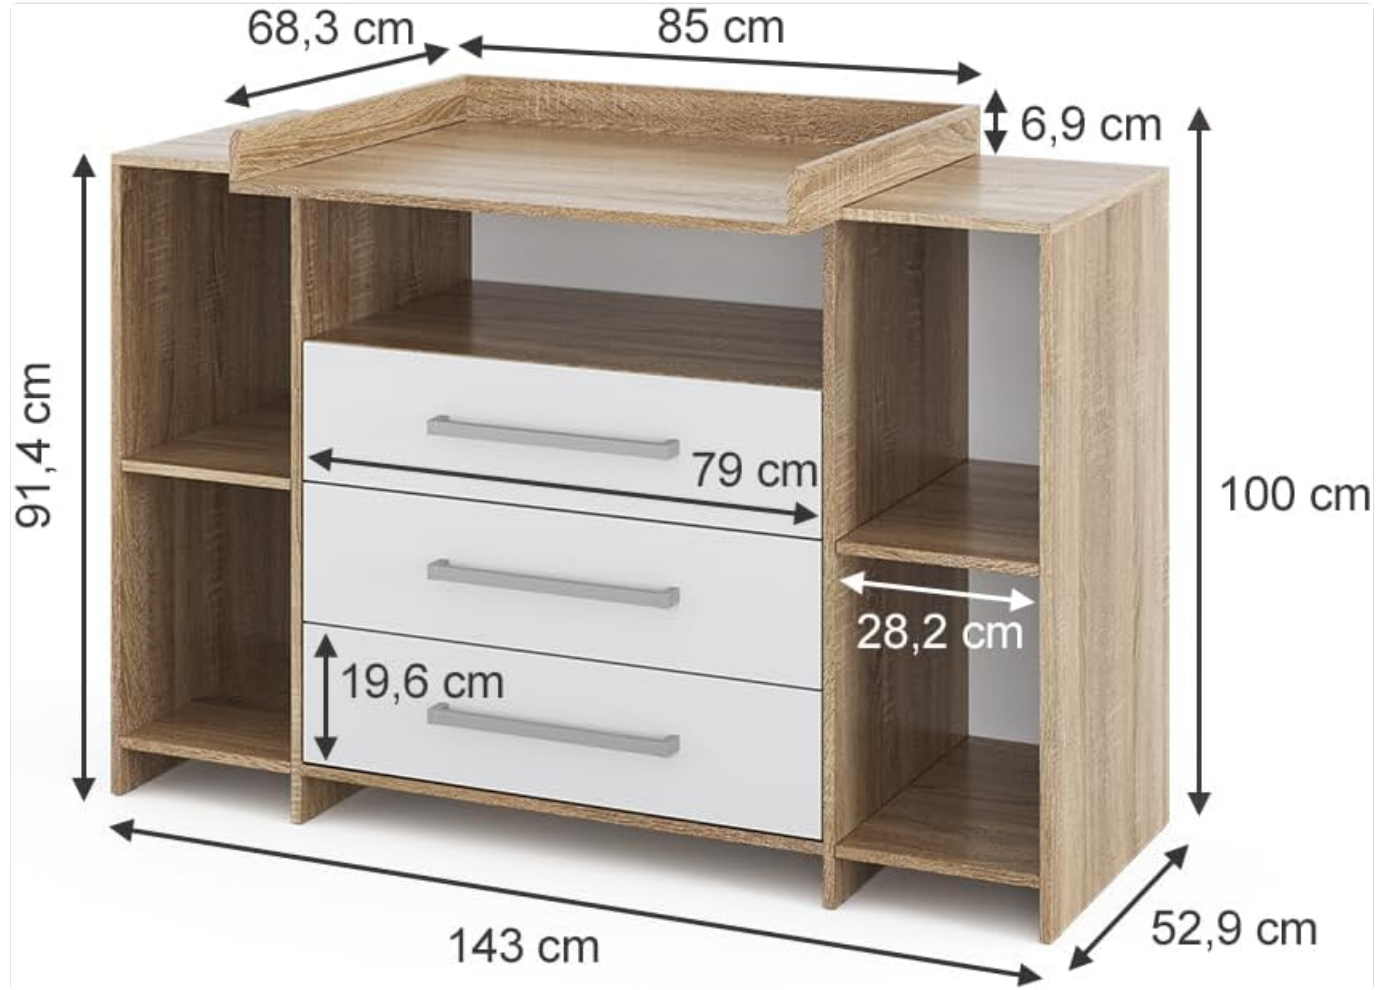


Figure 8.1: Detailed dimensions of the changing table, including overall width, depth, height, and internal drawer measurements.

9. WARRANTY AND SUPPORT

For any questions, concerns, or to report missing/damaged parts, please contact the manufacturer or seller directly. Please retain your proof of purchase for any warranty claims.

Manufacturer: Oskar

Seller: ok-living

For further assistance, please visit the [Vicco Store on Amazon](#).

© 2025 Vicco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C96WF58L>

More documents and user manuals: <https://manuals.plus/>