

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [T4TREAM](#) /

› [T4TREAM 60-inch Farmhouse Dresser with Sliding Barn Doors and 4 Drawers Instruction Manual](#)

T4TREAM B0C97527WY

T4TREAM 60-inch Farmhouse Dresser Instruction Manual

Model: B0C97527WY | Brand: T4TREAM

INTRODUCTION

Thank you for choosing the T4TREAM 60-inch Farmhouse Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

This dresser features a farmhouse design with four drawers and two space-saving sliding barn doors, offering versatile storage for various items. Its dimensions are approximately 60 inches wide, 15.75 inches deep, and 31.25 inches high, making it suitable for bedrooms, living rooms, or as a TV stand.



Image: The T4TREAM 60-inch Farmhouse Dresser, showcasing its light rustic oak finish, four central drawers, and two sliding barn doors.

SAFETY INFORMATION

- **Anti-Tip Device:** Always install the included anti-tip device to prevent the dresser from tipping over. This is crucial for safety, especially in households with children.
- **Weight Limits:** Do not exceed the maximum weight capacity for the tabletop (150 lbs) and individual drawers (25 lbs). Overloading can compromise stability and cause damage.
- **Assembly:** Assembly should ideally be performed by two adults to ensure safety and proper handling of components.
- **Placement:** Place the dresser on a flat, level surface to prevent wobbling and ensure stability.
- **Children:** Do not allow children to climb on or play with the dresser, especially with open drawers or sliding doors.

PACKAGE CONTENTS

Before assembly, verify that all parts and hardware are present. Refer to the detailed parts list provided in the separate installation guide. All components are labeled with numbers for easy identification.

- Dresser panels (top, bottom, sides, back, drawer fronts)
- Drawer components (sides, back, bottom)
- Sliding barn doors
- Adjustable shelves
- Hardware kit (screws, dowels, cam locks, drawer slides, door tracks, handles, anti-tip kit)
- Assembly instructions

SETUP AND ASSEMBLY

Assembly is required for this product. A detailed, step-by-step instruction manual with diagrams is included in the packaging. Please follow these instructions carefully.

Recommended Tools:

- Phillips head screwdriver
- Hammer (for dowels)
- Measuring tape (optional, for placement)

Assembly Tips:

- **Two-Person Assembly:** It is highly recommended that two people assemble this dresser due to its size and weight.
- **Clear Workspace:** Prepare a spacious, clean, and soft surface (e.g., a blanket or carpet) to prevent scratching the furniture during assembly.
- **Identify Parts:** Before starting, lay out all parts and match them with the numbered labels in the instruction manual.
- **Do Not Overtighten:** Tighten screws firmly but avoid overtightening, which can strip threads or damage the engineered wood.
- **Anti-Tip Installation:** Ensure the anti-tip device is securely installed to a wall stud or appropriate anchor point as per the instructions.



Image: Technical drawing illustrating the overall dimensions of the dresser (60"W x 15.75"D x 31.2"H) and the internal dimensions of a drawer (16.2"W x 12"D x 4.1"H).

OPERATING INSTRUCTIONS

Sliding Barn Doors:

The two barn doors slide smoothly along a metal track. To open or close, gently grasp the handle and slide the door horizontally. These doors allow you to conceal or reveal the adjustable shelf compartments as needed.

Adjustable Shelves:

Behind each sliding barn door, there are two adjustable shelves. These shelves can be positioned at three different heights or removed entirely to accommodate items of varying sizes. To adjust, remove the shelf, reposition the shelf pins to the desired height, and place the shelf back on the pins.

Drawers:

The four central drawers are equipped with smooth-glide slides for easy opening and closing. Pull the drawer handle to open and push to close. Avoid forcing drawers if they feel stuck; check for obstructions or misalignment.



Sliding Barn Doors

- Space-saving and easy access
This rustic & unique appearance that adds character and charm to your space

Large Side Cabinet

- Deep and ample storage space
Equipped with 2 adjustable shelves, each with 3 heights adjustable to maximize your space utilization



Smooth-glide 4 Drawers

- Great for storage organization & classification

Image: Close-up views demonstrating the smooth operation of the sliding barn doors, the adjustability of the side shelves, and the smooth-glide mechanism of the drawers.

KEEP YOUR SPACE NEAT AND TIDY



Spacious Tabletop

4 Drawers to Store
Socks, T-shirts, etc



Image: Overhead view of the dresser showing the spacious tabletop and open drawers containing various personal items, illustrating its organizational capacity.

MAINTENANCE

- **Cleaning:** Wipe the dresser surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the engineered wood finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.

TROUBLESHOOTING

- **Wobbling Dresser:** Ensure the dresser is placed on a level surface. Check that all leg supports are evenly touching the floor. If necessary, use furniture levelers (not included) or shims. Verify all assembly screws are tightened.
- **Drawers Not Closing Smoothly:** Check for any obstructions inside the drawer or along the drawer slides. Ensure the drawer slides are correctly installed and aligned. Verify that the dresser itself is level and stable, as an uneven frame can affect drawer operation.
- **Sliding Doors Sticking:** Inspect the metal track for any debris or damage. Ensure the door rollers are properly seated on the track. A small amount of silicone lubricant can be applied to the track if needed, but avoid oil-based lubricants.
- **Missing Parts:** If any parts are missing upon unboxing, refer to the contact information in the Warranty and Support section to request replacements.
- **Drawer Knobs Interfering with Sliding Doors:** In some cases, larger drawer knobs might slightly impede the full movement of the sliding barn doors. If this occurs, consider replacing the drawer knobs with flatter alternatives if full door clearance is essential.

SPECIFICATIONS

Feature	Detail
Brand	T4TREAM
Model Number (ASIN)	B0C97527WY
Color	Light Rustic Oak
Product Dimensions	15.75"D x 60"W x 31.25"H
Material	Engineered Wood
Number of Drawers	4
Number of Shelves	2 (adjustable)
Door Style	Shaker (Sliding Barn Doors)
Mounting Type	Freestanding
Assembly Required	Yes
Recommended Uses	Clothes, Linens, Towels, General Storage

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. T4TREAM is committed to providing quality products and customer satisfaction.

If you encounter any issues during assembly or operation, or if you require replacement parts, please contact T4TREAM customer support. Contact details can typically be found on the manufacturer's website or through your purchase platform.

When contacting support, please have your model number (B0C97527WY) and proof of purchase readily available.

