

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HAUSHOF](#) /

› [HAUSHOF Powerful Rechargeable Milk Frother Wand \(Model HH23106AJ\) - Instruction Manual](#)

HAUSHOF HH23106AJ

HAUSHOF Powerful Rechargeable Milk Frother Wand - Instruction Manual

Model: HH23106AJ | Brand: HAUSHOF

1. INTRODUCTION

Thank you for choosing the HAUSHOF Powerful Rechargeable Milk Frother Wand. This handheld electric foam maker is designed to effortlessly create rich, creamy froth for your favorite beverages. Its portable, USB-C rechargeable design makes it convenient for use at home, in the office, or while traveling. Please read this manual carefully before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW

The HAUSHOF Milk Frother features a powerful motor and durable construction for efficient frothing and mixing.

Key Features:

- USB-C Rechargeable:** Equipped with a 500mAh lithium battery for long-lasting performance.
- Powerful Motor:** 11000 RPM for quick and efficient frothing.
- Durable Construction:** ABS material housing and food-grade 304 stainless steel whisk.
- Easy to Use:** Simple one-button operation.
- Versatile:** Ideal for coffee, lattes, cappuccinos, matcha, hot chocolate, and powdered drinks.

Components:

SATISFY YOUR DIFFERENT NEEDS



Figure 1: HAUSHOF Milk Frother with labeled components.

- **Main Unit:** Ergonomically designed handle with control button and charging port.
- **Detachable Whisk:** Food-grade 304 stainless steel mixing head.
- **USB-C Charging Cable:** For convenient recharging.

3. SETUP

3.1 Charging the Frother

Before first use, fully charge the frother. The device is equipped with a 500mAh lithium battery.

1. Locate the USB-C charging port on the top of the frother.
2. Connect the provided USB-C charging cable to the frother.
3. Plug the other end of the cable into a compatible power source (e.g., adapter socket, laptop, power bank, car charger) with a 5V 1A charging head.

4. The bright charging indicator light will illuminate during charging and turn off when fully charged.



Figure 2: Connecting the USB-C charging cable to the frother.

3.2 Attaching the Whisk

The stainless steel whisk is detachable for easy cleaning and storage.

1. Align the whisk attachment with the opening at the bottom of the frother's main unit.
2. Gently push the whisk into place until it clicks securely.
3. To detach, pull the whisk firmly away from the main unit.

4. OPERATING INSTRUCTIONS

4.1 Frothing Milk

Achieve rich, creamy foam for your coffee beverages.

1. Pour your desired amount of milk into a tall and large container. (Note: Using a larger container helps prevent splashes due to the frother's power.)
2. Submerge the whisk end of the frother into the milk.
3. Press the power button on the side of the frother to start frothing.
4. Move the frother up and down gently to create foam. The frother operates at 11000 RPM for quick results.
5. Once desired foam consistency is achieved, release the button to turn off the frother.



Figure 3: Frothing milk with the HAUSHOF Milk Frother.

4.2 Mixing Other Drinks

The frother is also excellent for mixing various powdered beverages.

1. Add your powdered drink mix (e.g., matcha, hot chocolate, protein powder) to your liquid in a suitable container.
2. Insert the whisk into the mixture.
3. Press the power button to activate the frother and mix until smooth.
4. Release the button to turn off.



Figure 4: Versatile uses of the HAUSHOF Milk Frother.

4.3 Official Product Video

Your browser does not support the video tag.

Video 1: Official demonstration of the HAUSHOF Powerful Rechargeable Milk Frother in black, showcasing its features and operation.

5. MAINTENANCE

5.1 Cleaning

Proper cleaning ensures the longevity and hygiene of your frother.

- **Hand Wash Only:** The whisk attachment should be hand washed.
- After each use, detach the stainless steel whisk.
- Rinse the whisk under running water or place it in a cup of clean water and briefly activate the frother to clean it.

- Wipe the main unit with a damp cloth. Do NOT submerge the main unit in water or allow water to enter the charging port.
- Ensure all parts are completely dry before reassembling or storing.

5.2 Storage

Store the frother in a clean, dry place. The detachable whisk can be stored separately or reattached to the main unit.

6. TROUBLESHOOTING

- **Frother not turning on:** Ensure the frother is fully charged. Check the charging indicator light.
- **Liquid splashes during use:** The frother is powerful. Use a larger and taller container to prevent spills.
- **Inconsistent frothing/mixing:** Ensure the whisk is securely attached. For best results, use cold milk for frothing.
- **Reduced battery life/performance:** Do not leave the frother unused or uncharged for extended periods to avoid battery damage. Regular charging is recommended.
- **Erratic operation:** Avoid getting water into the charging port or main unit. If this occurs, allow the device to dry completely before attempting to use it again.

7. SPECIFICATIONS

Brand	HAUSHOF
Model Name	HAUSHOF Electric Milk Frother (Black)
Item Model Number	HH23106AJ
Color	Black
Material	Plastic (housing), 304 Stainless Steel (whisk)
Product Dimensions	1.36"W x 9.06"H
Item Weight	0.13 Kilograms (4.6 ounces)
Power Source	Battery Powered (1 Lithium Ion battery included)
Wattage	500 watts
Special Feature	Rechargeable
Recommended Uses	Residential
Product Care Instructions	Hand Wash Only

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact HAUSHOF customer

service directly. Contact details can typically be found on the manufacturer's website or through your retailer.

© 2024 HAUSHOF. All rights reserved.