



Manuals.plus /

› Leebein /

› Leebein Electric Spin Scrubber User Manual (Model YMG-820)

Leebein YMG-820

Leebein Electric Spin Scrubber User Manual

MODEL: YMG-820

Brand: Leebein

Introduction

Thank you for choosing the Leebein Electric Spin Scrubber. This cordless cleaning brush is designed to simplify your cleaning tasks for bathrooms, tubs, tiles, and toilets. This manual provides essential information for the safe and effective use of your new device. Please read it thoroughly before operation and retain it for future reference.

Safety Information

- Always ensure the device is fully charged before first use.
- Do not immerse the main scrubber unit in water beyond its IPX7 waterproof rating. The charging port must be dry before charging.
- Keep out of reach of children and pets.
- Use only the provided charging cable and adapter.
- Do not use the scrubber on delicate surfaces that may be scratched by rotating brushes. Test on an inconspicuous area first.
- Avoid applying excessive pressure, as this may reduce motor efficiency or damage the device.
- Disconnect from power before cleaning or changing brush heads.

Package Contents

Verify that all items are present in your package:

- 1 x Leebein Electric Spin Scrubber Main Unit
- 1 x Extension Handle

- 1 x Toilet Brush Head
- 1 x Large Flat Brush Head
- 1 x Pointed Brush Head
- 1 x Small Flat Brush Head
- 1 x Wool Brush Head
- 1 x Fiber Brush Head
- 1 x Sponge Brush Head
- 1 x Cloth Brush Head
- 1 x USB-C Charging Cable



Image: The Leebein Electric Spin Scrubber main unit, extension handle, and the eight included brush heads.

Product Overview

The Leebein Electric Spin Scrubber features a powerful motor, a comfortable grip, and a versatile design with multiple brush heads and an adjustable handle to tackle various cleaning tasks.

One to Replace Other Brushes



Image: The electric spin scrubber shown in use for cleaning a toilet, floor, and wall, highlighting its versatility.



Image: The scrubber in a bathtub, illustrating the use of the large flat brush, pointed brush, small flat brush, and toilet brush for various cleaning needs.

Setup

1. **Charging the Device:** Before first use, fully charge the scrubber. Connect the USB-C charging cable to the charging port on the main unit and plug the other end into a suitable USB power adapter (not included). The LED indicator lights will show charging status and battery level. A full charge takes approximately 4 hours and provides 60-90 minutes of runtime.
2. **Assembling the Handle:** The scrubber can be used handheld or with the extension handle. To attach the extension handle, align the connection points and twist until securely locked. The handle extends from 14.2 inches to 54.7 inches.
3. **Attaching Brush Heads:** Select the appropriate brush head for your cleaning task. Align the brush

head with the rotating shaft on the scrubber unit and push firmly until it clicks into place. Ensure it is securely attached before operation.



Find A New Way to Clean

No More Kneeling or Bending Over

Image: The electric spin scrubber demonstrating its adjustable length and the variety of brush heads available for different cleaning applications, such as car washing or kitchen cleaning.

Animated GIF: This animation illustrates how the scrubber's handle can be adjusted to various lengths, from a compact 14.2 inches to an extended 54.7 inches, for reaching different areas.

Operating Instructions

1. **Power On/Off:** Press the power button to turn the scrubber on. Press again to cycle through speed settings or turn off.

2. **Adjusting Speed:** The scrubber offers two speeds: 350 RPM (Low Speed) for thorough cleaning of stains and dirty spots, and 450 RPM (High Speed) for more efficient cleaning. Select the appropriate speed based on the cleaning task.
3. **Adjusting Brush Head Angle:** The brush head can be adjusted to 6 different angles to reach difficult areas. Press the angle adjustment button and position the head as needed, then release to lock.
4. **Cleaning Procedure:** For optimal results, spray detergent or cleaner directly onto the stains or surface before using the electric scrubber. Guide the rotating brush over the area, allowing the motor to do the work. Avoid excessive force.



Image: A person using the extended electric spin scrubber to clean a floor, demonstrating its ergonomic design for reaching low areas without bending.

Animated GIF: This animation highlights the scrubber's powerful performance, indicating 450 RPM for stubborn stains and a 90-minute runtime from its 2500mAh x2 battery.



Animated GIF: This animation demonstrates the specialized toilet cleaning brush attachment in action, effectively cleaning the inside of a toilet bowl.

Maintenance

- Cleaning Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue. Allow to air dry completely before storing.
- Cleaning the Main Unit:** The main scrubber unit is IPX7 waterproof, meaning it can withstand splashes and temporary immersion. Wipe the unit with a damp cloth to clean. Ensure the charging port cover is securely closed during cleaning and that the port is dry before charging.
- Storage:** Store the scrubber and its accessories in a clean, dry place away from direct sunlight and extreme temperatures.



Animated GIF: This animation visually confirms the IPX7 waterproof capability of the electric spin scrubber, showing it can be safely used in wet environments.

Troubleshooting

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is depleted.	Charge the device fully (approx. 4 hours). Check LED indicators.
Brush head falls off or is difficult to attach/detach.	Incorrect attachment or debris in connection.	Ensure brush head is aligned correctly and pushed firmly until it clicks. Clean any debris from the connection point.
Extension handle unscrews during use.	Handle not tightened sufficiently or rotational force.	Ensure the extension handle is securely twisted and locked. Apply less rotational force during use if possible.
Reduced power or short runtime.	Insufficient charge or battery degradation.	Ensure the device is fully charged. If the issue persists after full charge, contact customer support.

Specifications

Feature	Detail
Model Number	YMG-820
Brand	Leebein
Battery Capacity	2500mAh x 2 (Lithium Ion)
Charging Time	Approx. 4 hours
Runtime	60-90 minutes
Rotation Speeds	350 RPM (Low), 450 RPM (High)
Adjustable Handle Length	14.2 inches to 54.7 inches
Brush Head Angles	6 adjustable angles
Waterproof Rating	IPX7
Material	Stainless Steel (handle)
Item Weight	2.7 Pounds
UPC	602581866725



Animated GIF: This animation highlights the scrubber's battery capacity (2500mAh x2) and its impressive 90-minute runtime on a single charge.

Warranty and Support

Leebein provides a **90-day worry-free refund** and a **2-year extended warranty** for this product. If you encounter any problems or have questions regarding your Electric Spin Scrubber, please contact Leebein customer support through the retailer's platform or the official Leebein website for assistance.