

## WASJOYE ED

# WASJOYE Digital Security Safe Box ED, 43L - Instruction Manual

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your WASJOYE Digital Security Safe Box, model ED. Please read this manual thoroughly before use and retain it for future reference. This safe is designed to protect your valuables, documents, money, jewelry, and other important items in your home, office, or hotel environment.

## SAFETY INFORMATION

---

- **Robust Construction:** The WASJOYE home security safe is constructed from solid carbon steel with a 5mm thick door. The entire body is integrally formed, featuring micro-seams on the doors, integrated anti-pry hidden hinges, and solid door bolts. These designs ensure your valuables are safe and protected.
- **Mounting for Enhanced Security:** The back and bottom of the safe cabinet have two pre-drilled holes, allowing the safe to be securely fixed to the floor, shelf, or wall using the supplied anchor bolts. This significantly reduces the risk of theft and further enhances security.
- **Water Resistance:** This safe is not water resistant. Do not expose it to water or high humidity.
- **Emergency Keys:** Always store emergency keys in a secure location away from the safe. Do not store them inside the safe.
- **Battery Care:** Replace batteries promptly when the low battery indicator appears to ensure continuous operation.

## PACKAGE CONTENTS

---

Please check the package contents upon receipt to ensure all items are present:

- 1 x WASJOYE Digital Security Safe Box
- 1 x Instruction Manual (this document)
- 2 x Emergency Keys
- 1 x Removable Shelf
- 4 x Expansion Bolts for mounting

# STRONG ANTI-THEFT SYSTEM



Beep Alarm



Keypad Locked

Figure 1: Included components of the WASJOYE Digital Security Safe Box.

## SETUP

---

### 1. Battery Installation

The safe requires 4 x 1.5V AA batteries (not included) for the electronic keypad to function. The battery compartment is located on the inside of the safe door.

1. Open the safe using the emergency key (refer to 'Emergency Opening' if needed).
2. Locate the battery compartment cover on the inside of the door.
3. Remove the cover and insert 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover.

### 2. Setting Your Personal Code

Upon first use, or after battery replacement, you will need to set your personal code. The default code is typically '159' or

similar, but it's recommended to set your own immediately.

1. With the safe door open, locate the red reset button on the inside of the door, near the battery compartment.
2. Press the red reset button. The keypad will beep, and the indicator light will flash.
3. Enter your desired 3 to 8 digit code on the keypad.
4. Press the '#' button to confirm. The safe will beep, indicating the new code is set.
5. Test the new code with the door open before closing it.




Figure 2: Instructions for setting User and Master codes.

### 3. Mounting the Safe (Optional)

For added security, the safe can be mounted to a wall or floor.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe.
3. Drill holes in the wall or floor using an appropriate drill bit.
4. Insert the expansion bolts into the drilled holes.
5. Align the safe with the bolts and secure it tightly.

# DIGITAL SECURITY SAFE BOX

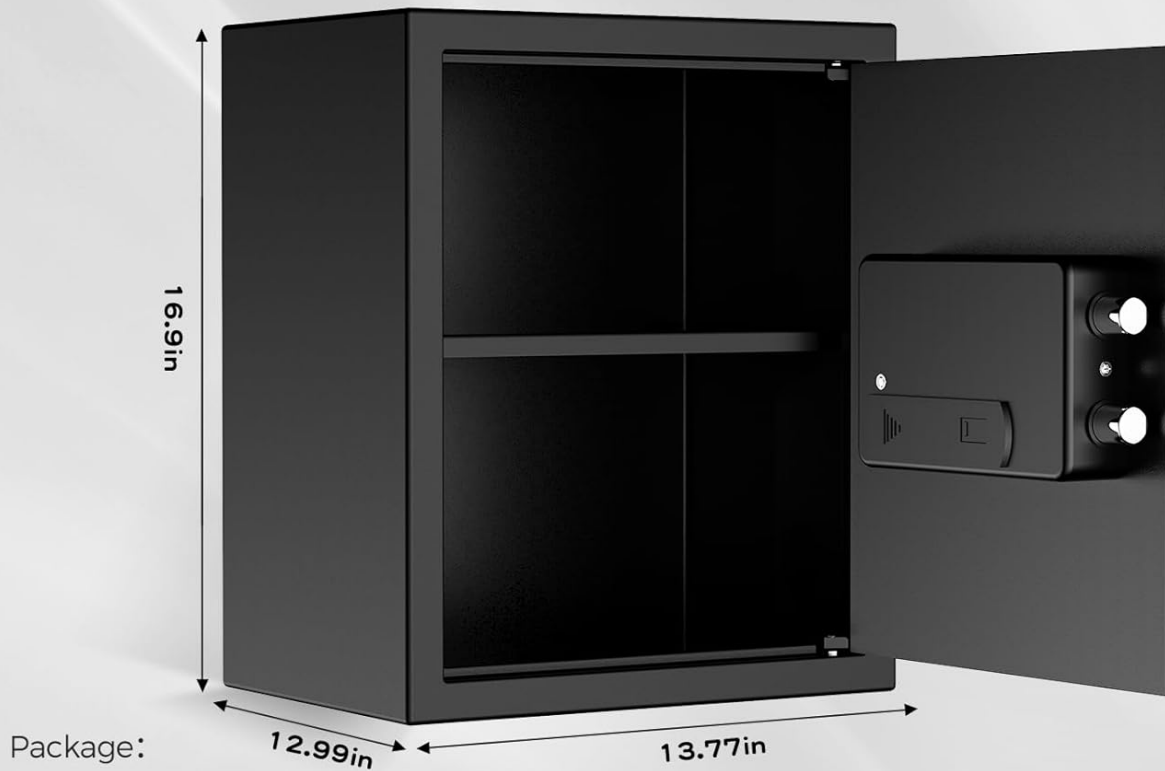

Emergency Keys



Shelf



User Manual



Mat



Expansion Bolts

Figure 3: Safe's solid structure and mounting points.

## OPERATING INSTRUCTIONS

### 1. Opening the Safe with Your Personal Code

1. Enter your 3 to 8 digit personal code on the keypad.
2. Press the '#' button. The green 'Unlock' indicator light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

# QUICK & RELIABLE ACCESS



Method 1



Personal Code + Knob

Method 2



Emergency Key + Knob

Figure 4: Opening the safe with a personal code.

## 2. Emergency Opening with Keys

In case of forgotten code or dead batteries, use the emergency keys.

1. Locate the emergency keyhole cover on the keypad panel.
2. Gently remove the cover.
3. Insert the emergency key into the keyhole and turn it counter-clockwise.
4. Simultaneously turn the knob clockwise to open the safe door.



Figure 5: Using the emergency key to open the safe.

### 3. Indicator Lights

The safe features indicator lights to communicate its status:

- **Green Light:** Indicates successful code entry and unlock status.
- **Yellow Light:** Warning or incorrect code entry.
- **Red Light:** Low battery warning.

# SLEEK ERGONOMIC DESIGN

Indicator Light Design



## COLOR TIPS

Different colored lights represent different states.

Figure 6: Keypad indicator light meanings.

### 4. Internal Storage

The safe features a double-layer design with a removable shelf for flexible storage. The interior is lined with flannel to protect items.

# ADJUSTABLE SPACE

Easily Organizing your Valuables

with shelf



without shelf



Cash



Jewelry



Document



Watch



Passport



Medicine

Figure 7: Adjustable internal storage space.

## 5. Video Tutorial: Opening and Setting Password

Video 1: Demonstrates how to open the safe using the emergency key and how to set up a new password.

## MAINTENANCE

- **Battery Replacement:** When the red low battery indicator light illuminates, replace all four AA batteries promptly. Use high-quality alkaline batteries for best performance.
- **Cleaning:** Clean the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or keypad.
- **Keyhole Maintenance:** Keep the emergency keyhole free from dust and debris. Do not lubricate the lock mechanism unless specifically instructed by customer support.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered, batteries are low/dead, or keypad is locked.	Re-enter the correct code. Replace batteries if the red indicator light is on. If the keypad is locked due to multiple incorrect attempts, wait for the lockout period to expire or use the emergency key.
Keypad is unresponsive.	Dead batteries.	Replace the batteries. If still unresponsive, use the emergency key to open and check battery connections.
Alarm sounds unexpectedly.	Multiple incorrect code entries or physical tampering.	Enter the correct code to disarm the alarm. Avoid tampering with the safe.
Lost emergency keys.	Keys are misplaced.	Contact WASJOYE customer support. Provide the key cylinder code found on the keyhole for replacement keys.

# ADJUSTABLE SPACE

Easily Organizing your Valuables

with shelf



without shelf



Cash



Jewelry



Document



Watch



Passport



Medicine

Figure 8: The safe's anti-theft alarm system.

## SPECIFICATIONS

---

Feature	Detail
Brand	WASJOYE
Model Number	ED
Product Dimensions (D x W x H)	33 cm x 35 cm x 42 cm
Lock Type	Key, Electronic Keypad
Color	Black
Capacity	43 Liters
Material	Carbon Steel
Special Features	Anti-theft, Removable Shelf, Alarm System
Mounting Type	Wall Mount, Floor Mount
Water Resistance Level	Not Water Resistant
Chamber Height	34.7 cm
Chamber Width	27 cm
Chamber Depth	41.7 cm

## WARRANTY AND SUPPORT

---

WASJOYE is committed to providing excellent customer service for all our security safes. If you have any questions, concerns, or require assistance, please do not hesitate to contact us for a satisfactory response.

**Emergency Key Replacement:** If you lose your emergency keys and need replacements, please contact WASJOYE customer support. You will need to provide the key cylinder code, which is typically found on the keyhole itself or on the original keys.

For further assistance, please refer to the contact information provided with your purchase or visit the official WASJOYE brand store.

