

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Acouto](#) /

> [Acouto Mini Digital Camera \(Model Acoutoe057gdz62g-02\) Instruction Manual](#)

### Acouto Acoutoe057gdz62g-02

# Acouto Mini Digital Camera Instruction Manual

Model: Acoutoe057gdz62g-02

## 1. PRODUCT OVERVIEW

The Acouto Mini Digital Camera is a compact and portable device designed for capturing 16-megapixel photos and 720P videos at 30 frames per second. It features a 2.4-inch LCD display for easy viewing and playback, 16X digital zoom, and a built-in fill light for improved low-light performance. This manual provides essential information for setting up, operating, and maintaining your camera.



Image: Front and back view of the Acouto Mini Digital Camera, showing the lens, flash, and rear control panel with LCD screen.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Acouto Mini Digital Camera
- Instruction Manual (this document)
- Data Line (USB cable)

*Note: AAA batteries and a memory card are not included and must be purchased separately.*



Image: The Acouto Mini Digital Camera shown alongside its USB data cable, representing the main components of the package.

## 3. SETUP

### 3.1 Inserting Batteries

1. Locate the battery compartment cover on the camera.
2. Slide or open the cover according to the indicator.
3. Insert three (3) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

*Important: Use new, high-quality AAA alkaline batteries for optimal performance.*

### 3.2 Inserting a Memory Card

The camera supports memory cards up to 32GB (not included). A memory card is required to save photos

and videos.

1. Locate the memory card slot, usually near the battery compartment or on the side of the camera.
2. Insert the memory card with the metal contacts facing the correct direction, as indicated by a small diagram near the slot.
3. Gently push the card until it clicks into place.
4. To remove, gently push the card again until it springs out slightly, then pull it out.

## **4. OPERATING INSTRUCTIONS**

---

### **4.1 Powering On/Off**

- To power on: Press and hold the Power button (often labeled with a circle and a line) until the LCD screen illuminates.
- To power off: Press and hold the Power button again until the screen turns off.

### **4.2 Taking Photos**

1. Ensure the camera is in photo mode. This is usually indicated by an icon on the screen or a dedicated mode button (often labeled 'M' for Mode).
2. Frame your shot using the 2.4-inch LCD screen.
3. Press the Shutter button (usually on top of the camera) halfway down to focus (if applicable), then fully press to capture the image.

***superior sensor ensures 16MP photos and 720P(30fps) videos can help you capture any precious and fleeting moment***



Image: The Acouto Mini Digital Camera from an angled view, showing a vibrant landscape image on its 2.4-inch LCD screen, demonstrating its photo capture capability.

### **4.3 Recording Videos**

1. Switch the camera to video recording mode. This may be done via the mode button or a dedicated video record button.
2. Press the Record button (often marked with a red dot or video camera icon) to start recording. A timer or indicator will appear on the screen.
3. Press the Record button again to stop recording.

### **4.4 Using Digital Zoom**

The camera features 16X digital zoom.

- While in photo or video mode, use the 'W' (Wide) and 'T' (Telephoto) buttons, typically located near the top right of the camera's back, to zoom in or out.
- *Note: Digital zoom can reduce image quality compared to optical zoom.*

### **4.5 Activating Fill Light**

For low-light conditions, the camera includes a fill light feature.

- Refer to the camera's on-screen menu or dedicated button (if available) to activate the fill light.

## 4.6 Playback Mode

To review your captured photos and videos:

1. Switch to Playback mode (often indicated by a play icon).
2. Use the navigation buttons (up/down/left/right) to browse through your files.
3. Press the 'OK' button to view a photo or play a video.



Image: Rear view of the Acouto Mini Digital Camera, highlighting the 2.4-inch LCD screen displaying a scenic landscape, along with the control buttons for navigation and playback.

## 5. CONNECTING TO A COMPUTER

To transfer photos and videos to your computer:

1. Ensure the camera is powered off.
2. Connect one end of the provided USB Data Line to the camera's USB port.
3. Connect the other end to an available USB port on your computer.
4. Power on the camera. It should be recognized as a removable disk or mass storage device by your computer.
5. Access the camera's storage to copy files to your computer.
6. Safely eject the device from your computer before disconnecting the USB cable.

## 6. MAINTENANCE

### 6.1 Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution if necessary. Avoid abrasive materials.
- Do not use strong detergents or solvents.

## 6.2 Storage

- When not in use for extended periods, remove the AAA batteries to prevent leakage.
- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

- **Camera does not power on:**
  - Ensure batteries are inserted correctly with the right polarity.
  - Replace with fresh AAA batteries.
  - Check if the battery compartment cover is securely closed.
- **Cannot take photos/record videos:**
  - Verify that a memory card is inserted and has sufficient free space.
  - Ensure the camera is in the correct mode (photo or video).
  - Check if the memory card is properly formatted (refer to camera settings if available).
- **Images/Videos are blurry:**
  - Clean the camera lens with a soft, lint-free cloth.
  - Ensure there is adequate lighting.
  - Hold the camera steady during capture.
- **Computer does not recognize camera:**
  - Ensure the camera is powered on after connecting to the computer.
  - Try a different USB port on your computer.
  - Use the provided USB data cable.

## 8. SPECIFICATIONS

<b>Model Name</b>	Acoutoe057gdz62g-02
<b>Brand</b>	Acouto
<b>Effective Still Resolution</b>	16 MP
<b>Video Resolution</b>	720p (1280x720) at 30 FPS
<b>Digital Zoom</b>	16x
<b>Screen Size</b>	2.4 inches (5.5 Centimeters) LCD
<b>Photo Sensor Technology</b>	CMOS
<b>Memory Storage Capacity</b>	Supports up to 32 GB (memory card not included)
<b>Power Source</b>	3 x AAA batteries (not included)
<b>Connectivity Technology</b>	USB 2.0
<b>Item Weight</b>	136 Grams
<b>Dimensions (approx.)</b>	9.5 x 5.5 x 2.5 cm / 3.74 x 2.16 x 0.98 inches
<b>Supported File Format</b>	JPEG (images), AVI (video)

<b>Image Stabilization</b>	Digital
<b>Focus Type</b>	Auto Focus
<b>Shooting Modes</b>	Automatic, Easy, Portrait, Landscape, Sports



Image: The Acouto Mini Digital Camera shown with its approximate dimensions: 9.5cm (3.74in) length, 5.5cm (2.16in) width, and 2.5cm (0.98in) thickness.

## 9. WARRANTY AND SUPPORT

Specific warranty information for the Acouto Mini Digital Camera is not provided in this manual. Please refer to the product packaging or the retailer's website for details regarding warranty coverage and customer support.

For further assistance or inquiries, please contact Acouto customer service through their official channels or the platform where the product was purchased.

You can visit the Acouto brand store for more information: [Acouto Brand Store](#)

