

Lancer Tactical Saber X84

Lancer Tactical Air Pistol Saber X84 User Manual

Model: Saber X84

INTRODUCTION

This manual provides essential information for the safe and proper operation, maintenance, and troubleshooting of your Lancer Tactical Air Pistol Saber X84. Please read this manual thoroughly before using the air pistol to ensure safe handling and optimal performance.

The Lancer Tactical Saber X84 is a full metal CO2-powered air pistol designed for recreational shooting. It features a realistic construction, non-blowback easy-to-shoot function, and semi-automatic firing with a functioning safety.

SAFETY INFORMATION

WARNING: This is not a toy. Misuse or careless use may cause serious injury or death. Always treat this air pistol as if it were loaded. Always wear eye protection when handling or firing this air pistol. Keep out of reach of children.

- Always point the air pistol in a safe direction.
- Keep your finger off the trigger until ready to shoot.
- Be sure of your target and what is beyond it.
- Never shoot at hard surfaces as BBs can ricochet.
- Store the air pistol unloaded and separate from ammunition.
- Do not modify the air pistol.

PACKAGE CONTENTS

Upon opening your Lancer Tactical Air Pistol Saber X84 package, please verify that all the following items are included:

- 1x Lancer Tactical Air Pistol Saber X84
- 1x Magazine
- 1x User Manual (this document)
- 1x Bag of 100 rd metal BBs
- 5x 12-gram CO2 Cartridges

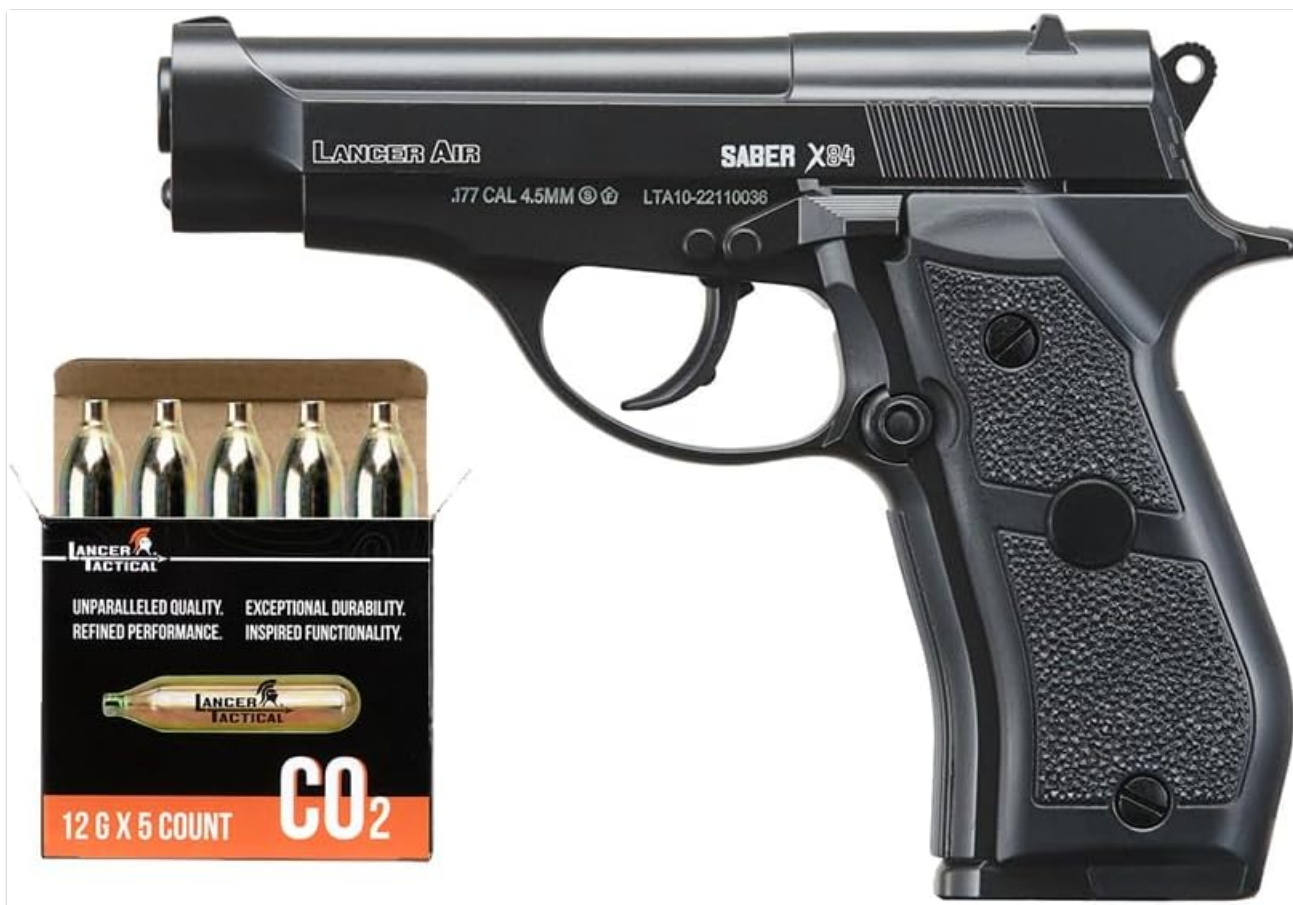


Image: Lancer Tactical Air Pistol Saber X84 shown with included CO2 cartridges.

PRODUCT OVERVIEW

The Lancer Tactical Saber X84 features a durable full metal construction and an ergonomic design for comfortable handling. Key components include:

- **Barrel:** The front-most part where the BB exits.
- **Front Sight:** Used for aiming, located above the barrel.
- **Rear Sight:** Used for aiming, located at the back of the slide.
- **Slide:** The upper part of the pistol, though non-blowback, it houses the barrel and sights.
- **Trigger:** Activates the firing mechanism.
- **Trigger Guard:** Protects the trigger.
- **Magazine Release:** Button or lever to eject the magazine.
- **Grip:** Textured for a secure hold.
- **Safety Switch:** Mechanism to prevent accidental firing.
- **CO2 Cartridge Compartment:** Located in the magazine or grip, where the 12-gram CO2 cartridge is inserted.



Image: Left side view of the Lancer Tactical Saber X84 air pistol, highlighting its full metal construction.



Image: Right side view of the Lancer Tactical Saber X84 air pistol, showing the safety warning.



Image: Angled rear view of the Lancer Tactical Saber X84, illustrating the CO2 cartridge compartment at the base of the grip.

SETUP

1. Loading the CO2 Cartridge

1. Ensure the air pistol is on "Safe" and pointed in a safe direction.
2. Locate the CO2 compartment at the bottom of the grip.
3. Unscrew the cap of the CO2 compartment.
4. Insert one 12-gram CO2 cartridge into the compartment, narrow end first.
5. Screw the cap back on firmly until you feel the cartridge puncture and seal. Do not overtighten.

2. Loading BBs into the Magazine

1. Press the magazine release button to remove the magazine from the air pistol.
2. Pull down the magazine spring follower until it locks into place at the bottom.
3. Carefully load 4.5mm metal BBs into the magazine's loading port. Do not overfill.
4. Release the spring follower to secure the BBs.

3. Inserting the Magazine

1. With the air pistol pointed in a safe direction, insert the loaded magazine into the magazine well at the bottom of the grip.
2. Push the magazine firmly until you hear a "CLICK" sound, indicating it is securely seated. The magazine should be recessed about a quarter of an inch.
3. Push forward on the magazine spring to load the BBs into the pistol.

Your browser does not support the video tag.

Video: Instructions on how to properly fill and load the magazine into your Lancer Tactical air pistol.

OPERATING INSTRUCTIONS

Firing the Air Pistol

1. Ensure the air pistol is loaded with a CO2 cartridge and BBs.
2. Point the air pistol at a safe and appropriate target.
3. Move the safety switch from "Safe" to "Fire" (usually indicated by a red mark).
4. Grip the pistol firmly with both hands for stability.
5. Align your sights with the target.
6. Slowly and steadily pull the trigger until the air pistol fires.
7. After firing, return the safety switch to "Safe" if you are not immediately firing again.

Safety Features

The Saber X84 is equipped with a functioning safety mechanism. Always engage the safety when the air pistol is not in active use or when handling it.

MAINTENANCE

Regular maintenance ensures the longevity and reliable performance of your Lancer Tactical Air Pistol.

Cleaning

- After each use, wipe down the exterior of the air pistol with a clean, dry cloth to remove dirt and fingerprints.
- Periodically apply a small amount of silicone oil to moving parts and seals to keep them lubricated and prevent wear. Avoid petroleum-based oils as they can damage seals.
- Clean the barrel using a cleaning rod and a patch lightly oiled with silicone oil.

Storage

- Always store the air pistol unloaded, with no CO2 cartridge inserted and no BBs in the magazine or chamber.
- Store the air pistol in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the air pistol in a secure location, inaccessible to children and unauthorized users.

TROUBLESHOOTING

If you encounter issues with your Lancer Tactical Air Pistol Saber X84, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air pistol not firing / Low power	Empty or improperly installed CO2 cartridge.	Replace CO2 cartridge. Ensure it is fully punctured and sealed.
BBs not feeding / Jamming	Magazine improperly loaded or inserted. Incorrect BB size.	Ensure magazine spring is fully released after loading BBs. Use only 4.5mm metal BBs. Re-insert magazine until it clicks.
Air pistol leaks CO2	Damaged or dry seals. Loose CO2 cap.	Apply silicone oil to seals. Ensure CO2 cap is tightened properly. If leak persists, contact support.
Trigger not resetting	Internal mechanism issue.	Ensure no BBs are jammed. If problem persists, contact Lancer Tactical support.

SPECIFICATIONS

Feature	Detail
Brand	Lancer Tactical
Model Name	LTA (Saber X84)
Color	Black
Caliber	0.45 (4.5mm BBs)
Air Gun Power Type	CO2 (12-gram cartridges)
Rounds (Magazine Capacity)	21
Barrel Material Type	Metal
Frame Material	Metal
Item Package Dimensions	7.53 x 5.83 x 1.58 inches
Package Weight	1.1 Kilograms



Image: Lancer Tactical Saber X84 air pistol, illustrating its compact size and full metal construction.

WARRANTY AND SUPPORT

Lancer Tactical offers a one-year warranty that covers repair (shipping not included). For warranty claims or technical support, please contact Lancer Tactical directly through their official website.

For additional resources and product information, you may visit the [Lancer Tactical Store on Amazon](#).

© 2024 Lancer Tactical. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question