

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Ciokea](#) /
- › User Manual: Aluminum Chaise Lounge Chair Outdoor with Wheels

## Ciokea B0C9DBTLPX

# User Manual: Aluminum Chaise Lounge Chair

Model: B0C9DBTLPX | Brand: Ciokea

## INTRODUCTION

---

Thank you for choosing the Ciokea Aluminum Chaise Lounge Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor lounge chair. Please read it thoroughly before use and retain it for future reference.



*Image: The Ciokea Aluminum Chaise Lounge Chair, featuring a dark grey aluminum frame and textilene fabric, with an adjustable backrest and wheels for easy mobility.*

## SAFETY INFORMATION

---

- Ensure all parts are securely fastened before each use.
- Do not exceed the maximum weight capacity of 400 pounds.
- Keep hands and fingers clear of moving parts, especially when adjusting the backrest.
- Place the chair on a stable, level surface to prevent tipping.
- Do not allow children to play on or around the chair unsupervised.
- Avoid exposing the chair to extreme weather conditions for prolonged periods to ensure longevity.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. The package should contain:

- Chaise Lounge Frame (Aluminum)
- Textilene Fabric Seat and Backrest
- Wheels (pre-attached or requiring minimal attachment)
- Assembly Hardware (bolts, nuts, washers, tools if included)



# ALL-SEASONS ELEGANCE

Your Outdoor Companion



**Built for all-year comfort,**  
this lounge thrives in every season.



*Image: An exploded view diagram illustrating the main components of the lounge chair, including the frame, fabric, and hardware, along with key dimensions.*

## SETUP AND ASSEMBLY

The Ciokea Chaise Lounge Chair is designed for convenient and quick assembly, typically taking around 10 minutes with minimal parts.

## Assembly Steps:

1. **Step 1: Unpack Components** - Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Step 2: Attach Legs/Base** - Secure the main frame components together using the provided hardware. Ensure all bolts are finger-tight before fully tightening.
3. **Step 3: Secure Fabric** - Attach the textilene fabric to the frame according to the instructions. This typically involves sliding it into grooves or securing it with clips/screws.
4. **Step 4: Final Tightening** - Once all parts are in place, fully tighten all bolts with the provided tool. Do not overtighten.



Image: A visual guide demonstrating the four simple steps required to assemble the lounge chair, highlighting its quick setup.

## OPERATING INSTRUCTIONS

### Adjusting the Reclining Position:

Your Ciokea lounge chair features a 5-position adjustable backrest, allowing you to find your ideal comfort angle, from upright chatting to fully flat tanning.

- To adjust, slightly lift the backrest to disengage the locking mechanism.
- Move the backrest to your desired angle.
- Gently lower the backrest until it locks securely into one of the five predefined positions.
- The positions range from approximately 60° (chatting) to 0° (napping/tanning).



# EASY INSTALLA

Convenient Packaging for Effortless Setup

4 STEPS 10 MIN 4 PARTS



304 Stainless Steel

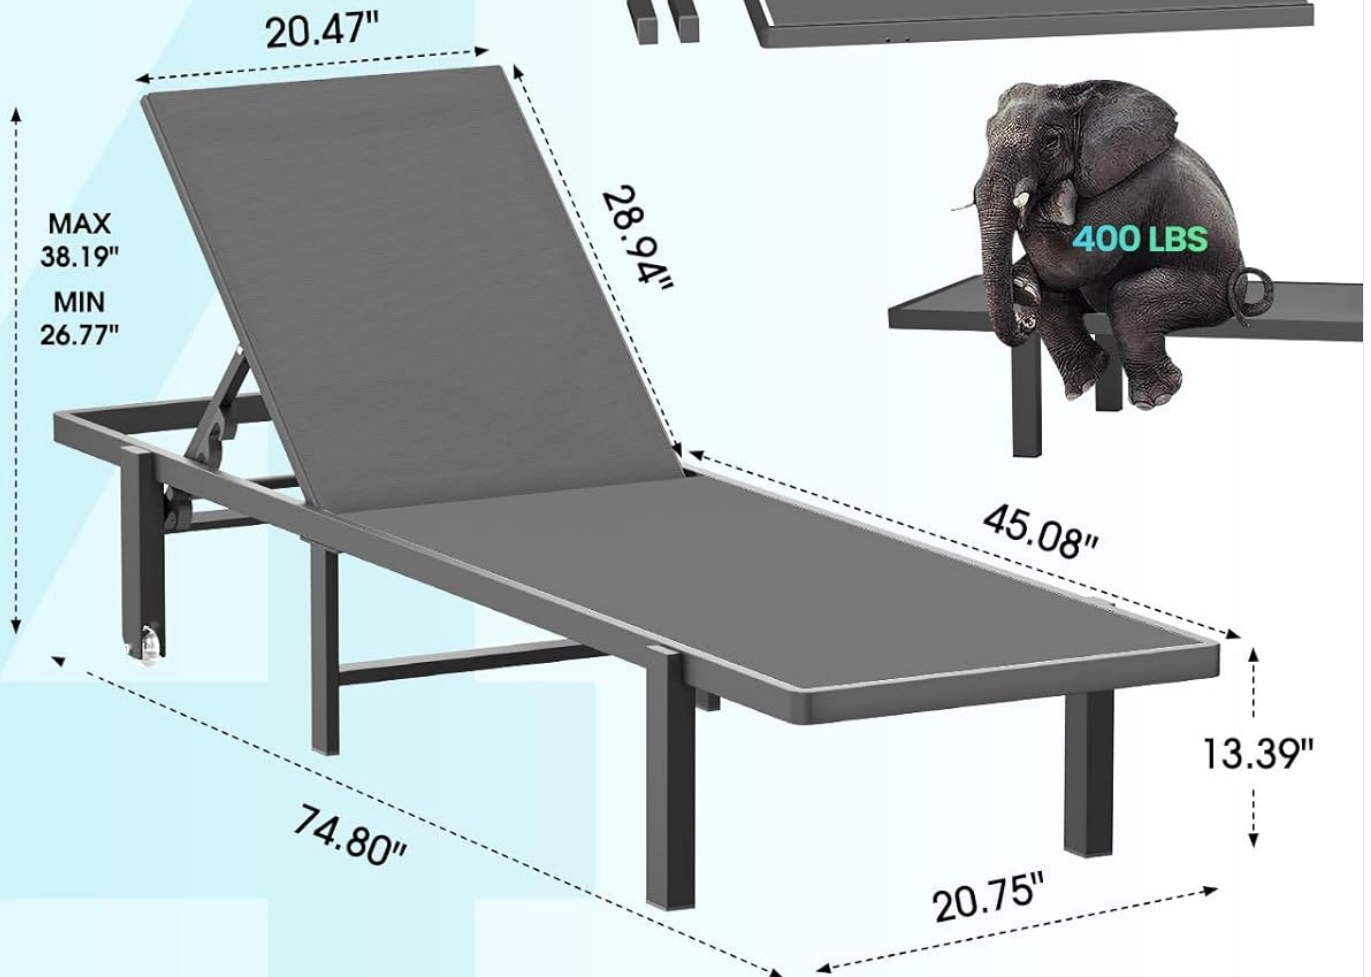 


Image: A visual representation of the five distinct reclining positions, from upright to fully flat, demonstrating the versatility of the chair.

## Moving the Chair:

 
The integrated wheels at one end of the chair allow for effortless repositioning.

- To move the chair, slightly lift the end opposite the wheels.
- Roll the chair to its new desired location.
- Ensure the chair is stable once placed in its new position.



# 5 ADJUSTABLE POSITION

To meet your different needs

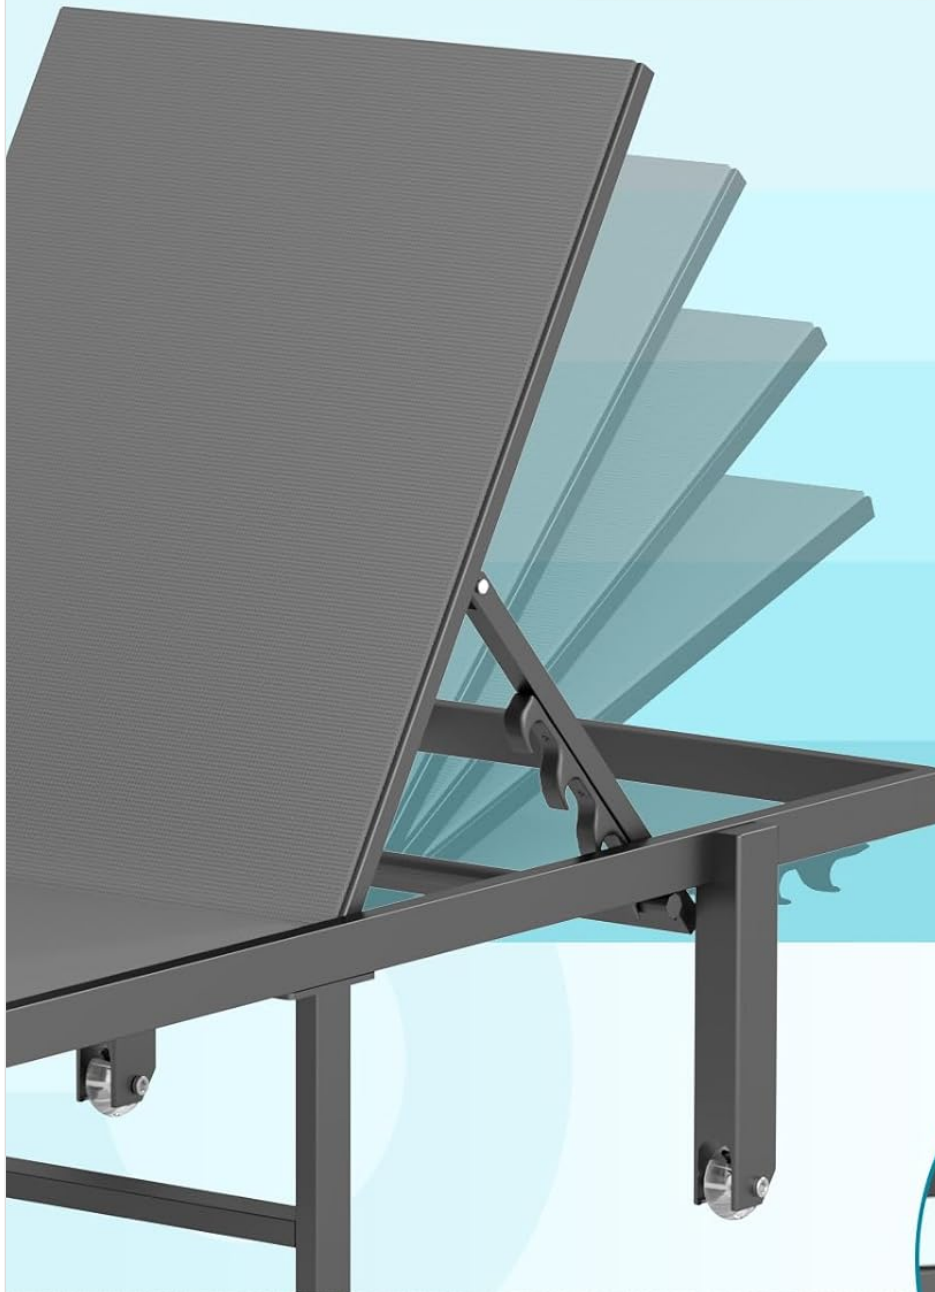

60° Chatting 5



45° Reading 4



30° Relaxing 3



15° Sunbathing 2



0° Napping 1

Tailored Just for You

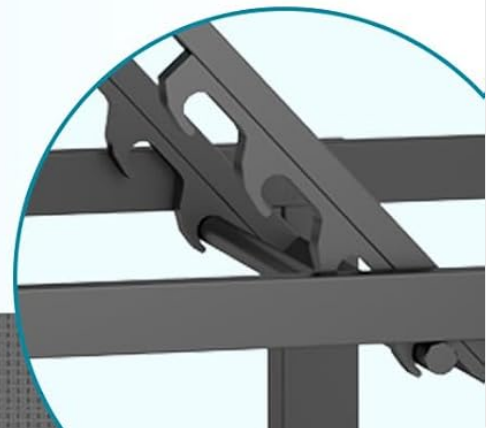 


Image: A detailed view of the precision-engineered glide wheels, emphasizing the smooth and effortless mobility of the lounge chair.

## MAINTENANCE

Proper care will extend the life and appearance of your lounge chair.

- **Cleaning the Fabric:** The textilene fabric is designed for easy maintenance. Simply wipe down with a damp cloth

and mild soap if necessary. Rinse thoroughly with clean water and allow to air dry completely before storage.

- **Cleaning the Frame:** The aluminum frame can be cleaned with a soft cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Seasonal Storage:** During off-seasons or prolonged periods of non-use, it is recommended to store the chair in a dry, covered area to protect it from extreme weather and prolong its lifespan.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Tighten as needed.

**CIOKEA®**  
C i o k e a

**QUICK-DRY  
FABRIC**

Easy to maintain

UVA UVB

**BREATHABLE**  
(Quick-dry)

**LOW-MAINTENANCE**  
(Easy to clean)

**FADE-PROOF**  
(Retains color  
brilliance)

**DURABLE  
MATERIALS**  
(Built to last)

Image: A graphic highlighting the key features of the textilene fabric, including its quick-dry, breathable, low-maintenance, fade-proof, and

durable qualities.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair feels wobbly after assembly.	Loose bolts or uneven surface.	Ensure all bolts are tightened securely. Move the chair to a flat, level surface.
Backrest difficult to adjust.	Mechanism might be stiff or obstructed.	Apply slight upward pressure to the backrest before adjusting. Check for any debris obstructing the mechanism.
Wheels not rolling smoothly.	Debris in wheels or damaged wheel.	Clean any debris from the wheels. If damaged, contact customer support for replacement parts.

## SPECIFICATIONS

Feature	Detail
Brand	Ciokea
Model	B0C9DBTLPX
Color	Dark Grey
Product Dimensions (L x W x H)	74.80"D x 20.47"W x 26.77"-38.19"H (assembled) / 24.8"D x 3.74"W x 46.46"H (packaged)
Material	Aluminum frame, Textilene fabric
Weight Capacity	Up to 400 pounds
Reclining Positions	5 adjustable positions
Special Features	Adjustable backrest, Wheels for mobility, Easy maintenance, All-season comfort
Indoor/Outdoor Usage	Outdoor

*Note: Product dimensions from the image (74.80"D x 20.47"W x 26.77"-38.19"H) are for the assembled chair, while the listed specification (24.8"D x 3.74"W x 46.46"H) likely refers to packaged or folded dimensions.*

## WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Ciokea Aluminum Chaise Lounge Chair, please contact Ciokea customer service through the retailer's platform or the official Ciokea website. Please have your model number (B0C9DBTLPX) and purchase date available when contacting support.

Specific warranty details may vary by region and retailer. Please refer to your purchase documentation for precise warranty terms and conditions.

