

## LUXOAK CFT020

# LUXOAK 70" U-Shaped Legs Fireplace TV Stand Instruction Manual

Model: CFT020 | Brand: LUXOAK

## 1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or product damage.

- Follow all safety instructions provided in the assembly manual.
- Do not exceed the maximum load capacity of the top panel (250 lbs).
- Keep the product away from heat sources and liquids.
- Do not use the product if it is damaged.
- Always unplug the electric fireplace when not in use or during maintenance.
- Keep the product away from children and pets to prevent accidents.

## 2. PRODUCT OVERVIEW

The LUXOAK 70" Fireplace TV Stand is designed to accommodate TVs up to 80 inches. It features a 36-inch electric fireplace, U-shaped legs, mirrored finish, and ample storage space with adjustable shelves.

### Key Features:

- **U-shaped Leg Design:** Provides a lightweight appearance and facilitates cleaning underneath the unit.
- **36" Electric Fireplace:** Features 8 flame colors, 5 dimmer levels, temperature adjustment (62°F-82°F), and a timer (1H-8H). Can operate with or without heat. Controlled via touch panel or remote.
- **Ample Storage Space:** Includes adjustable shelves for customized storage.
- **Mirrored Finish:** Offers a sleek, modern aesthetic.
- **LED Lights:** Integrated modern LED lights enhance the ambiance.

# For TV up to 80"

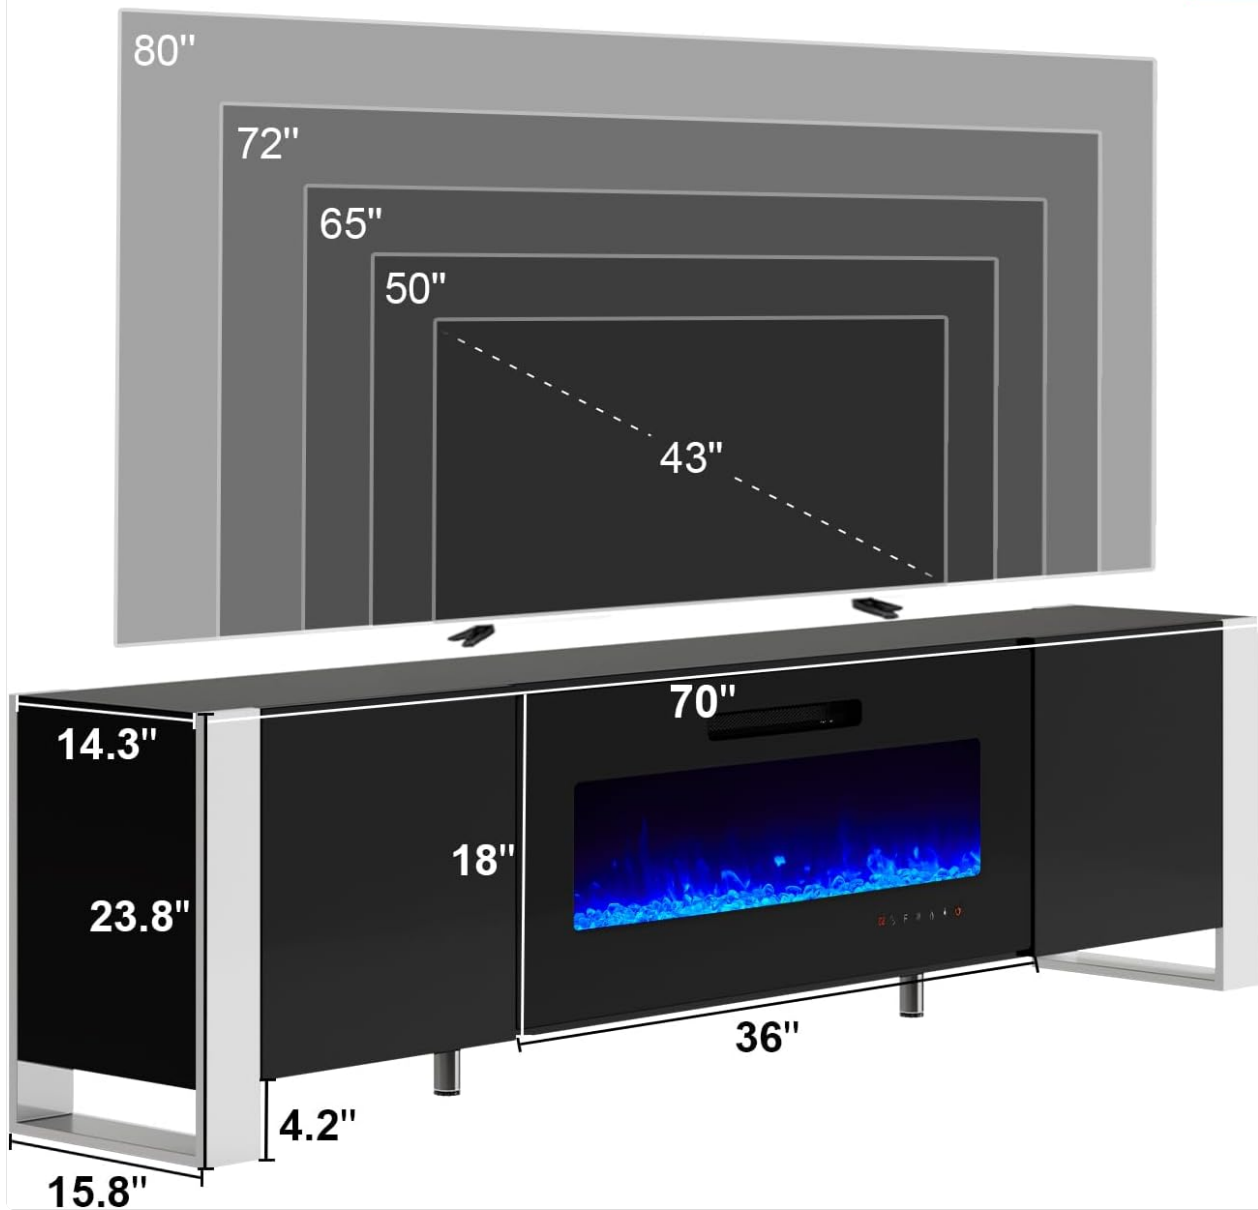


Image: LUXOAK 70-inch TV Stand with key dimensions (70" W x 16" D x 23.8" H) and a 36" electric fireplace. Suitable for TVs up to 80 inches with a maximum load capacity of 250 lbs.

### 3. ASSEMBLY INSTRUCTIONS

This product requires full assembly. Detailed instructions and hardware are included in the packaging. It is recommended that **two people** perform the installation, which typically takes less than 1 hour.

1. Unpack all components and verify against the parts list in the included manual.
2. Follow the step-by-step diagrams and instructions carefully.
3. Ensure all connections are secure before proceeding to the next step.
4. Install the electric fireplace unit into the designated opening.

5. Attach the U-shaped legs and any adjustable table legs, ensuring they are stable.
6. Adjust internal partitions as needed for your storage requirements.



## Adjustable Table Legs

## Adjustable Partition

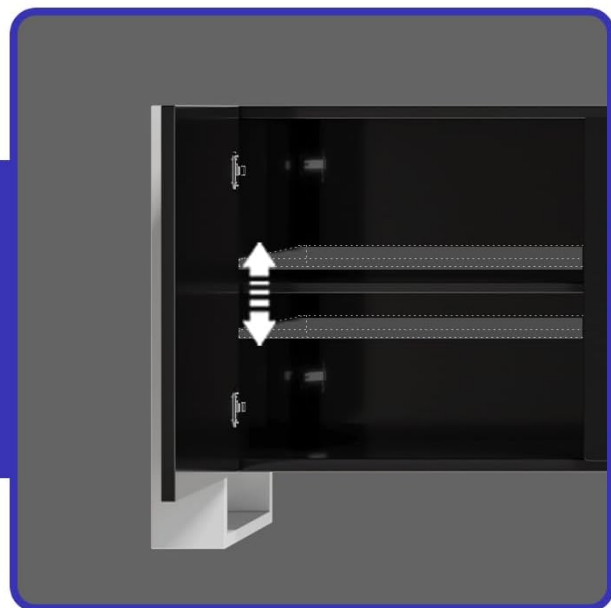


Image: Detail showing adjustable table legs for stability and adjustable internal partitions for flexible storage configuration.

## 4. OPERATING INSTRUCTIONS FOR ELECTRIC FIREPLACE

The 36-inch electric fireplace can be controlled using the touch panel on the unit or the provided remote control.

### Fireplace Controls:

- **Power Button:** Turns the fireplace ON/OFF.
- **Flame Color Button:** Cycles through 8 realistic fire flame colors.
- **Dimmer Button:** Adjusts the flame brightness through 5 levels (L1 to L5).
- **Heater Button:** Activates or deactivates the heating function.

- **Temperature Adjustment:** Set desired temperature between 62°F and 82°F.
- **Timer Button:** Sets an automatic shut-off timer from 1 to 8 hours.



Image: The 36-inch electric fireplace unit, showing the remote control and the touch panel with controls for flame, LED lights, power, heater, and timer.



Image: Visual representation of the 8 available flame colors for the electric fireplace, ranging from traditional orange to various blues, greens, and purples.



Image: Illustration of the 5 dimmer levels (L1 to L5) for the electric fireplace flame, demonstrating the range from dim to bright.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and appearance of your TV stand.

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals that may damage the mirrored finish or engineered wood.
- **Dusting:** Regularly dust the unit to prevent buildup.
- **Electric Fireplace:** Refer to the separate electric fireplace manual for specific cleaning and maintenance instructions for the heating element and flame effects. Ensure the unit is unplugged before any cleaning.
- **Inspection:** Periodically check all hardware connections to ensure they remain tight.

## 6. TROUBLESHOOTING

If you encounter issues with your LUXOAK Fireplace TV Stand, refer to the following common solutions:

| Problem                      | Possible Cause  | Solution  |
|------------------------------|---|---|
| Fireplace not turning on.    | No power, loose connection, or power switch off.              | Ensure the power cord is securely plugged into a working outlet. Check the main power switch on the fireplace unit.   |
| No heat from fireplace.      | Heater function not activated, or thermostat setting too low. | Press the heater button on the control panel or remote. Increase the temperature setting.   |
| Flame effect not working.    | Flame effect not activated.                                   | Ensure the flame effect is turned on via the control panel or remote.   |
| Doors do not align properly. | Uneven assembly or loose hinges.                              | Check that the unit is on a level surface. Adjust hinges if necessary (refer to assembly manual for hinge adjustment details). Ensure all support legs are properly installed and adjusted. |

For further assistance, please contact customer support.

## 7. SPECIFICATIONS

| Feature                               | Detail   |
|---------------------------------------|--|
| Brand                                 | LUXOAK   |
| Model Number                          | CFT020   |
| Color                                 | Black  |
| Material                              | Engineered Wood  |
| Product Dimensions (W x D x H)        | 70 x 14.3 x 23.8 inches  |
| Electric Fireplace Dimensions (W x H) | 36 x 18 inches   |
| Item Weight                           | 117 pounds   |
| Max Load Capacity (Top Panel)         | 250 lbs  |
| Max TV Screen Size                    | 80 inches  |
| Assembly Required                     | Yes (Full Assembly)  |
| Fireplace Features                    | 8 Flame Colors, 5 Dimmer Levels, 62°F-82°F Temperature, 1-8H Timer |



## 8. CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly and operation, please contact LUXOAK customer service. Refer to your purchase documentation for specific contact details.

**Product Care Instructions:** Wipe with Dry Cloth.

## 9. PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the LUXOAK U-shaped Legs Fireplace TV Stand, demonstrating its features such as the electric fireplace with various flame colors and LED lighting, adjustable storage, and overall design. This video provides a visual guide to the product's functionality and aesthetic.