

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR V-203 Professional Pet Grooming Clippers User Manual](#)

VGR V-203

VGR V-203 Professional Pet Grooming Clippers User Manual

Model: V-203

1. INTRODUCTION

Thank you for choosing the VGR V-203 Professional Pet Grooming Clippers. This device is designed for safe and efficient grooming of pets, featuring a low-noise motor, two-speed settings, and a durable titanium-ceramic blade. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

2. SAFETY INSTRUCTIONS

- Always keep the appliance dry. Do not use it in wet conditions unless specifically designed for wet use (this product is IPX7 waterproof, but caution is still advised).
- Keep out of reach of children and pets when not in use.
- Do not disassemble or attempt to repair the clipper yourself. Contact qualified service personnel.
- Ensure the charging cable is not damaged. Discontinue use if any damage is observed.
- Use only the provided charging cable and adapter.
- Before grooming, ensure the pet's fur is clean and free of tangles to prevent blade pulling.
- Always check the blade for damage before use.
- Avoid pressing the blade too hard against the pet's skin to prevent injury.

3. PACKAGE CONTENTS

Please check the package for the following items:

- VGR V-203 Pet Grooming Clipper
- USB Charging Cable
- Attachment Guide Combs (3mm, 6mm, 9mm, 12mm)
- Cleaning Brush
- Lubricating Oil
- User Manual



Image: VGR V-203 clipper, guide combs, and USB charging cable.

4. PRODUCT FEATURES

- **Detachable Titanium-Ceramic Blade:** Features a 30-tooth titanium-ceramic blade for smooth cutting, especially effective on thick and heavy coats.
- **Low Noise & Low Vibration:** Operates at approximately 50 dB to minimize pet stress during grooming.
- **Powerful 2-Speed Motor:** Provides substantial power and speed with stable control, offering two adjustable speeds.
- **Long Battery Life:** Equipped with a 1200mAh Li-ion battery, offering 150 minutes of runtime after a 2-hour charge.
- **IPX7 Waterproof:** Allows for easy cleaning under running water.
- **Adjustable Hair Cutting Lengths:** Includes 2 attachment guide combs for 3mm, 6mm, 9mm, and 12mm cutting lengths.
- **USB Charging:** Convenient charging via USB.



Ceramic blade



Turbo button
with LED indicator



USB charge



Guide comb



Image: Key features of the VGR V-203 clipper.

5. SETUP

5.1 Charging the Clipper

1. Connect the USB charging cable to the clipper's charging port.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., USB adapter, computer, power bank).
3. The LED indicator lights will show the charging status. A full charge takes approximately 2 hours and provides up to 150 minutes of runtime.

V-203

VGR[®]
NAVIGATOR

PROFESSIONAL PET HAIR CLIPPERS



High quality
ceramic bunk



Strong power



Low noise operation



IPX7 rating
Water resistant
all over the body



Hint light



Long battery life



Image: USB charging options and battery performance.

5.2 Attaching Guide Combs

1. Ensure the clipper is turned off.
2. Select the desired guide comb (3mm, 6mm, 9mm, or 12mm).
3. Align the guide comb with the clipper blade and slide it on until it clicks securely into place.
4. To remove, gently push the comb upwards and off the blade.



Image: Guide comb attached to the clipper.

6. OPERATING INSTRUCTIONS

6.1 Preparing Your Pet

- Bathe and dry your pet thoroughly before grooming.
- Brush out any tangles or mats from the fur. This prevents the blade from snagging and ensures a smooth cut.
- Familiarize your pet with the sound and vibration of the clipper before starting.

6.2 Grooming Process

1. Press the power button to turn on the clipper.
2. Use the speed adjustment button (if available, indicated by LED) to select the desired speed. Start with a lower speed for sensitive areas or nervous pets.
3. Hold the clipper firmly and move it in the direction of hair growth.
4. Use short, even strokes. Do not press too hard.
5. Regularly clear accumulated hair from the blade during grooming to maintain cutting efficiency.
6. Pay extra attention to sensitive areas such as around the ears, eyes, and paws.

7. After grooming, press the power button to turn off the clipper.

Your browser does not support the video tag.

Video: Demonstration of pet grooming techniques with the VGR V-203 clipper.

Your browser does not support the video tag.

Video: Short clip demonstrating the clipper in use.

Your browser does not support the video tag.

Video: Overview of the VGR V-203 pet clipper's features.

Your browser does not support the video tag.

Video: Quick demonstration of the clipper's functionality.

7. MAINTENANCE AND CLEANING

7.1 Cleaning the Blade

1. Turn off the clipper and detach the guide comb.
2. Gently press the blade release button (if applicable) or carefully pry the blade assembly off the clipper body.
3. Use the provided cleaning brush to remove any trapped hair from the blade and the clipper head.
4. Since the clipper is IPX7 waterproof, you can rinse the blade assembly and the clipper body under running water. Ensure the charging port cover is securely closed before rinsing the main body.
5. Allow all parts to air dry completely before reassembling or storing.

LI-ION POWERD

CONVENIENT AND SAFE USB CHARGING



Laptop



USB Outlet



USB Charger



Car Charger



Power Bank



Image: VGR V-203 clipper demonstrating IPX7 waterproof capability.

7.2 Lubricating the Blade

- After cleaning and drying, apply a few drops of lubricating oil to the blade teeth and the friction points between the moving and stationary blades.
- Turn on the clipper for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth. Regular lubrication ensures smooth operation and extends blade life.

7.3 Storage

- Store the clipper and its accessories in a cool, dry place, away from direct sunlight and moisture.
- Ensure the clipper is fully charged before long-term storage to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for at least 2 hours.

Problem	Possible Cause	Solution
Poor cutting performance or pulling hair.	Blades are dull, dirty, or not lubricated. Pet's fur is tangled.	Clean and lubricate the blades. Ensure pet's fur is brushed and free of tangles before grooming. Consider replacing blades if dull.
Clipper gets hot during use.	Extended continuous use. Blades are dirty or not lubricated.	Allow the clipper to cool down. Clean and lubricate the blades. Avoid prolonged continuous operation.
Clipper makes unusual noise.	Blades are not properly aligned or are damaged.	Check blade alignment. If blades are damaged, replace them. If the issue persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	V-203
Blade Material	Titanium-Ceramic
Battery Type	1200mAh Li-ion Battery
Charging Time	Approx. 2 hours
Runtime	Approx. 150 minutes
Waterproof Rating	IPX7
Noise Level	Approx. 50 dB
Dimensions (LxWxH)	23.4 x 13.4 x 6.9 cm
Weight	400 g
Power Source	Battery Powered (USB Charging)

10. WARRANTY AND SUPPORT

The VGR V-203 Pet Grooming Clippers come with a **12-month quality warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact VGR customer service. Refer to the contact information provided with your purchase or visit the official VGR website for support details.

Please retain your proof of purchase for warranty validation.