

[Manuals.plus](#) /

> [CONOPU](#) /

> CONOPU Cordless Vacuum Cleaner User Manual

## CONOPU DH-XCD02

# CONOPU Cordless Vacuum Cleaner User Manual

Model: DH-XCD02

Brand: CONOPU



## INTRODUCTION

---

Thank you for choosing the CONOPU Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

## PRODUCT OVERVIEW

---

The CONOPU DH-XCD02 is a powerful and versatile cordless vacuum cleaner designed for effective cleaning of various surfaces. It features a 160W brushless motor, two suction modes, LED lighting, and a multi-stage filtration system.



Figure 1: Main components of the CONOPU Cordless Vacuum Cleaner, including the main unit, extension tube, floor brush, crevice tool, and brush attachment.

## Key Features:

- **Powerful Suction:** 160W brushless motor with up to 22 Kpa suction power.
- **Dual Cleaning Modes:** Standard mode (up to 38 mins) and Strong mode (up to 18 mins).
- **Advanced Filtration:** 4-stage HEPA filter system captures 99.99% of dust particles.
- **Lightweight & Cordless:** Easy maneuverability for various cleaning tasks.
- **Flexible Head & LED Light:** 270° rotatable head with integrated LED light for dark areas.
- **Telescopic Tube:** Adjustable length from 51 cm to 68 cm.

## SETUP

---

## 1. Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list are present.
2. **Attach Extension Tube:** Connect the extension tube to the main vacuum body until it clicks into place.
3. **Attach Floor Brush:** Connect the floor brush to the other end of the extension tube. Ensure it is securely fastened.
4. **Install Battery:** Insert the battery pack into the designated slot on the main unit. Ensure it is fully seated.
5. **Install Dustbin and Filters:** Ensure the dustbin is correctly attached and the HEPA filter and sponge filter are properly installed inside the dustbin. Refer to the "Maintenance" section for filter installation details.

## 2. Initial Charging

Before first use, fully charge the vacuum cleaner's battery. The battery indicator will show the charging status.

- Connect the charger to the charging port on the battery or the wall mount.
- Plug the charger into a power outlet.
- Charging typically takes 4-5 hours for a full charge.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

### 2. Selecting Suction Mode

# Choose Modes



Figure 2: The vacuum cleaner offers two suction modes for different cleaning needs.

The vacuum cleaner offers two suction modes:

- **Standard Mode (15 Kpa):** Ideal for daily cleaning of dust, crumbs, and light debris. Provides up to 38 minutes of runtime.
- **Strong Mode (25 Kpa):** For deeper cleaning, tackling stubborn dirt, pet hair, and larger particles. Provides up to 18 minutes of runtime.

Press the mode selection button to switch between these two modes.

### 3. Using Attachments

# Multiple Suction Nozzles

Different nozzles fit for different tasks.



Figure 3: Different nozzles are included to fit various cleaning tasks, from floors to tight spaces and upholstery.

The vacuum cleaner comes with multiple suction nozzles for different tasks:

- **Floor Brush:** For general floor cleaning (hardwood, tile, low-pile carpets). Features an integrated LED light to illuminate dark areas.
- **Crevice Tool:** For narrow gaps, corners, and hard-to-reach areas like car interiors or between sofa cushions.
- **Brush Attachment:** For cleaning upholstery, curtains, keyboards, and delicate surfaces.

To change attachments, press the release button on the current attachment and pull it off. Then, align the new attachment and push it on until it clicks into place.

# Bigger Brush

Big Brush, More Effective LED light, no Residue

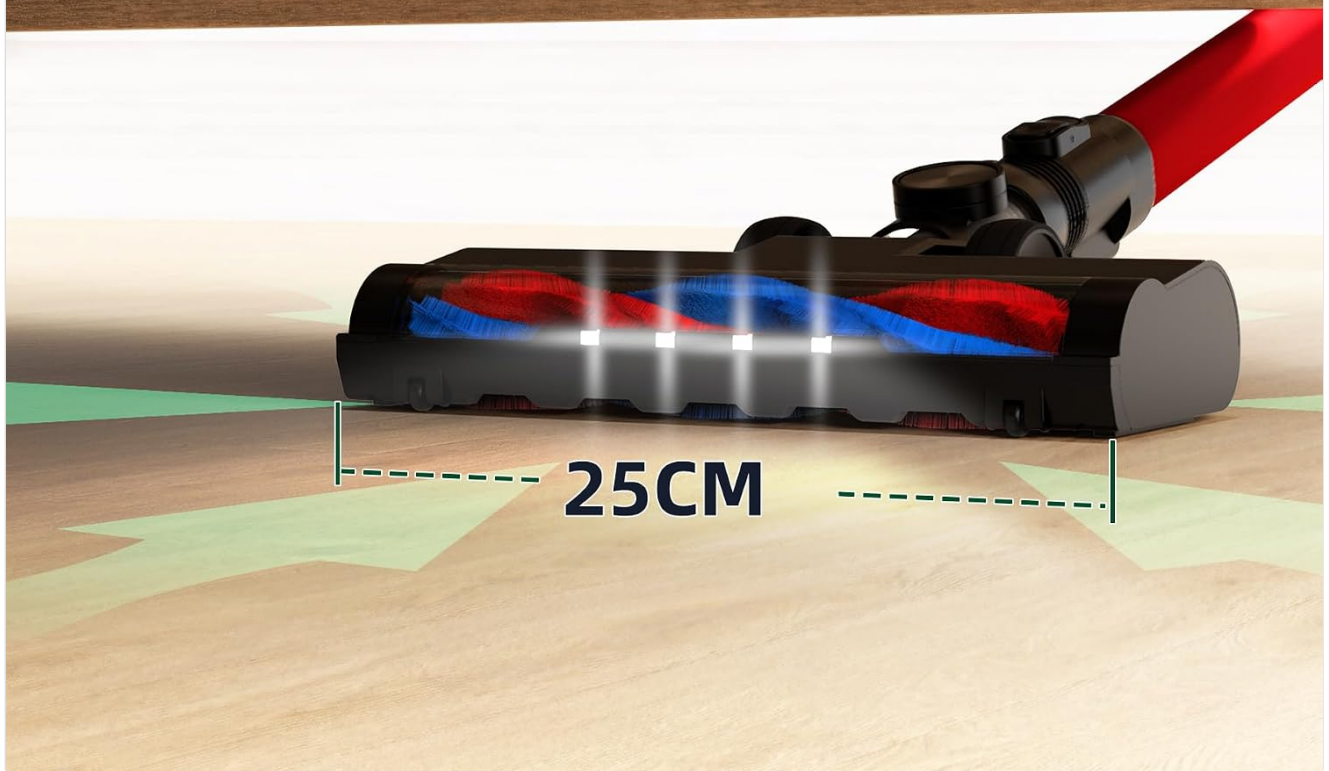


Figure 4: The wider brush head (25cm) with LED lights ensures thorough cleaning and visibility under furniture.



Figure 5: The powerful suction effectively cleans various types of debris, including dust, pet hair, and food particles.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 1. Emptying the Dustbin

- Press the dustbin release button to detach it from the main unit.
- Open the dustbin lid and empty the contents into a trash can.
- Close the lid and reattach the dustbin to the vacuum cleaner.

### 2. Cleaning Filters

# 4 in 1 Filter System

Clean 99.99% of pollutants in your home as small as 0.1 um particles

**1. Heat Air Exhaust**

**2. HEPA Filtering**

**3. Sponge Filter**

**4. Stainless Steel Sieve**



Figure 6: The 4-in-1 filter system ensures thorough air purification.

The vacuum cleaner features a 4-stage HEPA filter system. Clean the filters regularly to maintain suction power and air quality.

- **HEPA Filter & Sponge Filter:** Remove these filters from the dustbin. Tap them gently to remove loose dust. If heavily soiled, rinse them under running water. Ensure they are completely dry before re-installing (allow 24-48 hours for air drying).
- **Stainless Steel Sieve:** Clean any debris from the metal mesh.

**Important: Do not operate the vacuum cleaner without all filters properly installed and completely dry.**

### 3. Cleaning the Brush Roll

Periodically check the brush roll in the floor brush for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. The brush roll can usually be removed for easier cleaning by unlocking a latch on the side of the brush head.

## TROUBLESHOOTING

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Vacuum cleaner does not turn on.	Battery is not charged or not properly installed.	Charge the battery fully. Ensure the battery is securely inserted.
Low suction power.	Dustbin is full. Clogged filters. Blockage in the tube or brush head.	Empty the dustbin. Clean or replace filters. Check for and remove any blockages.
Brush roll not spinning.	Hair or debris tangled around the brush roll. Brush roll is jammed.	Clean the brush roll, removing any tangled hair or debris. Check for obstructions.
Short runtime.	Battery not fully charged. Operating in Strong mode. Battery degradation.	Ensure battery is fully charged. Use Standard mode for longer runtime. If battery life significantly decreases, consider battery replacement.

If the problem persists after trying these solutions, please contact customer support.

## **SPECIFICATIONS**

---

# 160W

## Brushless Motor Longer Span Life



Figure 7: The powerful 160W brushless motor provides efficient and long-lasting performance.

Feature	Detail
Brand	CONOPU
Model Number	DH-XCD02
Power/Wattage	160 Watts
Voltage	160 Volts
Suction Power	Up to 25 Kpa (Strong Mode), 15 Kpa (Standard Mode)
Runtime	Up to 38 minutes (Standard Mode), 18 minutes (Strong Mode)
Number of Speeds	2
Filter Type	4-stage HEPA Filter System
Special Features	Cordless, Lightweight, LED Light, 270° Rotation, Telescopic Tube

Feature	Detail
Item Weight	3.11 kg (3110 Grams)
Color	Red/Black

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or contact CONOPU customer service through the retailer where you purchased the product. Please have your model number (DH-XCD02) and purchase date ready when contacting support.

For further assistance, you may also visit the official CONOPU website or contact their support channels as listed on the product packaging.