

Redsack WP-007

Redsack 5-in-1 Electric Wine Decanter with Aerator Instruction Manual

Model: WP-007

- Setup
- Operating Instructions
- Maintenance
- Troubleshooting
- Specifications
- Support

1. SETUP

Before first use, ensure the device is fully charged using the provided Type-C charging cable. A full charge allows dispensing of approximately 66 bottles of 750ml wine.

1.1 Attaching the Dispensing Tube and Adapter

1. Unscrew the bottom part of the dispenser by turning it counter-clockwise.
2. Select the appropriate silicone adapter (18-20mm, 21-23mm, or 28-30mm) that best fits your bottle's neck.
3. Insert the selected adapter into the dispenser's base.
4. Connect the retractable stainless steel tube to the adapter. Ensure it is securely fitted.
5. Screw the bottom part back onto the dispenser by turning it clockwise until secure.



Accurate Dispensing

Automatically dispense from 1 to 999 ml of liquor, the error margin within ± 1 ml



vs



Image: The Redsack Electric Wine Decanter with its dispensing tube and selected adapter, ready for insertion into a wine bottle. This image illustrates the device's components and how they fit together.



Image: A step-by-step diagram demonstrating the assembly of the dispensing tube and adapter onto the RedSack Electric Wine Decanter. This visual guide helps users correctly prepare the device for use.


1.2 Inserting into Bottle

Carefully insert the assembled dispenser into the neck of your wine or liquor bottle. Ensure the tube extends to the bottom of the bottle for complete liquid extraction.



Aerating Wine in 1Sec

it helps your wine breathe at the touch of a button, unlocking its full aroma and taste.

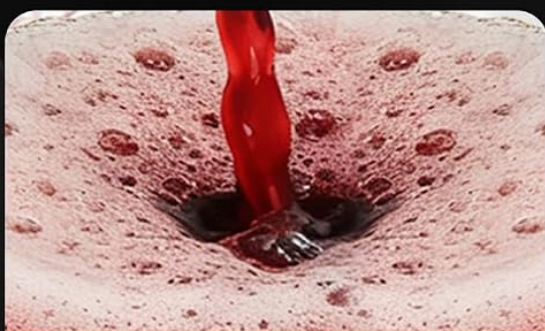

After

vs



Before

Image: The Redsack Electric Wine Decanter securely inserted into the neck of a wine bottle, demonstrating proper setup before dispensing. The device sits flush with the bottle opening.

2. OPERATING INSTRUCTIONS

The Redsack Electric Wine Decanter offers precise and effortless dispensing with integrated aeration.

2.1 Powering On and Setting Volume

Press and hold the power button (usually the main button on top) for 2 seconds to turn on the device. The digital display will show the current volume setting in milliliters. Use the '+' and '-' buttons to adjust the desired dispensing volume from 1ml to 999ml.



Image: Close-up of the Redsack Electric Wine Decanter's digital display, showing the volume setting in milliliters. The '+' and '-' buttons for adjustment are visible.

2.2 Dispensing Wine

Place your glass under the spout. The device features a sensor that detects the glass. Once detected, the wine will begin to dispense the pre-set volume. The device will automatically stop when the set volume is reached.

Effortless Pouring

This automatic pourer makes serving drinks effortless

VS

Hand Fatigue

Out Of Control

Image: The Redsack Electric Wine Decanter actively dispensing wine into a glass, highlighting the automatic pouring function. The wine flows smoothly from the spout.

2.3 Aeration Function

To activate the aeration function, press the 'A' button on the device. This will enhance the wine's flavor and aroma as it is dispensed. The aeration can be turned on or off as desired.



Image: Wine being dispensed with visible aeration bubbles, demonstrating the device's ability to enhance flavor. The aerated wine appears frothy in the glass.

2.4 Continuous Pour

For a continuous pour, simply hold the glass under the sensor zone without setting a specific volume. The device will continue to dispense until the glass is removed or the power button is pressed again.

2.5 Video Demonstration

Your browser does not support the video tag.

Video: A short demonstration of the Redsack 5-in-1 Electric Wine Decanter with Aerator in action, showcasing its dispensing capabilities. This video provides a visual guide to operating the device.

3. MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your Redsack Electric Wine Decanter.

3.1 Cleaning the Device

1. Remove the dispenser from the bottle.
2. Detach the dispensing tube and adapter.
3. Immerse the tube in clean water and repeatedly dispense until the water runs clear, indicating the dispenser is fully cleaned.
4. Wipe the exterior of the device with a soft, damp cloth. Do not submerge the main unit in water.

Easy To Clean

Immerse the tube in clean water and repeatedly dispense until the water runs clear, indicating the dispenser is fully cleaned.



Squeeze hard



Image: Illustration of the cleaning process for the Redsack Electric Wine Decanter, showing water being dispensed through the tube to flush out residues. This image emphasizes the ease of cleaning.

4. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to the Type-C charger and allow sufficient time for charging.
- **No liquid dispensed:** Check that the dispensing tube is correctly inserted and extends to the bottom of the bottle. Ensure the bottle contains enough liquid.
- **Inaccurate dispensing volume:** Verify the volume setting on the digital display. If issues persist, perform a cleaning cycle to ensure no blockages.
- **Display not functioning:** If the digital display is not working despite charging, contact customer support for assistance.

5. SPECIFICATIONS

Brand	Redsack
Model Name	Wine Dispenser (WP-007)
Material	Plastic, Stainless Steel
Color	Red
Capacity	1-999 Milliliters (Adjustable)
Product Dimensions	4.2"W x 2.1"H
Item Weight	13.7 ounces
Batteries	1 A battery required (included)
Special Features	Adjustable Stopper, Custom Quantitation Settings, Quantitative adjustment, Lever sealed switch, Flow digital display, Retractable stainless steel tube, Touch settings button

6. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact Redsack customer service. While specific warranty details are not provided in this manual, Redsack is known for responsive customer service and product replacement for verified issues.

Please refer to the contact information provided with your product packaging or visit the official Redsack website for the most up-to-date support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C9HL82PZ>

More documents and user manuals: **<https://manuals.plus/>**