

[Manuals.plus](#) /

› [SoBuy](#) /

› SoBuy Ultra-Thin Shoe Cabinet FSR137-L-HG User Manual

SoBuy FSR137-L-HG

SoBuy Ultra-Thin Shoe Cabinet with 3 Flap Doors - Model FSR137-L-HG

Instruction Manual

1. INTRODUCTION

Thank you for purchasing the SoBuy Ultra-Thin Shoe Cabinet, Model FSR137-L-HG. This manual provides essential information for the safe assembly, operation, and maintenance of your new shoe cabinet. Please read these instructions carefully before assembly and retain them for future reference.



Image 1.1: The SoBuy Ultra-Thin Shoe Cabinet (Model FSR137-L-HG) in a typical entryway setting, showcasing its slim profile and three flap doors.

2. SAFETY INFORMATION

Important: Always follow the detailed assembly instructions provided with your product. Keep the area around the shoe cabinet clear during assembly to prevent accidents. Once assembled, ensure the cabinet is stable and securely anchored to prevent tipping hazards. An anti-tipping device is included and must be installed.

For cleaning, wipe only with a damp cloth. Do not use harsh chemicals or excessive water, as this may damage the finish and compromise the cabinet's stability.

3. SETUP AND ASSEMBLY

This shoe cabinet requires assembly. All necessary parts are numbered, and illustrated instructions are included in the packaging. Please ensure all components are present before beginning assembly.

1. **Unpack Components:** Carefully unbox all parts and hardware. Verify against the parts list in the included manual.
2. **Prepare Workspace:** Choose a clear, flat, and spacious area for assembly. Lay down a blanket or cardboard to protect the furniture pieces and your floor.
3. **Follow Instructions:** Assemble the cabinet frame according to the step-by-step illustrations. Ensure all screws and fasteners are tightened securely.
4. **Install Flap Mechanisms:** Attach the shoe flap mechanisms and doors as directed. Test their operation to ensure smooth movement.
5. **Attach Anti-Tipping Device:** For safety, it is crucial to secure the cabinet to the wall using the provided anti-tipping device. Follow the specific instructions for wall mounting.



Image 3.1: The shoe cabinet with its three flap doors open, illustrating the internal storage compartments for footwear.

4. OPERATING INSTRUCTIONS

The SoBuy shoe cabinet is designed for efficient shoe storage in narrow spaces.

- **Opening Flap Doors:** Gently pull the handle on each flap door to open it downwards. The door will pivot to reveal the shoe compartments.
- **Storing Shoes:** Place shoes into the designated slots within each flap. The cabinet can accommodate various shoe types, including sneakers, sandals, and heels.
- **Adjustable Dividers:** Each flap compartment features an adjustable or removable divider. For larger shoes, such as boots or high-top sneakers, the internal divider can be removed to create more vertical space.
- **Closing Flap Doors:** Push the flap door upwards until it clicks securely into its closed position.



Image 4.1: A detailed view of the internal flap mechanism, showing how shoes are stored and the adjustable divider.

5. MAINTENANCE AND CARE

To ensure the longevity and appearance of your shoe cabinet, follow these simple care guidelines:

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive water, as these can damage the particle board finish.

- **Spills:** Clean up spills immediately with a dry cloth to prevent moisture absorption and potential damage.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Placement:** Avoid placing the cabinet in direct sunlight or near heat sources, which can cause fading or warping.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Screws are loose; cabinet not properly leveled; anti-tipping device not installed.	Ensure all assembly screws are tightened. Place on a level surface. Install the anti-tipping device securely to the wall.
Flap doors do not close properly or are stiff.	Mechanism misaligned; obstruction; hardware not correctly installed.	Check for any obstructions. Re-check the installation of the flap mechanisms according to the assembly instructions. Ensure no shoes are blocking the closing path.
Shoes do not fit in compartments.	Internal divider is in place for larger shoes.	Remove the internal divider within the flap compartment to create more vertical space for taller footwear.

7. SPECIFICATIONS

Model: FSR137-L-HG

Brand: SoBuy

Material: Particle Board (PB)

Color: Grey

Dimensions (W x D x H): 60 cm x 23 cm x 115 cm (23.6 in x 9.1 in x 45.3 in)

Weight: Approximately 13.6 kg (29.9 lbs)

Max. Total Load Capacity: 25 kg (55 lbs)

Shoe Capacity: Up to 12 pairs (depending on shoe size and style, with adjustable dividers)

Number of Flap Doors: 3

Assembly Required: Yes



Image 7.1: Dimensional diagram of the SoBuy shoe cabinet, showing its height (115cm), width (60cm), and depth (23cm).

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. SoBuy products are designed for quality and durability.

If you encounter any issues or have questions regarding your SoBuy shoe cabinet, please contact the retailer from whom you purchased the product or visit the official SoBuy website for customer support options. Please have your model number (FSR137-L-HG) and purchase details ready.

[Visit the SoBuy Store on Amazon](#)

© 2026 SoBuy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question