

[Manuals.plus](#) /

> [Xilent](#) /

> Silvercrest 4-in-1 Garment Steamer Instruction Manual

## Xilent 373007

# Silvercrest 4-in-1 Garment Steamer

Model: 373007

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Silvercrest 4-in-1 Garment Steamer. Please read these instructions thoroughly before first use and retain them for future reference. This appliance is designed for steaming, ironing, fabric brushing, and lint removal from textiles.

## SAFETY INSTRUCTIONS

---

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steamer out of reach of children and pets.
- Always unplug the appliance from the power outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Allow the appliance to cool completely before storing.
- Do not operate the appliance if it has a damaged cord or plug, or if it has been dropped or damaged in any manner.
- Use the appliance only for its intended purpose as described in this manual.

## PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items are present and in good condition:

- Silvercrest 4-in-1 Garment Steamer unit
- Fabric brush attachment
- Lint brush attachment (integrated with fabric brush)

- Measuring cup (if included, common for steamers)
- Instruction Manual

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your garment steamer:



*Image: Side view of the Silvercrest 4-in-1 Garment Steamer, showing its ergonomic handle and steam plate.*



*Image: Top-down view of the steamer, highlighting the transparent water tank and fill cap.*



*Image: Close-up of the multi-purpose brush attachment, featuring both bristles for fabric and a red lint pad.*

- **Steam Plate:** The heated surface that emits steam.
- **Water Tank:** Removable reservoir for water.
- **Power Button/Steam Trigger:** Activates the steamer and steam release.
- **Indicator Light:** Shows power status or heating readiness.
- **Handle:** For comfortable grip during use.
- **Fabric Brush:** Attaches to the steam plate for deeper penetration and lint removal.

## SETUP

---

1. **Unpack:** Remove all packaging materials and labels from the appliance.
2. **Fill Water Tank:**

- Ensure the steamer is unplugged.
  - Open the water tank cap.
  - Fill the water tank with distilled or demineralized water up to the MAX fill line. Do not overfill.
  - Close the water tank cap securely.
3. **Attach Accessories (Optional):** If using the fabric or lint brush, align it with the steam plate and press firmly until it clicks into place.
  4. **Position Garment:** Hang the garment on a hanger or hold it taut.

## OPERATING INSTRUCTIONS

---

### General Steaming

1. **Power On:** Plug the steamer into a suitable electrical outlet. The indicator light will illuminate, indicating the unit is heating up.
2. **Pre-heating:** Allow the steamer to pre-heat for approximately 30-60 seconds until the indicator light changes or turns off (refer to specific model behavior).
3. **Steam Application:** Hold the steamer upright and gently press the steam trigger. Move the steam plate slowly over the fabric, from top to bottom.
4. **Ironing Function:** For a more pressed look, gently press the steam plate against the fabric while steaming.
5. **Finishing:** Release the steam trigger when finished. Unplug the appliance and allow it to cool.

### Using the Fabric/Lint Brush

Attach the brush accessory before turning on the steamer. The brush helps to open fabric weaves for better steam penetration and can remove lint, pet hair, and small debris.

- For fabric brushing: Move the steamer with the brush attachment over the fabric in a downward motion.
- For lint removal: Use the red lint pad section of the brush attachment to gently sweep over the fabric.



*Image: A woman demonstrating the use of the Silvercrest garment steamer on a hanging blue shirt, illustrating the ease of use without an ironing board.*

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your steamer.

1. **Unplug and Cool:** Always unplug the steamer and allow it to cool completely before cleaning.
2. **Empty Water Tank:** Remove the water tank and empty any remaining water.
3. **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. **Clean Steam Plate:** Gently wipe the steam plate with a damp cloth. For mineral buildup, use a cloth dampened with white vinegar, then wipe with clean water.
5. **Descaling (if necessary):** If you notice reduced steam output or mineral residue, a descaling process may be needed. Fill the tank with a 50/50 mixture of white vinegar and distilled water. Run the steamer until half the solution is used, then unplug and let it sit for 30 minutes. Repeat until the tank is empty. Rinse the tank thoroughly with clean water.
6. **Store:** Store the steamer in a dry place, away from direct sunlight and moisture.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty. Appliance not heated sufficiently. Mineral buildup.	Refill water tank. Allow more time for pre-heating. Perform descaling procedure.
Water leaking from steam plate.	Overfilled water tank. Appliance not fully heated. Mineral buildup.	Do not overfill. Wait until indicator light shows readiness. Perform descaling procedure.
Appliance not turning on.	Not plugged in. Power outlet issue.	Ensure plug is fully inserted. Test outlet with another appliance.

## SPECIFICATIONS

---

**Model:** 373007

**Brand:** Xllent (as per product data, often sold under Silvercrest)

**Manufacturer:** Kompernass

**Power:** 1000W

**Voltage:** 220-240V~

**Colour:** Grey

**Dimensions (approx.):** 40.29 x 10.7 x 10.1 cm

**Weight (approx.):** 990 g

## WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact the retailer or manufacturer's customer service department using the contact information provided with your purchase documentation.

*Please retain your proof of purchase for all warranty claims.*



© 2023 Xlent. All rights reserved.