

Broonel Active Digital Stylus

Broonel Active Digital Stylus User Manual

Model: Active Digital Stylus

1. INTRODUCTION

This user manual provides detailed instructions for the setup, operation, and maintenance of your Broonel Active Digital Stylus. Please read this manual thoroughly before using the stylus to ensure optimal performance and longevity. The Broonel Active Digital Stylus is designed to provide a precise and responsive writing and drawing experience on compatible iOS and Android tablets and smartphones. It features a 2.3mm adjustable tip for enhanced accuracy.

2. PRODUCT OVERVIEW



Figure 2.1: Broonel Active Digital Stylus. This image displays the silver stylus with its sleek design, demonstrating its use for drawing a line, highlighting its precision capabilities.



Figure 2.2: Stylus Features. A detailed view of the stylus highlighting the LED power indicator/switch and the fine 2.3mm adjustable tip, crucial for precise input.

2.1 Key Features

- **Compatibility:** Designed for use with iOS and Android tablets and smartphones.
- **Precision Tip:** Features a 2.3mm active tip for accurate writing and drawing.
- **Adjustable Nib:** Allows for varying sensor depth, leading to more precise field depth.
- **Plug and Play:** No Bluetooth pairing required; simply insert the battery and use.
- **Power Source:** Operates on 1 x AAA battery (included).

3. SETUP

3.1 Package Contents

Before proceeding, please ensure all items are present in the package:

- 1 x Broonel Active Digital Stylus

- 1 x AAA Battery

3.2 Battery Installation

1. Locate the battery compartment on the stylus, typically at the top end.
2. Gently twist or pull to open the battery compartment cover.
3. Insert the provided AAA battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The stylus is now ready for use. No Bluetooth pairing or software installation is required.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on the stylus, press the LED ON/OFF switch located on the body of the stylus. The LED indicator will illuminate.
- To power off the stylus, press the LED ON/OFF switch again. The LED indicator will turn off.

4.2 Using the Stylus

Once powered on, the stylus can be used directly on the screen of your compatible tablet or smartphone. Hold the stylus like a pen and interact with your device's touch screen for writing, drawing, or navigation.



Figure 4.1: Stylus in Use on Tablet. This image shows a hand using the Broonel stylus to interact with a tablet, demonstrating its application in design software for precise input.



Figure 4.2: Versatile Usage. The stylus is depicted alongside a smartphone and tablet, illustrating its compatibility across various mobile devices for creative and productive tasks.

4.3 Adjusting the Nib

The stylus features an adjustable nib to optimize sensitivity and precision for different screen types and user preferences. Gently twist the nib to adjust its depth until the desired responsiveness is achieved.

5. MAINTENANCE

5.1 Cleaning

- To clean the stylus body, use a soft, dry, lint-free cloth.
- For the nib, gently wipe with a slightly damp cloth if necessary, ensuring no moisture enters the stylus body.
- Do not use harsh chemicals, abrasive cleaners, or solvents.

5.2 Storage

Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the AAA battery to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stylus not responding	Battery is dead or incorrectly installed. Stylus is not powered on.	Replace the AAA battery. Ensure the battery is inserted with correct polarity. Press the ON/OFF switch to power on the stylus.

Problem	Possible Cause	Solution
Inaccurate or inconsistent input	Nib adjustment needed. Screen protector interference.	Gently adjust the nib by twisting it. Try using the stylus without a screen protector to check for interference.
LED indicator not lighting up	Battery is dead. Stylus is not powered on.	Replace the AAA battery. Press the ON/OFF switch.

7. SPECIFICATIONS

Feature	Detail
Brand	Broonel
Model	Active Digital Stylus
Color	Grey
Tip Size	2.3mm (Adjustable)
Power Source	1 x AAA Battery
Compatibility	iOS and Android Tablets/Smartphones
ASIN	B0C9JV2TRV

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details are typically provided with your purchase documentation. Please refer to the warranty card or contact your retailer for information regarding the warranty period and terms.

8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or inquiries about your Broonel Active Digital Stylus, please contact Broonel customer support through their official website or the contact information provided with your product packaging.

Note: Always refer to the official Broonel website or product packaging for the most up-to-date support contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C9JV2TRV>

More documents and user manuals: <https://manuals.plus/>