



Manuals.plus /

› Hike Crew /

› Hike Crew 13' x 13' Screened Roof Pop-Up Gazebo Screen Tent Instruction Manual

Hike Crew B0C9KSSXRT

Hike Crew 13' x 13' Screened Roof Pop-Up Gazebo Screen Tent Instruction Manual

Model: B0C9KSSXRT

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Hike Crew 13' x 13' Screened Roof Pop-Up Gazebo Screen Tent. Please read this manual thoroughly before use to ensure proper setup and safe operation.


SAFETY INFORMATION

- Always ensure the gazebo is securely anchored using all provided stakes and ropes, especially in windy conditions.
- Do not use the gazebo near open flames or heat sources.
- Do not leave the gazebo unattended in extreme weather conditions (e.g., heavy rain, strong winds, snow).
- Keep children and pets away during assembly and disassembly.
- Inspect all components for damage before each use. Do not use if any parts are damaged.
- This gazebo is designed for temporary outdoor shelter. It is not intended for permanent installation.

PARTS LIST

Before beginning assembly, verify that all components listed below are present and undamaged.

WHAT'S INCLUDED?

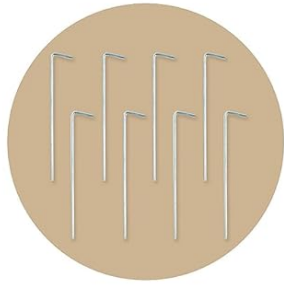

STAKES X14


**ROOF COVER
SCREEN GAZEBO**




ROPES X7



CARRY BAG

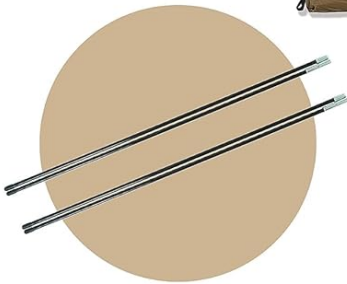

METAL POLES X2

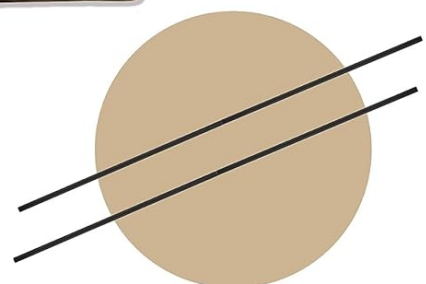

AWNING POLES X2



Figure 1: Included Components. This image displays all items that should be present in your package: the main screen gazebo structure, the separate roof cover, 14 stakes for anchoring, 7 ropes for stability, 2 metal poles, 2 awning poles, and a convenient carry bag for transport and storage.

- Screen Gazebo Structure (1)
- Roof Cover (1)
- Deluxe Tent Stakes (14)
- Ropes (7)
- Door Poles (2)
- Metal Poles (2)
- Storage Carry Bag (1)

SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your pop-up gazebo. It is recommended to have at least two people for initial setup, though single-person setup is possible.

SIMPLE SETUP



Figure 2: Simple Setup Steps. This diagram illustrates the four primary steps for assembling the gazebo: extending the side panels, pushing up the roof, inserting support poles, and securing the structure with stakes and ropes.

- Step 1: Expand the Frame.** Lay the folded gazebo frame on a flat, open surface. Gently pull the straps located in the center of the side panels outward to begin expanding the structure.
- Step 2: Raise the Roof.** Once the base is partially expanded, push the top panel of the gazebo frame upward. Continue pushing until the frame locks into its fully extended position.
- Step 3: Insert Support Poles.** Locate the designated points for the metal poles. Insert the provided metal poles to stabilize the gazebo structure. Ensure they are securely seated.
- Step 4: Secure the Gazebo.** Use the included ropes and stakes to firmly secure the gazebo to the ground. Attach ropes to the designated loops on the gazebo and stake them into the ground at an angle for maximum stability. Ensure all 14 stakes and 7 ropes are utilized.
- Step 5: Attach Roof Cover.** Place the separate roof cover over the top of the gazebo frame. Secure it using the integrated Velcro or ties to ensure it is taut and provides full coverage.
- Step 6: Utilize Wind Panels/Awning (Optional).** If desired, attach the zippered wind panels for privacy or protection from elements. The door panel can be converted into an awning using the two awning poles.

OPERATING YOUR GAZEBO

Your Hike Crew gazebo is designed for versatility and comfort in various outdoor settings.



Figure 3: Gazebo Features. This image highlights key operational features including stake holes for stability, a built-in hook for hanging a lamp, reinforced corners for durability, a high-quality two-sided zipper for entry, the ability to convert a wind panel into an awning, and integrated roll-up panels for weather protection.

- **Screened Panels:** The high-quality black mesh paneling provides excellent airflow while keeping insects out.
- **UV50+ Canopy & Wind Panels:** For protection from sun, wind, or privacy, attach the separate roof cover and zippered wind panels. These are made from UV 50+, waterproof PU 2000mm fabric.
- **Awning Function:** The door panel can be converted into an awning. Use the two provided awning poles to prop up the panel, extending your shaded area.
- **Lamp Hook:** A built-in hook is provided inside the gazebo for hanging a portable lamp or light source.
- **Roll-Up Panels:** The integrated panels can be rolled up and secured to allow for maximum airflow and visibility, or rolled down for protection.

MAINTENANCE

- **Cleaning:** Clean the fabric with a mild soap and water solution. Do not use harsh detergents or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Storage:** Ensure the gazebo is completely dry before folding and storing it in the carry bag. Store in a cool, dry place away from direct sunlight to prevent mildew and fabric degradation.
- **Inspection:** Regularly inspect the frame, fabric, zippers, and seams for any signs of wear, tear, or damage. Address minor issues promptly to prevent further damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly staked or ropes are loose.	Ensure all stakes are fully inserted into the ground and ropes are taut. Re-position stakes if necessary.
Difficulty expanding/collapsing the frame.	Frame joints are stiff or misaligned.	Apply gentle, even pressure. Check for any obstructions. Lubricate joints if necessary (use silicone spray).
Water pooling on the roof.	Roof cover not taut or frame not fully extended.	Ensure the frame is fully locked into place and the roof cover is stretched tightly and secured.
Zippers are sticking.	Dirt or debris in zipper teeth.	Clean zipper teeth with a brush. Apply a zipper lubricant or wax.

SPECIFICATIONS

- **Product Dimensions:** 156"L x 156"W x 90"H (13' x 13' x 7.5')
- **Standing Room:** Approximately 110 sq ft
- **Material:** Metal frame, Polyurethane (PU) coated fabric (210 Denier Poly-Oxford), Fiberglass poles
- **Color:** Brown
- **UV Protection:** UV 50+
- **Water Resistance:** Waterproof (PU 2000mm)
- **Item Weight:** 51.7 pounds
- **Collapsed Dimensions:** 9.8" x 9.8" x 59"
- **Assembly Required:** Yes

ROOM FOR UP TO 10 PEOPLE



Figure 4: Product Dimensions. This image provides a visual representation of the gazebo's dimensions, including its 13-foot by 13-foot base, 7.5-foot peak height, and 6.5-foot side panel width, indicating ample space for up to 10 people.

WARRANTY AND SUPPORT

Hike Crew products are designed for durability and performance. For specific warranty information, please refer to the documentation included with your purchase or visit the official Hike Crew website.

For customer support, technical assistance, or to inquire about replacement parts, please contact Hike Crew customer service. Contact information can typically be found on the product packaging or the brand's official website.

You can also visit the Hike Crew Store on Amazon for more information and related products.

