

DOLPHIN PLAYGROUND T B0C9KYVNL4

Dolphin Playground Wooden Swing Set Instruction Manual

Model: B0C9KYVNL4

1. PRODUCT OVERVIEW

The Dolphin Playground Wooden Swing Set is an outdoor playset designed for children aged 2-9. It includes a 6-foot slide, two belt swings, a fort with a canopy, a geometric climbing wall, and a sand pit area. The playset is constructed from high-quality cedar wood, offering durability and resistance to weather conditions.

- **Unique Design:** Features a geometric climbing wall and a sand pit area beneath the fort.
- **Components:** Includes a 6 ft slide, 2 belt swings, fort with canopy, geometric climbing wall, and sandbox.
- **Dimensions:** Fully assembled, the playset measures approximately 103.03 inches (W) x 105.90 inches (L) x 90.04 inches (H).
- **Material:** Made from premium cedar wood, known for its waterproof, anti-corrosion, and anti-crack properties.



Image: Overall dimensions of the Dolphin Playground Wooden Swing Set, showing height, width, and length, along with age recommendation (2-9 years) and load-bearing capacity (400 lbs).

2. SAFETY INFORMATION

Prioritize safety during assembly and use. Adult supervision is required at all times when children are using the playset. Ensure the playset is installed on level ground with adequate safety surfacing. Regularly inspect all components for wear and tear.

- **Age Range:** Suitable for children aged 2-9 years.
- **Weight Capacity:** Swing hangers provide a load capacity of 400 pounds.
- **Secure Installation:** Utilize the provided double ground anchors to prevent wobbling and ensure stability.
- **Rope Safety:** The safe rope design helps prevent finger injury or hair entanglement.
- **Wood Integrity:** Crack resistance bolts on the A-frame legs help prevent wood from breaking.
- **Clearance Area:** Maintain a minimum clear zone of 6 feet around all sides of the playset.



Image: Close-up of the swing set's safety features, highlighting the durable ropes designed to prevent injury and the double ground anchors for enhanced stability.

SAFETY SURFACING REQUIREMENTS

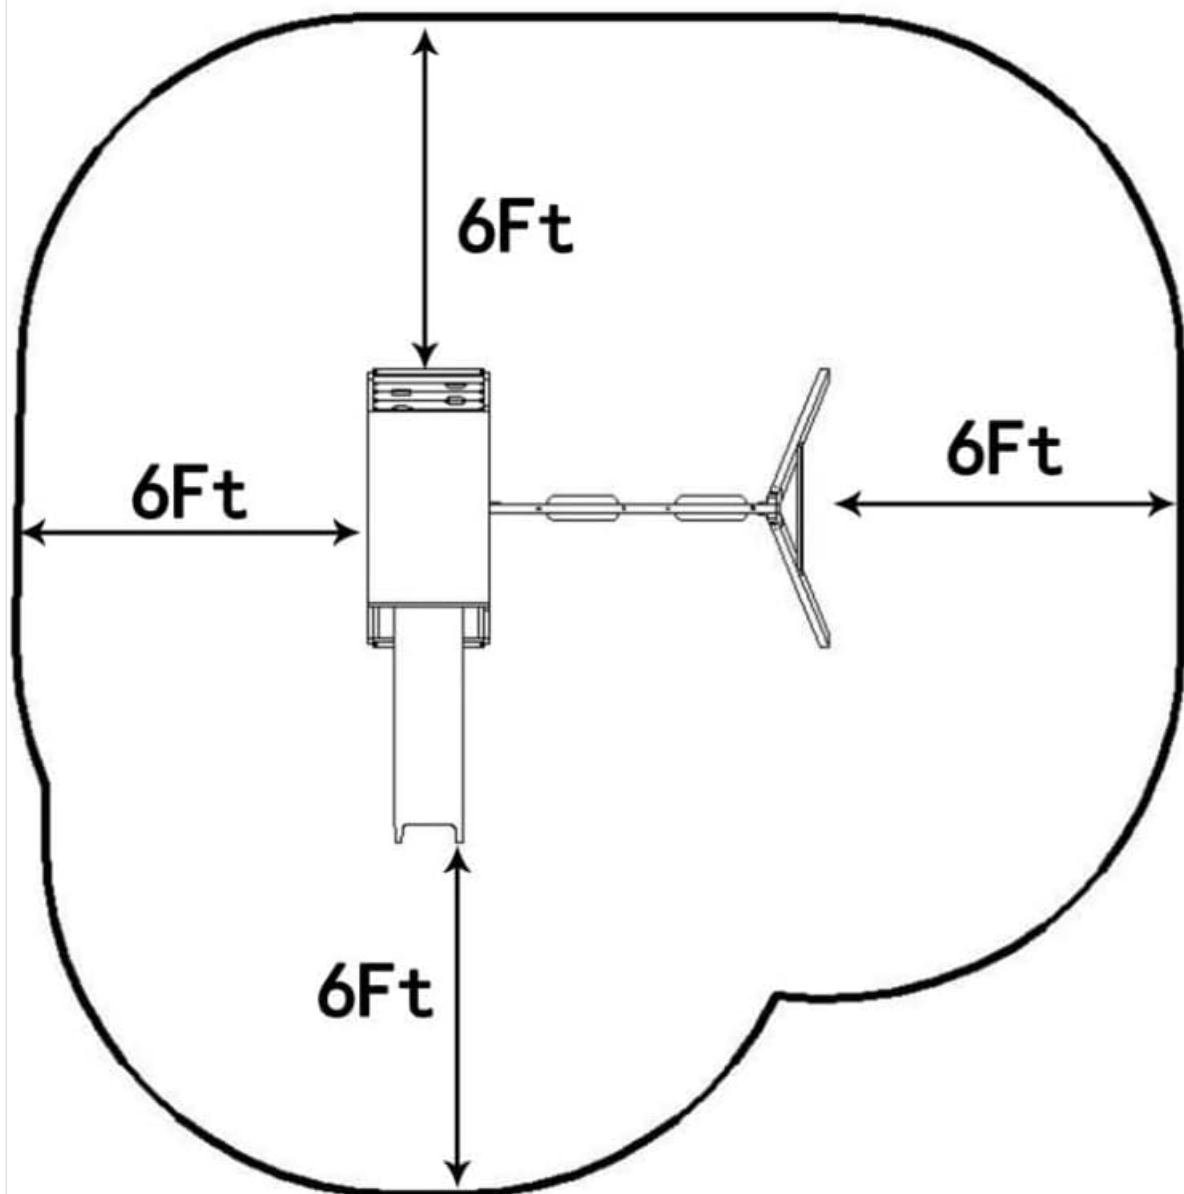


Image: A diagram illustrating the recommended safety surfacing requirements, indicating a minimum 6-foot clearance zone around the entire playset for safe use.

3. SETUP AND ASSEMBLY

Assembly requires careful attention to detail. It is recommended to have at least two adults for assembly. All hardware is organized according to building steps, and a detailed 3D building plan is provided to simplify the process. An additional 10% of spare parts are included in the hardware package.

- **Organized Packaging:** Hardware is packed by building step to prevent confusion.
- **Spare Parts:** 10% extra spare parts are included.
- **Instructions:** Follow the detailed 3D building plan for easier assembly.
- **Tools:** A power drill is highly recommended for assembly. Consider pre-drilling pilot holes for self-tapping screws to prevent wood splitting.



Discover Fun With Children

Image: A person using a power drill to assemble the playset, demonstrating the ease of installation with hardware organized by steps.

Simpler & Faster

 
Installation Mode

Where are we different?

- According to the **building steps to pack** the hardware.
- Add **10% more spare parts** into the hardware package.
- Detailed **3D building plan** provided with the product.



3D Installation Manual



Step1



Step2



Step3



Step4

.....

Image: A visual representation of the organized hardware packaging, sorted by building steps, and the availability of a detailed 3D installation manual to assist with assembly.

4. OPERATING INSTRUCTIONS

The Dolphin Playground Wooden Swing Set offers multiple play activities. Ensure children understand how to use each component safely before playing.

4.1. Swings

- Sit centered on the belt swing.
- Hold firmly onto the ropes or chains.
- Swing in a controlled manner, avoiding excessive height or twisting.
- Ensure the area around the swings is clear of other children or obstacles.

Several Ways To Play

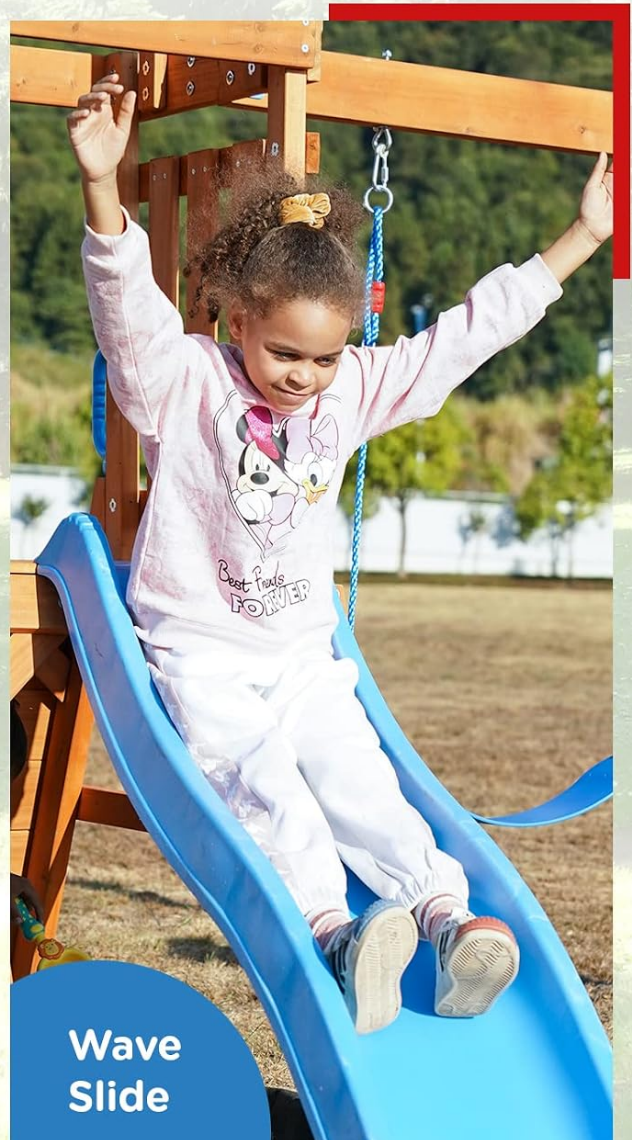


Image: Children enjoying the swing set, with one child on a belt swing and another on the slide, demonstrating typical use.

4.2. Slide

- Slide down feet first, one child at a time.
- Ensure the landing area is clear before sliding.

- Do not climb up the slide.



- Safety Durable Rope
- Double Ground Anchors

Image: Two children engaged in play, one in the wooden sandbox area and another sliding down the wave slide, showcasing the diverse play options.

4.3. Climbing Wall

- Use the hand and foot holds provided on the geometric climbing wall.
- Climb one child at a time.
- Maintain three points of contact (two hands and one foot, or two feet and one hand) while climbing.



Image: A child actively climbing the geometric climbing wall, demonstrating the use of the playset's climbing feature.

4.4. Sand Pit

- The area under the fort can be used as a sand pit.
- Ensure sand is clean and free of debris.
- Supervise children to prevent sand from being thrown or ingested.

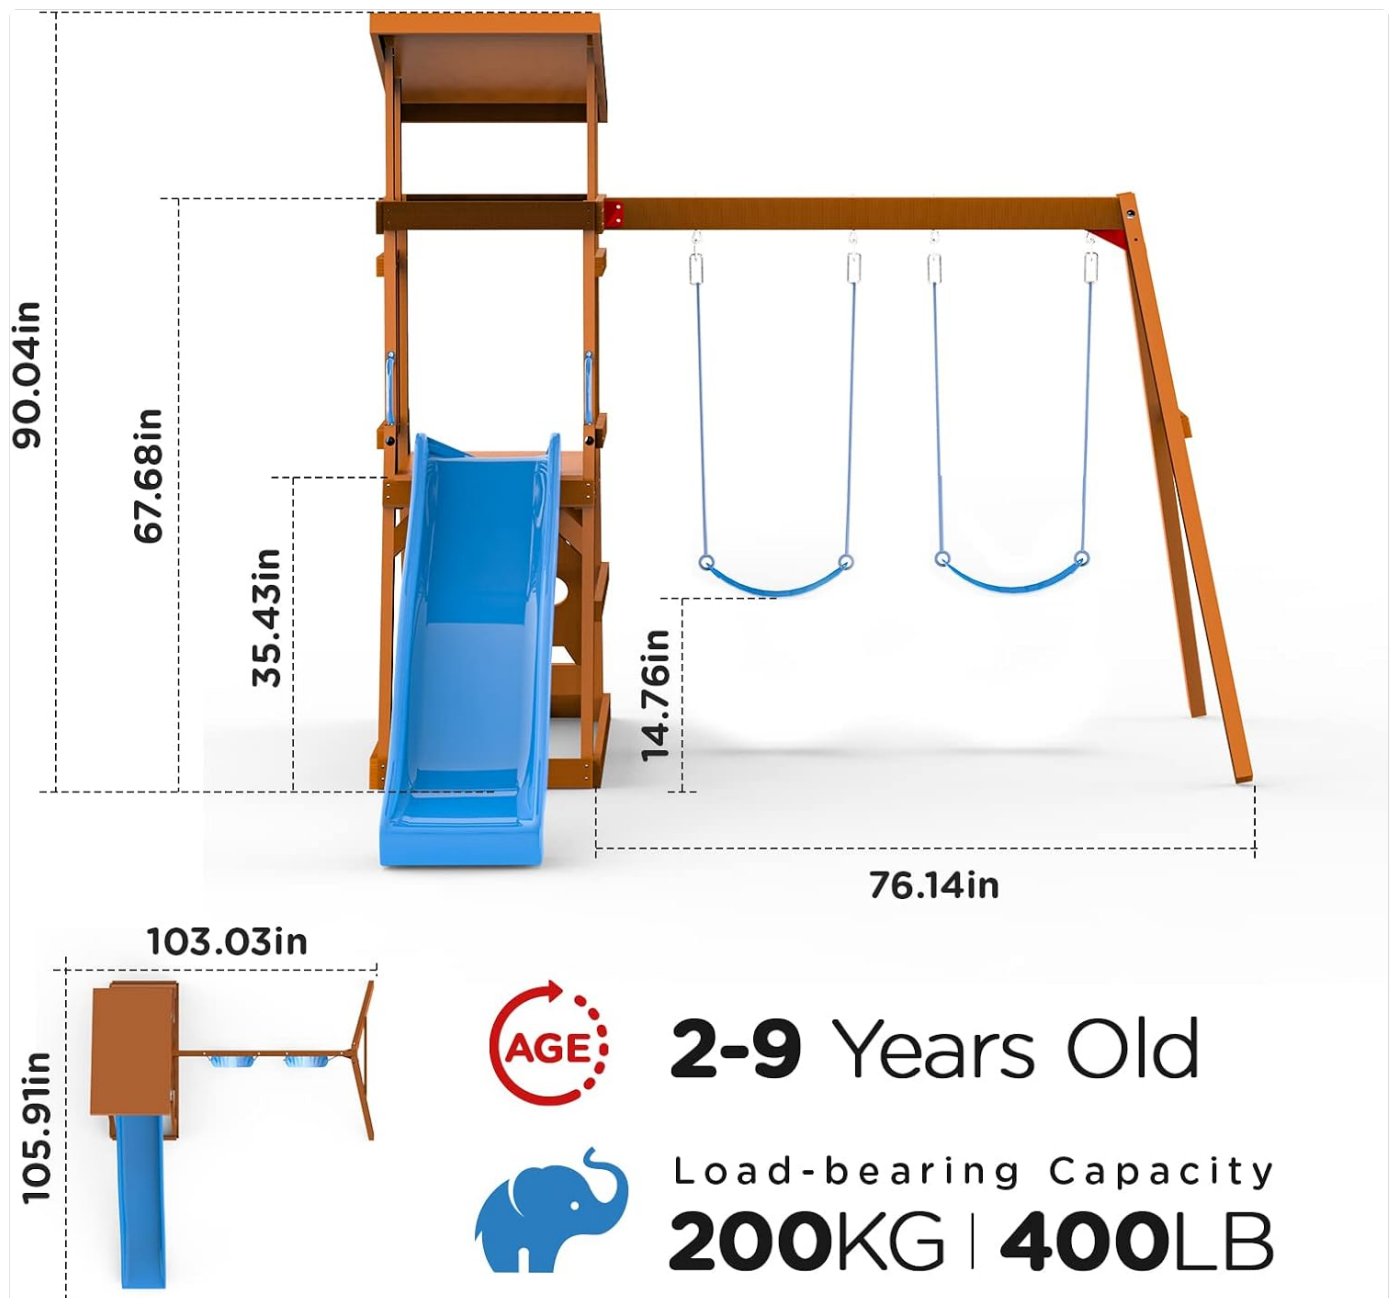 


Image: Children playing on various parts of the Dolphin Playground Wooden Swing Set, including the slide, swings, and fort area, illustrating the overall play experience.

5. MAINTENANCE

Regular maintenance is crucial to ensure the longevity and safety of your Dolphin Playground Wooden Swing Set. Perform checks periodically, especially at the beginning of each play season.

- **Wood Inspection:** Check all wooden components for cracks, splinters, or signs of rot. Sand down any rough spots.
- **Hardware Check:** Tighten all nuts and bolts. Ensure all swing hangers, brackets, and anchors are securely fastened.
- **Rope/Chain Inspection:** Examine ropes and chains for fraying, wear, or damage. Replace if necessary.
- **Ground Anchors:** Verify that ground anchors are firmly in place and not loose.
- **Cleaning:** Clean the playset regularly with mild soap and water. Avoid harsh chemicals.
- **Protective Finish:** Apply a wood sealant or stain annually to protect against weather damage and maintain the wood's integrity.



Image: A stack of wooden logs, symbolizing the high-quality cedar wood material used in the construction of the playset, which requires regular inspection and maintenance.



Image: A close-up view of a swing hanger attached to the wooden beam, emphasizing the need for regular inspection to ensure secure fastening and prevent wear.



Image: A detailed shot of a ground anchor securing one of the playset's wooden legs into the ground, illustrating a critical component for stability that requires periodic checking.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your playset.

6.1. Playset Wobbles

- **Cause:** Loose ground anchors or uneven installation surface.
- **Solution:** Ensure all ground anchors are fully secured. Verify the playset is on a level surface. If necessary, adjust the ground or add shims under the legs.

6.2. Squeaking Swings

- **Cause:** Friction in the swing hangers.
- **Solution:** Apply a small amount of lubricant (e.g., silicone spray) to the moving parts of the swing hangers.

6.3. Wood Splitting

- **Cause:** Overtightened screws or natural wood expansion/contraction.
- **Solution:** For minor splits, apply wood glue and clamp if possible. For larger splits, consult customer service. Ensure crack resistance bolts are properly installed.

7. SPECIFICATIONS

Feature	Detail
Brand	DOLPHIN PLAYGROUND T
Model Number	B0C9KYVNL4

Material	Wood (Cedar)
Product Dimensions (L x W x H)	105.9" x 103.03" x 90.04"
Maximum Weight Recommendation	400 Pounds
Age Range Description	Kid (2-9 years)
Required Assembly	Yes
UPC	740907184389

8. OFFICIAL PRODUCT VIDEO

Watch the official product video for a visual guide to the Dolphin Playground Wooden Swing Set.

Your browser does not support the video tag.

Video: An official product video showcasing children playing on the Dolphin Playground Wooden Swing Set, highlighting its various features and safety aspects. This video is provided by the seller, DOLPHIN-QH.

9. WARRANTY AND SUPPORT

DOLPHIN PLAYGROUND T is committed to customer satisfaction. If you have any questions or require assistance with your product, please do not hesitate to contact customer service.

- **Customer Service:** Our customer service team is available 24 hours to assist you.
- **Contact:** Refer to your purchase documentation or the seller's information on the platform for specific contact details.

© 2023 DOLPHIN PLAYGROUND T. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C9KYVNL4>

More documents and user manuals: <https://manuals.plus/>