

- Manuals.plus /
- › Hatteker /
- › Hatteker Beard Trimmer for Men - User Manual

Hatteker RFC-661

Hatteker Beard Trimmer for Men - User Manual

Model: RFC-661

PRODUCT OVERVIEW

The Hatteker Multifunction Beard Trimmer is a versatile grooming kit designed for men, offering a comprehensive solution for beard, mustache, face, nose, and body hair trimming. This cordless electric razor features multiple interchangeable heads and adjustable trim lengths to achieve various customized styles. Its waterproof design ensures easy cleaning and maintenance.



Image: Hattaker Beard Trimmer kit with its charging stand and various attachments including different trimmer heads and guide combs.

Key Features:

- **All-in-One Multi-function Use:** Comes with 6 interchangeable heads and adjustable trim lengths from 0.5-12mm.
- **Precision Trim / Shave:** Features self-sharpening steel blades designed for sharp, clean cuts without pulling hair or causing skin irritation.
- **Powerful Motor & Li-ion Battery:** Equipped with a high-performance electronic motor and a rechargeable lithium battery providing up to 80 minutes of runtime on a 1.5-hour charge.
- **Washable Body & Detachable Head:** Fully waterproof for easy cleaning under water. Detachable heads simplify blade maintenance.
- **USB Type-C Charge & LCD Display:** Universal USB-C charging for convenience and an LCD display showing remaining battery capacity.

SAFETY INFORMATION

Please read and understand all safety instructions before using the Hatteker Beard Trimmer. Failure to follow these instructions may result in injury or damage to the product.

- Use caution near the face and eyes.
- Do not ingest or inhale small parts.
- Clean properly after each use to maintain hygiene and performance.
- Adult supervision is recommended if children are present near the device.
- Keep the device away from excessive heat and direct sunlight.
- Ensure the charging port is dry before connecting the USB-C cable.

SETUP

Before first use, ensure the device is fully charged. The LCD display will indicate battery percentage.

1. **Initial Charge:** Connect the USB Type-C charging cable to the trimmer and a compatible USB power source (e.g., power bank, computer, adapter, wall socket). The LCD display will show the charging progress. A full charge takes approximately 1.5 hours.



Image: The trimmer being charged via its USB-C port, highlighting various compatible charging methods.

2. **Attaching Trimmer Heads:** The trimmer comes with several interchangeable heads. To attach a head, align it with the main body and gently push until it clicks into place. To detach, pull the head away from the body.



Image: An exploded view of the Hattaker trimmer showing how different heads can be attached and detached.

3. **Attaching Guide Combs:** For specific hair lengths, select the appropriate guide comb (e.g., 3mm, 6mm, 9mm, 12mm for full-size trimmer; 1-3mm adjustable for precision trimmer). Slide the comb onto the desired trimmer head until it securely locks.

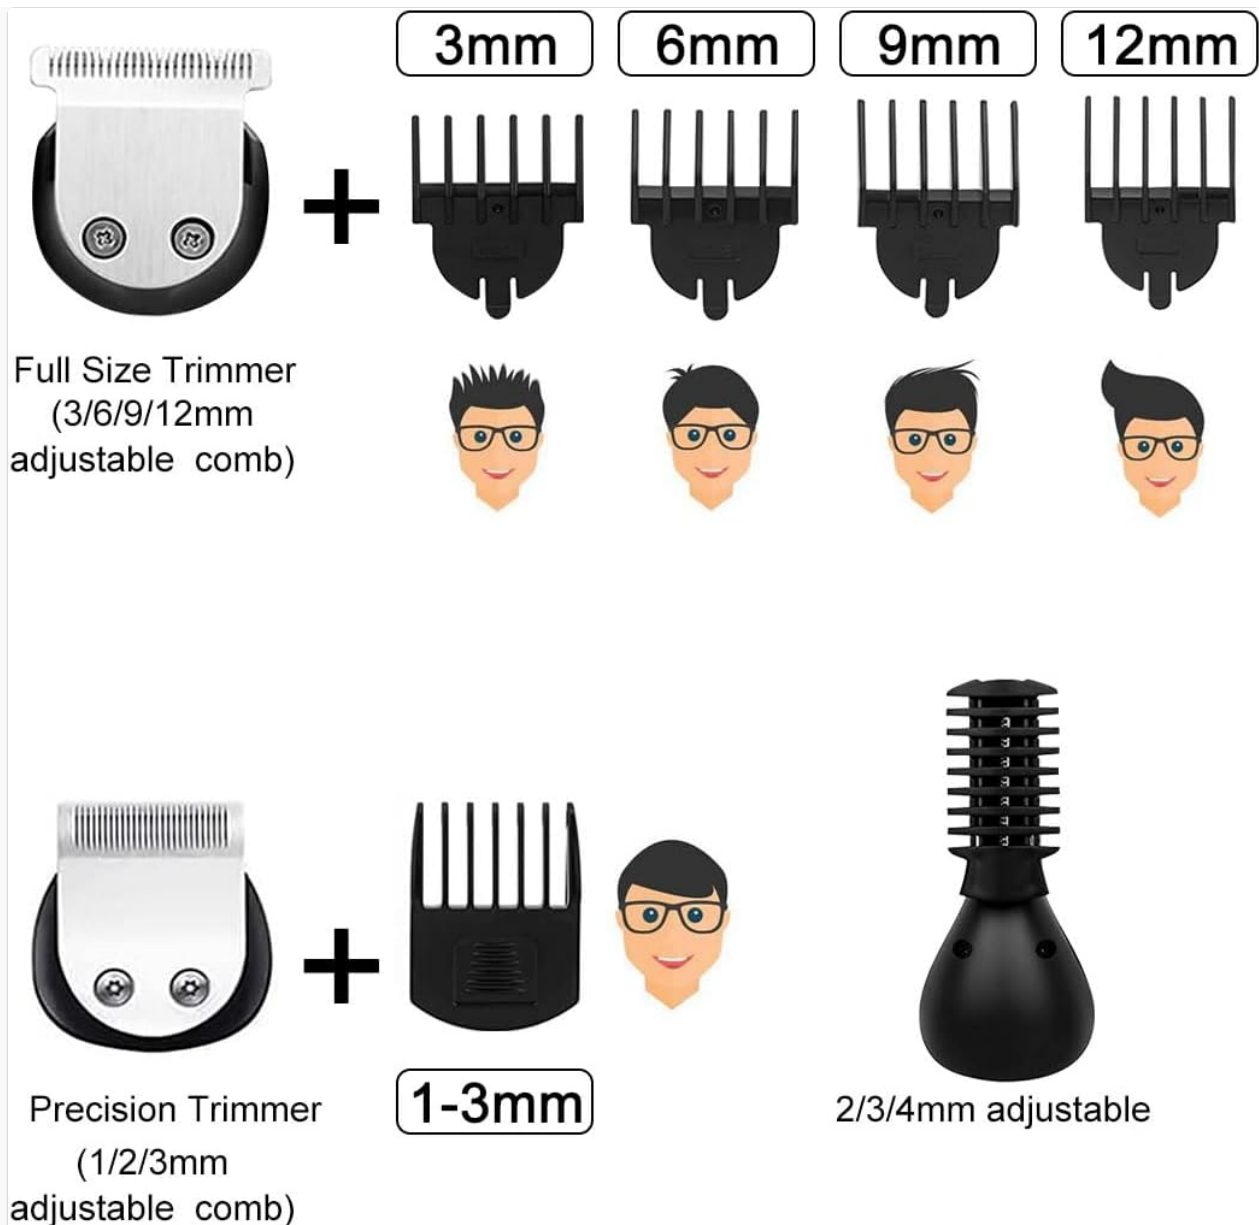


Image: Illustrations demonstrating the use of different guide combs for various trimming lengths on both the full-size and precision trimmers.

OPERATING INSTRUCTIONS

The Hatteker Beard Trimmer is designed for ease of use across various grooming needs.

1. **Power On/Off:** Press the power button located on the front of the trimmer to turn it on or off. The LCD display will illuminate when the device is active.
2. **Travel Lock:** To activate the travel lock, press and hold the power button for three seconds. This prevents accidental activation during travel. To deactivate, press and hold the power button again for three seconds.
3. **Selecting the Right Head:**
 - **Full Size Trimmer:** Ideal for general beard and hair trimming. Use with guide combs for desired length.
 - **Precision Trimmer:** For detailed styling, sharp lines, and intricate designs.
 - **Design Trimmer:** For creating specific patterns or very fine lines.
 - **Micro Shaver:** For a close, smooth finish on smaller areas.
 - **Nose & Ear Trimmer:** Safely removes unwanted nose and ear hair.
 - **Body Hair Trimmer:** For grooming body hair.

4. Trimming Technique:

- Ensure your hair is clean and dry before trimming.
- Hold the trimmer at a slight angle against the skin.
- Move the trimmer slowly and steadily against the direction of hair growth for an even cut.
- For best results, stretch the skin taut in the area being trimmed.

Your browser does not support the video tag.

Video: This video demonstrates the various functions of the Hattaker Beard Trimmer, including head attachment, charging, and usage for different grooming needs like beard, sideburns, and nose hair trimming.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Hattaker Beard Trimmer.

1. **Cleaning:** The trimmer features a 100% super washable body. After each use, detach the trimmer head and rinse both the head and the main body under running water. Use the included cleaning brush to remove any trapped hairs.



Image: The trimmer being cleaned under running water, showcasing its waterproof capabilities.

- 2. **Drying:** After rinsing, shake off excess water and wipe the trimmer and heads dry with a soft cloth. Allow all parts to air dry completely before reassembling or storing.
- 3. **Oiling Blades:** Periodically, apply a small drop of the included clipper oil to the blades to ensure smooth operation and prevent rust. Turn the trimmer on for a few seconds to distribute the oil.
- 4. **Storage:** Store the trimmer and its attachments in a dry place, preferably in its original packaging or the provided stand, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted; Travel lock is activated.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Trimmer pulls hair or cuts unevenly.	Blades are dull or clogged; Insufficient oiling; Incorrect technique.	Clean the blades thoroughly. Apply clipper oil to the blades. Ensure you are moving the trimmer against the direction of hair growth.
USB-C charging port not working.	Port is wet or damaged; Cable issue.	Ensure the port is completely dry before charging. Try a different USB-C cable. If the issue persists, contact customer support.
Trimmer makes unusual noise.	Blades are not properly aligned or are dirty.	Clean and oil the blades. Ensure the trimmer head is securely attached.

SPECIFICATIONS

- **Model Number:** RFC-661
- **Power Source:** 1 Lithium Ion battery (included)
- **Charging Type:** USB Type-C
- **Charging Time:** Approximately 1.5 hours
- **Runtime:** Up to 80 minutes
- **Waterproof:** Yes, 100% Super Washable Body
- **Blades:** Self-Sharpening Steel Blades
- **Included Components:** Trimmer, Guide Combs, USB Charger, Clipper Oil, Cleaning Brush, Comb, Hair Clips, Various Trimmer Heads (Full Size, Precision, Design, Micro Shaver, Nose & Ear, Body Hair)
- **Manufacturer:** Hatteker
- **Country of Origin:** China

WARRANTY AND SUPPORT

For specific warranty information and details regarding your Hatteker Beard Trimmer, please refer to the documentation included with your purchase or contact the manufacturer directly. General product support can often be found on the [Hatteker brand page on Amazon](#) or by contacting the seller, Juming, through the Amazon platform.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a personal grooming appliance and not a dietary supplement.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C9M5DLHY>

More documents and user manuals: <https://manuals.plus/>