

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 24V AC/DC Adapter User Manual

UPBRIGHT Govee H6072 H6072181 Power Supply

UpBright 24V AC/DC Adapter User Manual

Brand: UPBRIGHT

Model: Govee H6072 H6072181 Power Supply

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and effective use of your UpBright 24V AC/DC Adapter. This power supply is specifically designed to be compatible with the Govee H6072 and H6072181 Floor Lamps, including RGBIC Lyra Color Changing Corner LED models with Wi-Fi control, 64+ scene DIY modes, and music sync features. The adapter features a wide input voltage range (100-240VAC) for global compatibility and incorporates multiple protection mechanisms to ensure safe operation.



Figure 1.1: Front view of the UpBright 24V AC/DC Adapter. The adapter is black, rectangular, with a two-prong US-style plug on one end and a DC output cable with a barrel connector on the other. Labels on the adapter indicate "UpBright AC/DC ADAPTER" and input/output specifications.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire or electric shock, carefully read and follow these instructions.

- This device is designed for **DRY LOCATION USE ONLY**. Do not expose to water, moisture, or high humidity.
- Ensure the power outlet voltage matches the adapter's input voltage range (100-240VAC).
- Do not disassemble or modify the adapter. There are no user-serviceable parts inside.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug the adapter during lightning storms or when unused for long periods.

- This adapter features built-in OVP (Over Voltage Protection), OCP (Over Current Protection), and SCP (Short Circuit Protection) to ensure safe operation. However, always use the adapter within its specified limits.
- Ensure correct polarity when connecting to the device. The adapter is designed for specific polarity (+24V DC24V).

3. PACKAGE CONTENTS

Your UpBright 24V AC/DC Adapter package typically includes:


- 1 x UpBright 24V AC/DC Power Adapter
- (Optional) 1 x Suitable International Outlet Adapter (AU, EU, or UK type, depending on region of purchase)



Figure 3.1: Top view of the UpBright 24V AC/DC Adapter. The adapter body is black, and the attached power cord is neatly coiled, showing

the barrel connector at its end.

Come With A Suitable Outlet Adapter (Only One) to Fit Your Country/Area For International Order

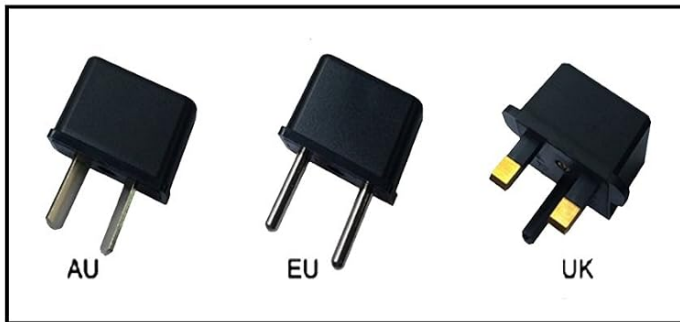

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY

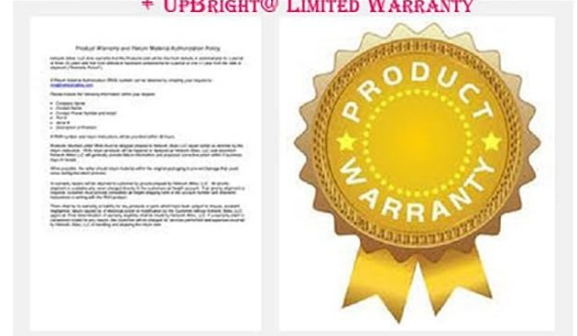


Figure 3.2: Example of international outlet adapters (AU, EU, UK) that may be included with your purchase, along with a representation of the UpBright Limited Warranty Certificate.

4. SETUP

Follow these steps to set up your UpBright AC/DC Adapter:

1. **Verify Compatibility:** Ensure your device, specifically the Govee H6072 or H6072181 Floor Lamp, requires a 24V DC power input. This adapter is designed for this specific voltage and polarity.
2. **Connect to Device:** Locate the power input port on your Govee H6072/H6072181 Floor Lamp. Carefully insert the DC output plug of the UpBright adapter into this port. Ensure a snug and secure connection.
3. **Connect to Power Outlet:** Plug the AC input prongs of the UpBright adapter into a standard wall power outlet (100-240VAC, 50/60Hz). If an international adapter was provided, attach it to the AC prongs before plugging into the wall outlet.
4. **Power On:** Once connected, your Govee Floor Lamp should receive power and be ready for operation according to its own instructions.



Figure 4.1: Side view of the UpBright 24V AC/DC Adapter, illustrating the two-prong plug designed for wall outlets and the attached DC output cable.

5. OPERATING INSTRUCTIONS

The UpBright 24V AC/DC Adapter functions as a dedicated power supply for compatible devices. Its operation is straightforward:

1. Once properly connected to both the Govee H6072/H6072181 Floor Lamp and a suitable power outlet, the adapter will continuously supply the necessary 24V DC power.
2. The adapter does not have an on/off switch; power is supplied as long as it is plugged into an active outlet and connected to the lamp.
3. The Govee Floor Lamp's features, such as RGBIC lighting, Wi-Fi control, scene modes, and music sync, are enabled

by the stable power provided by this adapter. Refer to your Govee Floor Lamp's user manual for specific operating instructions related to its features.

6. MAINTENANCE

To ensure the longevity and optimal performance of your UpBright AC/DC Adapter, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the power cord excessively. Do not place heavy objects on the cord.
- **Inspection:** Periodically inspect the adapter and its cable for any signs of damage, such as frayed wires, cracks, or loose connections. If damage is observed, discontinue use immediately and replace the adapter.

7. TROUBLESHOOTING

If you encounter issues with your UpBright AC/DC Adapter, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Device (Govee Lamp) is not powering on.	• Adapter not properly plugged into wall outlet. • Adapter not properly connected to the device. • Wall outlet is not active. • Adapter or device is faulty.	• Ensure the adapter is fully inserted into a working wall outlet. • Check that the DC plug is securely connected to the lamp's power input. • Test the wall outlet with another known working appliance. • If possible, test the adapter with another compatible device, or test the lamp with another compatible power supply. If the adapter is suspected to be faulty, discontinue use.
Adapter feels unusually hot.	• Overload or short circuit. • Poor ventilation.	• Immediately unplug the adapter from both the wall and the device. Allow it to cool down. Check for any short circuits in the device or cable. • Ensure the adapter is placed in a well-ventilated area, not covered by cloths or other materials.

Problem	Possible Cause	Solution
Flickering lights or inconsistent power to the device.	- Loose connection. - Damaged cable or adapter.	- Check all connections to ensure they are secure. - Inspect the cable for any visible damage. If damaged, replace the adapter.

If the problem persists after trying these steps, please contact UpBright customer support.

8. SPECIFICATIONS

Attribute	Value
Brand	UPBRIGHT
Model Number	Govee H6072 H6072181 Power Supply
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	24V DC
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Product Dimensions (L x W x H)	4 x 2 x 2 inches (approximate)
Item Weight	5 ounces (approximate)
ASIN	B0C9M7PSMN

9. WARRANTY AND SUPPORT

UpBright products are designed for reliability and performance. Your UpBright 24V AC/DC Adapter comes with the following warranty and support:

- Refund Policy:** 30 days refund period from the date of purchase.
- Exchange Policy:** 24 months exchange period for defective units.

For warranty claims, technical support, or any inquiries, please refer to the contact information provided with your purchase or visit the official UpBright store:

Visit the UPBRIGHT Store

(Please retain your proof of purchase for warranty purposes.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question