

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SKMEI](#) /
- › [SKMEI SKMEI-9296 Men's Classic Sports Watch Instruction Manual](#)

## SKMEI SKMEI-9296

# SKMEI SKMEI-9296 Men's Classic Sports Watch Instruction Manual

MODEL: SKMEI-9296

## 1. Introduction

Thank you for choosing the SKMEI SKMEI-9296 Men's Classic Sports Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

## 2. Product Overview

The SKMEI SKMEI-9296 is a classic and stylish sports watch designed for daily wear and various activities. It features a durable stainless steel strap, high-hardness mineral glass, and a reliable quartz movement for accurate timekeeping. The watch also includes a chronograph function, luminous hands and markers, and 30-meter water resistance.





Figure 2.1: Front view of the SKMEI SKMEI-9296 watch, showcasing its gold-tone case and strap with a white dial and chronograph sub-dials.



**30 meters waterproof**



**High hardness coated glass mirror**



**Original Hollow movement**



**HD luminous function**

Figure 2.2: Visual representation of key features including 30-meter water resistance, high-hardness coated glass mirror, original hollow movement, and HD luminous function.



Figure 2.3: The SKMEI SKMEI-9296 watch worn on a wrist, demonstrating its fit and appearance.

### 3. Setup Instructions

Your SKMEI-9296 watch is equipped with a crown and two pushers for setting time and operating the chronograph.

#### 1. Setting the Time:

- Pull the crown (B) out to position 2.
- Turn the crown to adjust the hour and minute hands to the correct time.
- Push the crown back into position 1 to start the watch.

#### 2. Setting the Date:

- Pull the crown (B) out to position 1 (first click).
- Turn the crown clockwise or counter-clockwise (depending on the movement) to set the correct date.
- Push the crown back into its original position.

*Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.*

### 4. Operating Instructions

## 4.1 Chronograph Function

The watch features a chronograph (stopwatch) function with sub-dials for minutes and seconds.

1. **Start/Stop:** Press the upper pusher (A) to start the chronograph. Press it again to stop.
2. **Reset:** While the chronograph is stopped, press the lower pusher (C) to reset all chronograph hands to their zero positions.

## 4.2 Luminous Function

The hands and hour markers of your watch are coated with a luminous material. After exposure to light, they will glow in the dark, providing visibility in low-light conditions.

## 4.3 Water Resistance (30M)

This watch is rated for 30 meters (3ATM) of water resistance. This means it can withstand splashes, rain, and brief immersion in water. It is **not suitable** for swimming, showering, diving, or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged to prevent water ingress.

# 5. Maintenance

## 5.1 Cleaning

Regularly wipe your watch with a soft, dry cloth to remove dust and dirt. For the stainless steel strap, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

## 5.2 Battery Replacement

The watch is powered by a button cell battery (SR920SW). When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

## 5.3 General Care

- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Protect the watch from strong impacts or drops.
- Ensure the crown is always pushed in completely to maintain water resistance.

# 6. Troubleshooting

- **Watch not running:** Check if the crown is pushed in completely. If it is, the battery may need replacement.
- **Condensation inside the crystal:** This may indicate a loss of water resistance. Avoid further contact with water and have the watch inspected by a professional immediately.
- **Chronograph hands not resetting to zero:** This may require a chronograph hand adjustment. Consult a watch technician.

# 7. Specifications

Detailed specifications for the SKMEI SKMEI-9296 watch:



## PRODUCT PARAMETER



BRAND : SKMEI

MODEL : 9296

WEIGHT : 135g

MOV ' T : Quartz

CRYSTAL : Glass

C A S E : Zinc alloy

B A N D : Stainless steel

BUCKLE : Stainless steel

W/P : 30m

FUNCTION : Time, Date, Stopwatch



Case width: 42m



Case thickness: 13mm



Band Width: 18mm



Watch length: 220mm

Figure 7.1: Diagram illustrating the dimensions and key parameters of the SKMEI SKMEI-9296 watch.

Parameter	Detail
Brand	SKMEI
Model Number	SKMEI-9296
Movement	Quartz
Crystal	High-hardness Mineral Glass
Case Material	Zinc Alloy
Band Material	Stainless Steel
Buckle Material	Stainless Steel
Water Resistance	30M (3ATM)

Parameter	Detail
Functions	Time, Date, Chronograph, Luminous
Case Width	42mm
Case Thickness	13mm
Band Width	18mm
Watch Length	220mm
Weight	135g
Battery Type	SR920SW (included)
Date First Available	10 July 2023

## 8. Warranty and Support

Your SKMEI SKMEI-9296 watch comes with a 2-year product quality assurance from the manufacturer. Additionally, a 30-day free return policy is available. For any issues or inquiries regarding your watch, please contact the seller or manufacturer's customer support.

For further assistance, please refer to the contact information provided with your purchase or visit the official SKMEI website.