

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [IINE](#) /

› [IINE Joy-Con Silicone Cover and Thumb Grip Caps for Nintendo Switch/OLED Instruction Manual](#)

IINE L848

IINE Joy-Con Silicone Cover and Thumb Grip Caps for Nintendo Switch/OLED Instruction Manual

[Product Overview](#)

[Setup & Installation](#)

[Usage](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides comprehensive instructions for the IINE Joy-Con Silicone Cover and Thumb Grip Caps. Designed for Nintendo Switch and Switch OLED Joy-Cons, this accessory set offers enhanced grip, protection, and a unique aesthetic. Please read this manual thoroughly to ensure proper installation and optimal use of your product.

PRODUCT OVERVIEW

The IINE Joy-Con Silicone Cover set includes:

- 2 x Joy-Con Silicone Covers (Left/Right)
- 4 x Thumb Grip Caps



UNIQUE DESIGN



Designed by the IINE design team,
featuring a unique pattern created
specifically for Zelda fans.



Image: The IINE Joy-Con Silicone Covers and Thumb Grip Caps featuring a game-themed design, shown with a Nintendo Switch console.

SETUP & INSTALLATION

Installing Joy-Con Silicone Covers

1. Ensure your Nintendo Switch or Switch OLED Joy-Cons are clean and free of dust.
2. Carefully align the silicone cover with the corresponding Joy-Con (left or right).
3. Gently stretch the silicone cover over the Joy-Con, ensuring all buttons, joysticks, and ports are correctly aligned with the cutouts.
4. Smooth out any wrinkles or misalignments to ensure a snug fit.

FULL PROTECTION



Image: Visual guide demonstrating the flexible nature of the silicone cover for easy installation and removal from the Joy-Con.

Installing Thumb Grip Caps

1. Turn up the edge of the thumb grip cap.
2. Place the cap onto the joystick.
3. Adjust the cap to ensure it is centered and securely fitted over the joystick.



SMOOTH MANIPULATION



Image: Step-by-step visual instructions for installing the thumb grip caps onto the Joy-Con joysticks.

Installation Video Guide

Your browser does not support the video tag.

Video: An official video demonstrating the installation of the IINE Zelda Protective Case and Thumb Grips on a Nintendo Switch Joy-Con.

This video shows the product being unboxed and applied to the controllers, highlighting the fit and design.

USAGE

The IINE Joy-Con Silicone Covers and Thumb Grip Caps are designed to enhance your gaming experience through several key features:

- Enhanced Grip:** The anti-slip silicone material provides a secure and comfortable hold, reducing the chance of accidental drops during intense gaming sessions.
- Protection:** The covers shield your Joy-Cons from daily wear and tear, including scratches, dust, and fingerprints.
- Comfort:** The soft-touch material offers a pleasant tactile experience, improving comfort during extended play.

- **Improved Control:** The thumb grip caps increase joystick height and provide a textured surface for more precise and smooth manipulation, potentially reducing hand fatigue.



Image: Close-up view highlighting the soft and comfortable silicone material of the Joy-Con covers and thumb grips.



INCREASE JOYSTICK HEIGHT



Help you reduce hand fatigue and enhance the game experience



Image: Diagram illustrating how the thumb grip caps increase joystick height, contributing to reduced hand fatigue and improved game control.



INSTALL & REMOVE EASILY



Image: An illustration depicting the Joy-Con covers providing full protection against bumps, scratches, dust, and fingerprints.

MAINTENANCE

To keep your IINE Joy-Con Silicone Covers and Thumb Grip Caps in optimal condition:

- **Cleaning:** Wipe the silicone covers and caps with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with water and air-drying completely.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or solvents, as these can damage the silicone material and printed designs.
- **Storage:** Store the covers and caps in a clean, dry place away from direct sunlight when not in use for extended periods.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Cover does not fit snugly.	Incorrect alignment or not fully stretched.	Remove the cover and re-install, ensuring proper alignment and stretching it evenly over the Joy-Con.
Thumb grip cap slips off.	Not fully seated or joystick is dirty.	Ensure the cap is pushed down completely onto the joystick. Clean the joystick surface if necessary.
Buttons are difficult to press.	Cover is misaligned over buttons.	Adjust the silicone cover to ensure all button cutouts are perfectly aligned.

SPECIFICATIONS

- Brand:** IINE
- Model Number:** L848
- Compatible Devices:** Nintendo Switch, Nintendo Switch OLED Joy-Cons
- Material:** High-Quality Silicone
- Color:** Black (with game-themed design)
- Special Features:** Anti-Slip, Scratch Resistant
- Item Weight:** 1.76 ounces (approx. 50 grams)
- Package Dimensions:** 6.3 x 5.08 x 1.1 inches (approx. 16 x 12.9 x 2.8 cm)
- Shell Type:** Soft Case

WARRANTY & SUPPORT

IINE is committed to providing high-quality products and customer satisfaction. For any inquiries or assistance, the IINE team offers 24-hour after-sales service.

Please refer to your purchase documentation or the retailer's website for specific warranty details and contact information.