

[Manuals.plus](#) /

> [eKids](#) /

> eKids Disney Bluetooth Storyteller Model 465 User Manual

eKids 465

eKids Disney Bluetooth Storyteller Model 465 User Manual

Your guide to setting up and operating your Disney Bluetooth Storyteller.

INTRODUCTION

Thank you for purchasing the eKids Disney Bluetooth Storyteller. This device combines a Bluetooth speaker, night light, and storyteller to provide an engaging experience for children. This manual provides instructions for setup, operation, and maintenance to ensure optimal performance.

IMPORTANT SAFETY INFORMATION

WARNING:

- To prevent the risk of electric shock, do not disassemble the device.
- Keep the device away from water.
- To avoid noise-induced hearing loss, do not use the device at high volumes for extended periods of time.
- This device is not intended for use by children under 3 years of age.
- Do not use the device while sleeping to avoid the risk of suffocation.

PACKAGE CONTENTS

- eKids Disney Bluetooth Storyteller (Model 465)
- USB-C Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

The eKids Disney Bluetooth Storyteller features an intuitive control panel and various ports for charging and connectivity.



Image: Top and side view of the eKids Disney Bluetooth Storyteller, highlighting the control buttons, USB-C charging port, and pinhole reset button.

Control Panel Functions:

- **Power ON/OFF Button:** Located at the top, center. Press and hold to turn the device on or off.
- **Bluetooth Pairing / Light Modes Button:** Initiates Bluetooth pairing mode and cycles through night light color modes.
- **Play/Pause Button:** Controls playback of audio.
- **Volume Decrease Button:** Reduces audio volume.
- **Volume Increase Button:** Increases audio volume.
- **Skip Back Button:** Skips to the previous track or story.
- **Skip Forward Button:** Skips to the next track or story.
- **EZ Link Button:** Activates the EZ Link feature for connecting to Disney stories via the app.
- **Sleep Function Button:** Activates sleep timer and soothing sounds.
- **Dial Toggles Through Playlists:** Rotates to select different playlists or story categories.

Ports and Indicators:

- **USB-C Charging Port:** Located at the bottom rear for charging the device.
- **Power Indicator Light:** Shows charging status and power on/off.
- **Pinhole Reset Button:** Used to reset the device if it becomes unresponsive.

SETUP GUIDE

1. Charging the Device

Before first use, fully charge the Storyteller. Connect the supplied USB-C cable to the charging port on the device and the other end to a USB power adapter (not included).

- The Power Indicator Light will illuminate during charging.
- A full charge typically takes approximately 3-4 hours.
- The indicator light will change or turn off when charging is complete.

2. Powering On/Off

Press and hold the **Power ON/OFF Button** (located at the top center) for a few seconds until the device powers on or off.

3. Bluetooth Pairing

1. Ensure the Storyteller is powered on.
2. Press and hold the **Bluetooth Pairing / Light Modes Button** until the indicator light flashes, indicating pairing mode.
3. On your mobile device (smartphone or tablet), go to Bluetooth settings.
4. Select "eKids Storyteller" from the list of available devices.
5. Once paired, the indicator light on the Storyteller will stop flashing and remain solid.

4. EZ Link App Setup for Disney Stories

To access a wider selection of Disney stories and playlists, use the EZ Link app.



Image: Visual guide for EZ Link app setup, showing the app icon, QR code, and steps to connect to Disney stories.

1. Download the free EZ Link Setup App from your device's app store. (Requires iOS 12 or higher, Android 9 or higher).
2. Open the EZ Link app and follow the on-screen instructions to select your preferred streaming service (e.g., Spotify).
3. Twist the **Dial Toggles Through Playlists** on the Storyteller to make your selection within the app.
4. Press the **EZ Link Button** on the Storyteller to connect and begin listening to Disney stories.

OPERATING INSTRUCTIONS

Playing Audio (Bluetooth Mode)

- Ensure the device is paired via Bluetooth to your audio source.
- Use the **Play/Pause Button** to start or stop playback.
- Press the **Skip Back** or **Skip Forward** buttons to navigate between tracks.
- Adjust volume using the **Volume Decrease** and **Volume Increase** buttons.

Using the Night Light

The Storyteller features a multi-color night light function.



Image: The eKids Disney Bluetooth Storyteller illuminated with a vibrant color-changing light, showcasing its night light feature.

- Press the **Bluetooth Pairing / Light Modes Button** repeatedly to cycle through different light colors and modes (e.g., solid color, color-changing).
- To turn off the night light, continue pressing the button until the light is off.

Sleep Function and Soothing Sounds

Activate the sleep function for a calming bedtime routine.

- Press the **Sleep Function Button** to activate the sleep timer and soothing sounds.
- Further presses may cycle through different sleep sound options or timer durations (refer to app for detailed settings).

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the device is fully charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	• Ensure the Storyteller is in pairing mode (flashing indicator light). • Make sure Bluetooth is enabled on your mobile device. • Move the Storyteller closer to your mobile device. • Forget the device from your mobile device's Bluetooth list and try pairing again.
No sound or low volume.	• Increase the volume on both the Storyteller and your connected mobile device. • Ensure the device is properly paired and connected.
EZ Link app not connecting.	• Ensure your mobile device meets the app's OS requirements (iOS 12+/Android 9+). • Check your internet connection. • Restart both the Storyteller and the EZ Link app.
Device is unresponsive.	Use a thin object (like a paperclip) to press the Pinhole Reset Button . This will restart the device without erasing settings.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	465
Product Dimensions (L x W x H)	3.99 x 3.99 x 4.5 inches (10.1 x 10.1 x 11.4 cm)
Item Weight	1.28 Pounds (0.58 Kilograms)
Power Source	Battery Powered (1 Lithium Ion battery, included)
Connectivity	Bluetooth, EZ Link+ Technology
Manufacturer	KIDdesigns

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official eKids website. Keep your proof of purchase for any warranty claims.

Manufacturer: KIDdesigns

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C9NVGDS6>

More documents and user manuals: <https://manuals.plus/>