

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YITAHOME](#) /

› [YITAHOME 2.0 Cu ft Fireproof Safe Box Instruction Manual \(Model YATCYA-1025\)](#)

YITAHOME YATCYA-1025

YITAHOME 2.0 Cu ft Fireproof Safe Box Instruction Manual

Model: YATCYA-1025

Brand: YITAHOME

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your YITAHOME 2.0 Cu ft Fireproof Safe Box. Please read this manual thoroughly before installation and use, and retain it for future reference. This safe is designed to protect important valuables such as documents, jewelry, and cash from theft and fire.

SAFETY INFORMATION

- Do not store emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is installed on a stable surface or securely mounted to a wall or floor to prevent tipping.
- Avoid exposing the safe to extreme temperatures or humidity.
- Regularly check battery levels to ensure proper function of the electronic lock.
- This safe is not water-resistant. Protect it from water exposure.

PACKAGE CONTENTS

Verify that all items are present in the package:

- YITAHOME 2.0 Cu ft Safe Box (x1)
- Emergency Keys (x1 set)
- Emergency Battery Box (x1)
- Expansion Screws (x6)
- Fireproof A4 Document Bag (x1)
- Instruction Manual (x1)

PRODUCT OVERVIEW

The YITAHOME safe box features a robust metal construction with an electronic combination lock, internal storage, and a removable shelf for organized storage.



Figure 1: YITAHOME 2.0 Cu ft Fireproof Safe Box. This image shows the overall dimensions and internal layout with adjustable shelves, along with the included accessories like emergency keys, fireproof bag, and expansion screws.

Key features include:

- **Digital Keypad Lock:** For secure access with a programmable code.
- **Emergency Key Access:** Provides alternative entry in case of forgotten code or battery failure.
- **Removable Shelf:** Allows for flexible organization of items within the safe.
- **Pre-drilled Mounting Holes:** For secure installation to a wall or floor.
- **Alarm System:** Triggers an audible alarm after multiple incorrect password attempts or violent impact.
- **Soft Felt Lining:** Interior is lined with soft felt to protect valuable items from scratches.

Your browser does not support the video tag.

Video 1: A general overview of the YITAHOME Safe Box, highlighting its size, components, and various features such as the digital keypad and internal storage capacity.

Your browser does not support the video tag.

Video 2: Illustrates the internal features of the YITAHOME safe, including the adjustable shelves and the fireproof document bag. It demonstrates how to organize various items within the safe and highlights the security features like the alarm system.

SETUP

1. Battery Installation

1. Locate the battery compartment on the inside of the safe door or on the keypad.
2. Insert 4 AA batteries (not included) according to the polarity markings.
3. Close the battery compartment cover.

2. Initial Opening and Code Setting

Upon first use, open the safe using the emergency key:

1. Insert the emergency key into the keyhole, usually hidden behind a cover on the keypad.
2. Turn the key clockwise while simultaneously turning the knob clockwise to open the door.
3. With the door open, locate the red reset button on the inside of the door. Press it once.
4. On the keypad, enter your desired 3-8 digit code, then press '#' to confirm.
5. Test the new code with the door open before closing it.

3. Mounting the Safe

For enhanced security, it is recommended to mount the safe to a wall or floor.

1. Choose a suitable location, ensuring there are no electrical wires or pipes behind the drilling area.
2. Mark the positions for the pre-drilled holes on the wall or floor using the safe as a template.
3. Drill pilot holes using an appropriate drill bit for your wall/floor material.
4. Align the safe with the drilled holes and insert the expansion screws.
5. Tighten the screws securely to fix the safe in place.

OPERATING INSTRUCTIONS

1. Opening the Safe with Digital Code

1. Enter your 3-8 digit personal code on the keypad.
2. Press '#'. The display should show "OPEN".
3. Within 5 seconds, turn the knob clockwise to open the safe door.

2. Opening the Safe with Emergency Key

Use the emergency key if you forget your code or if the batteries are depleted.

1. Remove the keyhole cover on the keypad.
2. Insert the emergency key and turn it clockwise.
3. Simultaneously turn the knob clockwise to open the safe door.

3. Changing the Digital Code

1. Open the safe door using your current code or emergency key.
2. Press the red reset button located on the inside of the door.
3. Enter your new 3-8 digit code on the keypad, then press '#' to confirm.
4. Verify the new code by testing it with the door open before closing.

4. Alarm System

The safe is equipped with an audible alarm system. If an incorrect code is entered three consecutive times, or if the safe experiences violent impact, an alarm will sound. To silence the alarm, enter the correct code or use the emergency key.

Your browser does not support the video tag.

Video 3: Demonstrates the YITAHOME safe's password and key lock operation, including opening the safe, placing items inside, and securing it. This video also shows the use of the emergency key.

MAINTENANCE

1. Battery Replacement

When the battery indicator on the display shows low power, replace the batteries promptly to ensure continuous operation. Use 4 new AA batteries.

2. Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

3. Adjustable Shelves

The safe includes adjustable shelves for customized storage. To adjust, simply lift the shelf and reposition it to the desired height using the available slots.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect code entered; low batteries.	Re-enter the correct code. Replace batteries. Use emergency key.
Keypad is unresponsive.	Dead batteries.	Replace batteries. Use emergency battery box if needed.
Alarm sounds unexpectedly.	Multiple incorrect code attempts; physical impact.	Enter correct code or use emergency key to silence. Avoid impacting the safe.

SPECIFICATIONS

Feature	Detail
Brand	YITAHOME
Model Number	YATCYA-1025
Capacity	2 Cubic Feet
Product Dimensions (D x W x H)	13"D x 16"W x 17"H
Lock Type	Electronic Combination Lock
Material	Metal

Feature	Detail
Mounting Type	Wall Mount
Special Features	Alarm System, Combination Lock, Removable Shelf
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official YITAHOME website. Keep your purchase receipt as proof of purchase for any warranty claims.