

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Unique Appliances](#) /

› [Unique Appliances Classic Retro 30" Electric Range Instruction Manual](#)

Unique Appliances UGP-30CR EC T

Unique Appliances Classic Retro 30" Electric Range

MODEL: UGP-30CR EC T

Instruction Manual

INTRODUCTION

Welcome to the world of Unique Appliances! This manual provides detailed instructions for the installation, operation, and maintenance of your new Classic Retro 30" Electric Range. Designed with both style and functionality in mind, this appliance features a 5-element glass cooktop, a convection oven, and a convenient waist-high broiler. Please read this manual thoroughly before using your range to ensure safe and optimal performance.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

- Always ensure the range is properly grounded.
- Do not leave children unattended near the appliance.
- Use only dry pot holders. Moist or damp pot holders on hot surfaces may result in burns from steam.
- Never use your appliance for warming or heating the room.
- Do not store flammable materials in or near the range.
- Always turn off all controls when cooking is completed.
- Be aware of the hot surface indicator lights on the cooktop.

PRODUCT OVERVIEW

Key Features

- **Electric Range:** Elevate your culinary exploits with the Classic Retro 30" Electric Range by Unique Appliances. The range, which comes with a convection fan, also allows for convection cooking, circulating heat for incredibly even distribution.
- **5-Element Glass Cooktop:** Featuring a 5-element glass cooktop with a warming zone and hot surface indicator, this electric range is ideal for an intense sear or delicate sauce simmering. The range has a 3.9 cu/ft oven capacity with an oven window.

- **Convenient Design:** Made with a waist-high broiler so that you can sear from a comfortable height, this range is easy to use. Our electric range also comes with an oven light.
- **Sturdy Construction:** Our electric range features zinc-cast handles and metal doors and siding for long-lasting use. Complete with two adjustable heavy-duty oven racks with 4 shelf positions, this is one of the most convenient ranges you will come across.
- **Retro Design:** Featuring a retro design and chrome-finished accents, this electric range will add an iconic look to your kitchen or any cooking space akin to the '50s. Easy to keep clean, the range allows for easy maintenance.

Visual Reference



Front view of the Classic Retro Electric Range, showcasing its Ocean Mist Turquoise finish and chrome accents.



The spacious 3.9 cu/ft oven interior with two adjustable heavy-duty racks, suitable for various dishes.



Detailed view of the 5-element glass cooktop and the intuitive control knobs.



The oven door open, revealing the interior and the convenient waist-high broiler.



The radiant cooktop with elements activated, showing the different heating zones.



The Classic Retro Electric Range beautifully integrated into a modern kitchen design.

SETUP

Unpacking and Placement

Carefully remove all packaging materials from the range. Ensure the appliance is placed on a level, stable surface. This is a freestanding unit, designed for easy integration into your kitchen layout.

Electrical Connection

The range operates on 240 Volts (AC) electric power. Ensure your electrical supply meets these requirements. It is recommended to have a qualified electrician perform the final electrical connection.

Anti-Tip Bracket Installation

For safety, an anti-tip bracket is included with your range. This bracket must be securely installed to prevent the range from tipping forward. Refer to the separate installation guide for detailed instructions on attaching the anti-tip bracket to the wall or floor.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features rotary knobs for cooktop elements and oven temperature, along with toggle switches for oven light, convection fan, and oven/broil selection. Indicator lights provide visual feedback on the appliance's status.

Cooktop Operation

- Turning On Elements:** Rotate the desired burner control knob from 'OFF' towards 'MIN' or 'MAX'. The stovetop indicator light will illuminate when any burner is active.
- Adjusting Heat:** Turn the knob to select the desired heat level, from 'MIN' for low heat to 'MAX' for high heat.
- Dual Elements:** The larger cooktop elements may have dual rings. Rotating the knob from 'MIN' to 'MAX' will activate the inner ring, while further rotation will activate the outer ring for larger cookware.
- Hot Surface Indicator:** After use, the 'Hot Surface' indicator on the cooktop surface will remain lit until the surface has cooled to a safe temperature. Exercise caution when the light is on.

Oven Operation

- Setting Temperature:** Rotate the oven temperature knob to the desired Fahrenheit setting (from 200°F to 500°F). The oven indicator light will illuminate when the oven is heating.
- Oven/Broil Selection:** Use the toggle switch to select between 'OVEN' (bake) or 'BROIL' functions.
- Preheat Feature:** This model does not have an automatic preheat indicator. It is highly recommended to use an external oven thermometer to accurately gauge when the oven has reached the set temperature for precise cooking results.
- Oven Light:** Use the dedicated toggle switch on the control panel to turn the interior oven light 'ON' or 'OFF' for viewing food during cooking.

Convection Fan

The convection fan circulates heat for more even distribution, which can reduce cooking times and improve baking results. Activate the convection fan using its dedicated toggle switch on the control panel.

Warming Zone

The cooktop includes a dedicated warming zone in the center. To activate it, press the 'ON/OFF' button located near the oven temperature knob. This zone is designed to keep cooked food warm at a low temperature.

MAINTENANCE

Cleaning the Cooktop

The glass cooktop is designed for easy cleaning. Allow the surface to cool completely before cleaning. Use a ceramic cooktop cleaner and a soft cloth or sponge. Avoid abrasive cleaners or scouring pads that can scratch the glass.

Cleaning the Oven

For general cleaning, wipe the interior with a damp cloth and mild detergent after each use, once the oven has cooled. For stubborn stains, use an oven cleaner specifically designed for oven interiors, following the product's instructions. The oven racks can be removed for easier cleaning.

Exterior Cleaning

Clean the exterior surfaces, including the control panel and handles, with a soft cloth and mild soapy water. Dry thoroughly to prevent water spots. Avoid harsh chemicals or abrasive materials that could damage the finish.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

- **Range not turning on:** Check if the power cord is securely plugged into a working outlet and if the circuit breaker has tripped.
- **Burner not heating:** Ensure the control knob for the specific burner is fully engaged and set to a heat level.
- **Oven not heating:** Verify the oven temperature knob is set correctly and the oven/broil switch is in the 'OVEN' position.
- **Uneven cooking:** Ensure cookware is appropriate for the element size. For oven cooking, consider using the convection fan for better heat distribution.
- **Control markings fading:** Avoid using harsh chemicals or abrasive materials when cleaning the control panel. Wipe gently with a soft, damp cloth.

If the issue persists after attempting these solutions, please contact Unique Appliances customer support.

SPECIFICATIONS

Feature	Specification
Brand Name	Unique Appliances
Model Name	Classic Retro Radiant Electric Range
Model Info	UGP-30CR EC T
Item Weight	188 pounds
Product Dimensions	29.5 x 30 x 41.5 inches
Capacity	3.9 Cubic Feet
Installation Type	Freestanding
Burner Type	Open
Drawer Type	broiler, warming
Heating Elements	5
Color	Ocean Mist Turquoise
Control Console	Knob
Voltage	240 Volts (AC)
Fuel Type	Electric
Material Type	Metal

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Unique Appliances website. For any technical assistance, troubleshooting not covered in this manual, or to order replacement parts, please contact Unique Appliances Customer Support. You can find contact details on the brand's official store page or through your purchase documentation.

[Visit the Unique Appliances Store for more information](#)

© 2023 Unique Appliances. All rights reserved.