

## Chikit PTC-SH009R

# Chikit 1500W Space Heater PTC-SH009R User Manual

Model: PTC-SH009R

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this heater. Failure to follow these instructions may result in fire, electric shock, injury, or property damage. Keep this manual for future reference.

- Do not use this heater in bathrooms, laundry areas, or similar indoor locations where water may be present.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has an automatic tip-over safety switch. If the heater is accidentally tipped over, it will automatically shut off.
- The heater is equipped with an overheat protection system. If the heater reaches an unsafe temperature, it will automatically shut off.
- Ensure the child lock function is activated when children are present to prevent accidental operation.

# Safeguard Security



Child  
Lock



VO Flame  
Retardancy



Overheat  
Protection



Tip-over  
Protection



Image: The Chikit space heater highlighting its safety features including child lock, flame retardancy, overheat protection, tip-over protection, and ETL certification.

## 2. PRODUCT OVERVIEW

The Chikit PTC-SH009R is a compact and efficient electric ceramic space heater designed for indoor use. It features rapid

heating, multiple operational modes, and integrated safety mechanisms.

## 2.1 Key Features

- **Fast Heating:** Utilizes PTC ceramic heating technology for quick warmth.
- **Multiple Modes:** Offers 1500W (High), 900W (Low), ECO mode, and Fan-only mode.
- **Adjustable Thermostat:** Maintains desired room temperature.
- **24-Hour Timer:** Programmable auto-shutdown from 1 to 24 hours.
- **Safety Protections:** ETL certified, includes overheat protection, tip-over switch, and child lock.
- **Compact Design:** Portable with a built-in carrying handle.

# Powerful Heater



24H  
Timer



Touch  
Control



Safety  
Protection



Adjustable  
Thermostat



Image: The Chikit space heater showcasing its main features: 24-hour timer, touch control panel, comprehensive safety protection, and an adjustable thermostat.

## 2.2 Product Dimensions

The heater's compact size makes it suitable for various spaces.

**Depth:** 6.3 inches (16.0 cm)

**Width:** 4.72 inches (12.0 cm)

**Height:** 8.54 inches (21.7 cm)

**Weight:** 2.64 pounds (1.2 kg)

# Portable & Compact Heater

It is a powerful partner for you to work and study in winter



Image: A visual representation of the Chikit space heater with its dimensions clearly marked for height, width, and depth.

### 3. SETUP

---

This heater requires minimal setup. Follow these steps to prepare your heater for use:

1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for storage or future transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater from any combustible materials.
3. **Power Connection:** Plug the heater directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.
4. **Initial Check:** Before first use, inspect the power cord and plug for any damage.



Image: A person carrying the Chikit space heater using its built-in handle, illustrating its portable design for easy placement.

### 4. OPERATING INSTRUCTIONS

---

The Chikit space heater features a user-friendly control panel located on the top of the unit.



Image: The Chikit space heater in operation, with warm air flowing from its grille and the control panel visible on top.

#### 4.1 Power On/Off

- Press the **Power** button to turn the heater on or off.

#### 4.2 Mode Selection

Press the **Mode** button to cycle through the available heating and fan modes:

- **High Heat (1500W):** Provides maximum heating output for rapid warming.
- **Low Heat (900W):** Offers moderate heating for sustained warmth.
- **ECO Mode:** Automatically adjusts power consumption (between 900W and 1500W) to maintain a set temperature, optimizing energy use.
- **Fan Only Mode:** Circulates air without heat, useful for cooling internal components or providing air circulation.

# ECO Mode

ECO mode can reduce energy consumption and be more environmentally friendly



Image: The Chikit space heater operating in ECO mode, illustrated with a graph demonstrating how power consumption fluctuates to maintain a stable temperature, promoting energy efficiency.

## 4.3 Temperature Adjustment (Thermostat)

In heating modes, use the "+" and "-" buttons to set your desired temperature. The heater will cycle on and off to maintain this temperature.



Image: The Chikit space heater demonstrating its adjustable thermostat, allowing temperature settings from 59°F to 95°F in 1°F increments.

## 4.4 Timer Function

The 24-hour timer allows you to set an automatic shutdown time.

- Press the **Timer** button.
- Use the "+" and "-" buttons to select the desired operating duration (1-24 hours).
- The heater will automatically turn off after the set time expires.

## 4.5 Child Lock

Activate the child lock to prevent accidental changes to settings.

- Press and hold the **Child Lock** button (often indicated by a lock icon) for a few seconds to activate or deactivate.
- When activated, the control panel buttons will not respond to presses.



Image: The Chikit space heater positioned near a child and a dog, emphasizing the importance and function of its child lock safety feature.

# 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and longevity of your heater.

## 5.1 Cleaning

1. **Disconnect Power:** Always unplug the heater from the wall outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
3. **Air Intake/Exhaust:** Use a vacuum cleaner with a brush attachment to gently remove dust and lint from the air intake and exhaust grilles.
4. **Do Not Immerse:** Never immerse the heater in water or allow water to drip into the interior.

## 5.2 Storage

- Store the heater in a cool, dry place when not in use.
- It is recommended to store the heater in its original packaging to protect it from dust and damage.

## 6. TROUBLESHOOTING

If you experience issues with your Chikit space heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, tip-over switch activated, overheat protection activated.	<ul style="list-style-type: none"> <li>◦ Ensure the heater is securely plugged into a working outlet.</li> <li>◦ Check if the circuit breaker has tripped.</li> <li>◦ Place the heater on a flat, stable surface.</li> <li>◦ Unplug the heater, wait 10-15 minutes for it to cool down, then plug it back in.</li> </ul>
Heater stops heating unexpectedly.	Overheat protection, tip-over switch, timer activated, desired temperature reached.	<ul style="list-style-type: none"> <li>◦ Check for obstructions around the heater.</li> <li>◦ Ensure the heater is upright on a stable surface.</li> <li>◦ Verify the timer setting.</li> <li>◦ Adjust the thermostat to a higher temperature.</li> </ul>
Heater produces insufficient heat.	Low heat mode selected, thermostat set too low, room size too large.	<ul style="list-style-type: none"> <li>◦ Switch to High Heat (1500W) or ECO mode.</li> <li>◦ Increase the thermostat setting.</li> <li>◦ Ensure the heater is appropriate for the room size (up to 150 sq ft).</li> </ul>
Control panel buttons are unresponsive.	Child lock activated.	<ul style="list-style-type: none"> <li>◦ Deactivate the child lock by pressing and holding the child lock button.</li> </ul>

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Chikit
Model Number	PTC-SH009R
Power Output	1500W (High), 900W (Low)
Voltage	120 Volts

Feature	Detail
Amperage	12.5 Amps
Heating Technology	PTC Ceramic
Dimensions (D x W x H)	6.3" x 4.72" x 8.54"
Weight	2.64 pounds
Heating Coverage	Up to 150 square feet
Special Features	Adjustable Thermostat, 24H Timer, Child Lock, Overheat Protection, Tip-over Protection
Included Components	Space Heater, User Guide

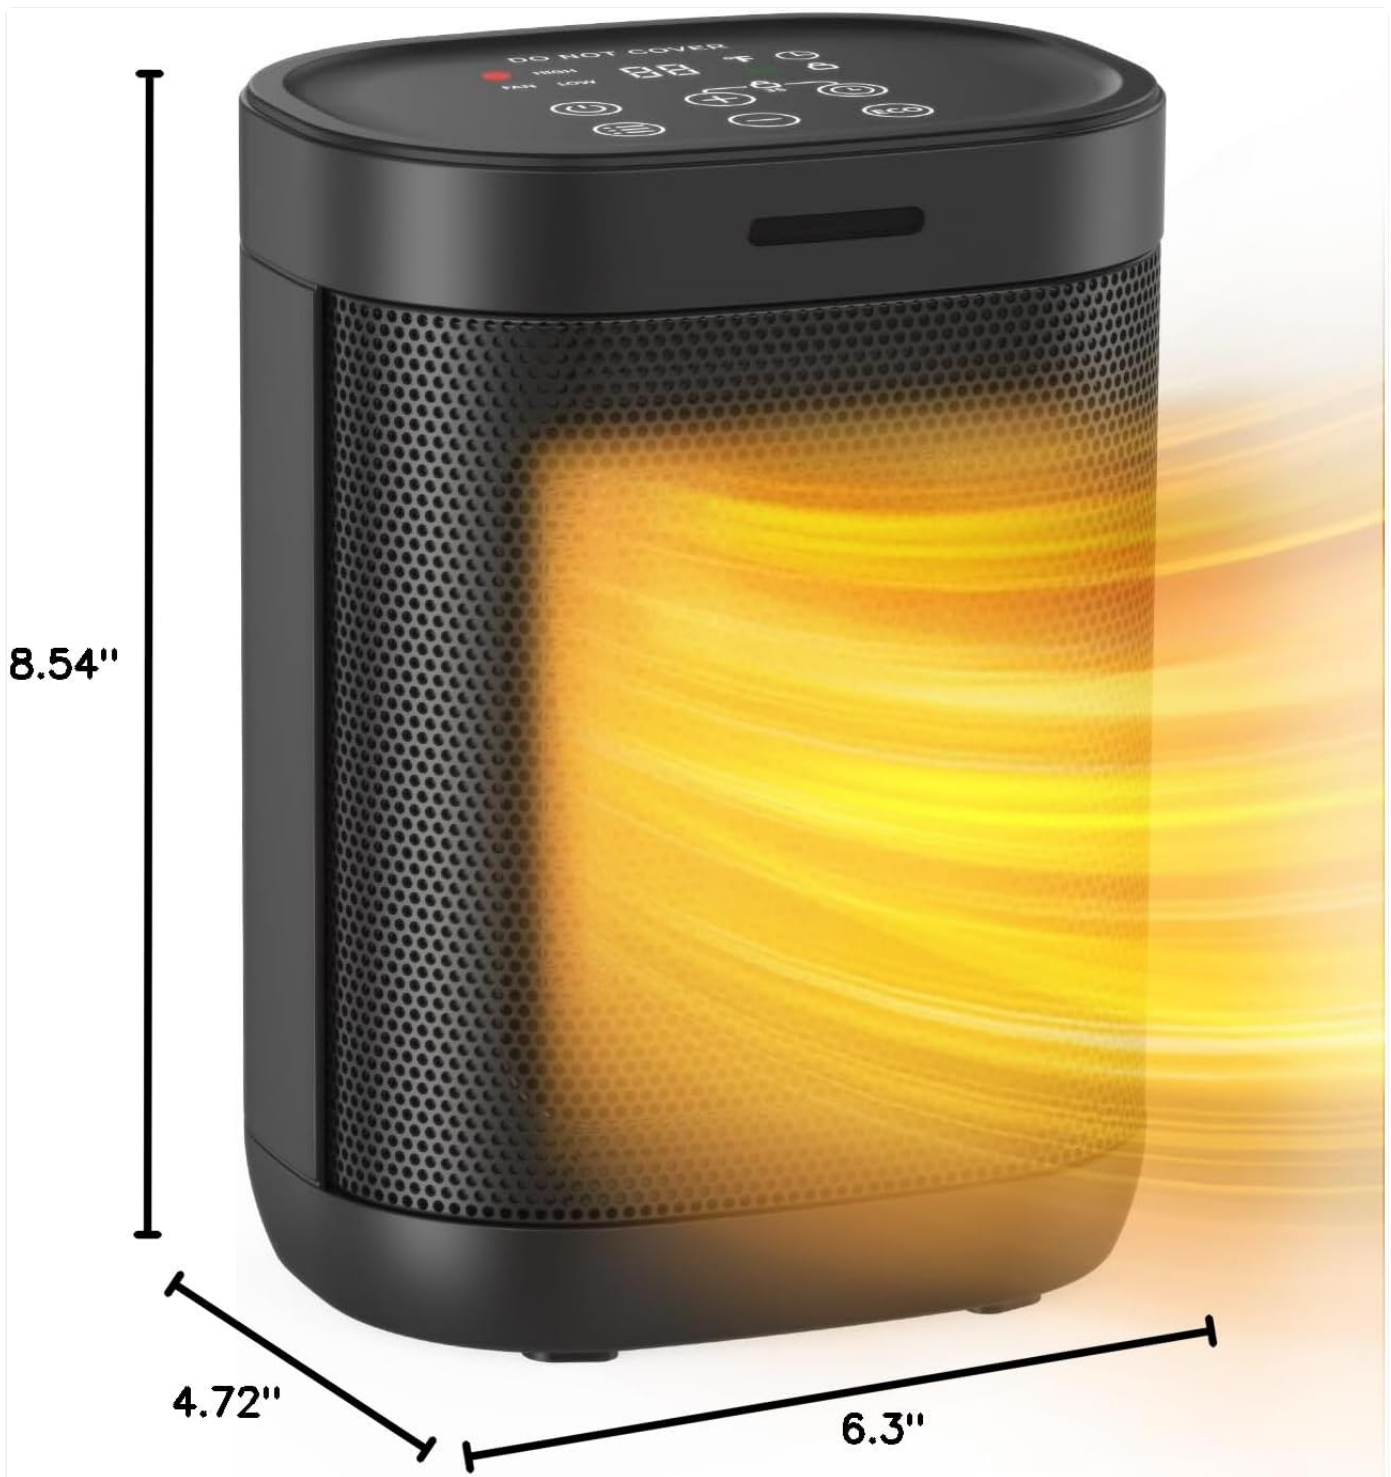


Image: A clear view of the Chikit space heater with its precise dimensions indicated, providing a visual reference for its size.

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Chikit website. Keep your purchase receipt as proof of purchase.

**Manufacturer:** Chikit



