

[Manuals.plus](#) /

› [Re-Flix](#) /

› Re-Flix Superior Light Universal Remote Control for Sat/DTT Canal+ (Model G9STEC1 / 747516) User Manual

Re-Flix Superior Light G9STEC1 / 747516

Re-Flix Superior Light Universal Remote Control

Model: G9STEC1 / 747516

Brand: Re-Flix

1. INTRODUCTION

Welcome to the user manual for your Re-Flix Superior Light Universal Remote Control. This 4-in-1 remote is designed for ease of use and comes pre-programmed for your Sat/DTT Canal+ device, eliminating the need for complex setup codes. Simply insert batteries, and your remote is ready for immediate operation. This manual provides essential information on setup, operation, maintenance, and troubleshooting to ensure optimal performance of your remote control.

2. PRODUCT OVERVIEW

The Re-Flix Superior Light is a versatile 4-in-1 universal remote control. It is specifically pre-programmed to operate your Sat/DTT Canal+ device, offering a seamless out-of-the-box experience. The remote retains its programming even when batteries are removed, ensuring no data loss.



Figure 1: Side view of the Re-Flix Superior Light remote control. This image displays the ergonomic design and the arrangement of buttons along its length.



Figure 2: Back view of the Re-Flix Superior Light remote control. This image highlights the battery compartment cover and includes regulatory markings such as CE and the WEEE symbol, along with manufacturer details.

3. SETUP: BATTERY INSTALLATION

Your Re-Flix Superior Light remote control requires two AAA (1.5V) batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote is now ready for use.

4. OPERATING INSTRUCTIONS

4.1 Initial Use

Once batteries are installed, your Re-Flix Superior Light remote control is immediately ready to operate your pre-programmed Sat/DTT Canal+ device. No additional codes or setup steps are required for this specific device.

4.2 Basic Functions

The remote control provides standard functions for your television or set-top box, including:

- **Power:** Turns the device on or off.
- **Channel Up/Down:** Navigates through channels.
- **Volume Up/Down:** Adjusts the audio level.
- **Mute:** Silences the audio.
- **Numeric Keypad:** For direct channel input.
- **Menu/Guide:** Accesses device menus and program guides.
- **Navigation Buttons:** For moving through menus and selections.

4.3 Programming Other Devices (Advanced)

While this remote is pre-programmed for your specified device, it is a 4-in-1 universal remote. To program it for other devices, a separate USB programmer is required. This USB programmer is not included with the remote control. Please refer to the instructions provided with the USB programmer for details on how to configure the remote for additional devices.

5. MAINTENANCE

5.1 Cleaning

To clean your remote control, use a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or solvents, as these can damage the remote's surface or internal components.

5.2 Battery Care

- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Replace all batteries at the same time with new ones of the same type.
- Dispose of used batteries responsibly according to local regulations.

The remote control is designed to retain its programming even when batteries are removed or depleted.

6. TROUBLESHOOTING

If you encounter issues with your Re-Flix Superior Light remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.

- Check for any obstructions between the remote control and your device's infrared receiver.
- Ensure your device (TV, Sat/DTT box) is powered on.
- **Incorrect commands or limited functionality:**
 - Verify that the model designation of your device or original remote control matches the model designation (G9STEC1) for which this remote was pre-programmed. Incompatibility can lead to partial or no functionality.
 - If you have attempted to program the remote for other devices using a USB programmer, ensure the correct device mode is selected (if applicable).

7. SPECIFICATIONS

Brand	Re-Flix
Model Numbers	G9STEC1, 747516
Type	4-in-1 Universal Remote Control
Compatibility	Pre-programmed for Sat/DTT Canal+ (G9STEC1)
Batteries Required	2 x 1.5V AAA (not included)
Weight	89 g
Dimensions (L x W x H)	21 x 4.7 x 2 cm
Manufacturer	Superior Electronics (Re-Flix)

8. WARRANTY INFORMATION

Specific warranty details for the Re-Flix Superior Light Universal Remote Control are not provided in the product information. For warranty terms and conditions, please consult your original purchase receipt, contact the retailer from whom you purchased the product, or visit the official Re-Flix / Superior Electronics website.

9. SUPPORT

For technical assistance, troubleshooting, or further inquiries regarding your Re-Flix Superior Light Universal Remote Control, please contact:

- **Retailer:** The store or online platform where you purchased the product.
- **Manufacturer:** Superior Electronics (Re-Flix)
- **Email:** superior@superior-electronics.com
- **Website:** www.superior-electronics.com
- **Address:** Largo Lanciani, 2A, 00162 Rome, Italy