

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Multi Groomer Series 7000 User Manual

PHILIPS MG7960/28

Philips Multi Groomer Series 7000

MODEL: MG7960/28

All-in-One Trimmer for Face, Head, Hair, Body, Groin, Nose, and Face

INTRODUCTION

The Philips Multigroom 7000 is a versatile grooming tool designed for various applications across the face, head, and body. It features self-sharpening steel blades that do not require oiling, maintaining their sharpness over time. This grooming kit includes 21 tools for comprehensive styling. Key features include adjustable combs for precise length settings, a dedicated ear and nose trimmer, and Smart BeardSense technology for consistent power delivery. The device is powered by a long-lasting lithium-ion battery and is designed for easy cleaning.

WHAT'S IN THE BOX

The Philips Multi Groomer Series 7000 comes with a comprehensive set of tools and accessories to meet diverse grooming needs.



Image: The Philips Multi Groomer handle shown alongside its various attachments, including different sized combs, a nose trimmer, and a detail trimmer.

- 1x Multigroom handle
- Multiple attachments and combs for face, head, and body trimming
- 1x USB-A charging cable (Note: Wall power adapter is not included)
- Travel pouch

SAFETY INFORMATION

The blades of this device are sharp. Exercise caution during use and cleaning to prevent injury. Keep the device out of reach of children. Do not use the device if it is damaged. Always ensure the device is dry before charging.

SETUP

Charging the Device

Before initial use, ensure the trimmer is fully charged. The device is battery-powered and requires charging via the included USB-A cable.



Image: A hand connecting the USB-A charging cable to the trimmer. A wall adapter is not included and must be supplied by the user.

1. Connect the USB-A charging cable to the charging port at the bottom of the trimmer.
2. Plug the other end of the USB-A cable into a compatible USB wall adapter (not included) or a powered USB port.
3. Allow the device to charge until the battery indicator shows a full charge. A 5-minute quick charge provides sufficient power for one trim, while a full charge offers up to 170 minutes of runtime.

OPERATING INSTRUCTIONS

The Philips Multi Groomer is designed for versatile use across different body areas. Select the appropriate attachment for your desired grooming task.

For hair, face, body and below-the-belt grooming

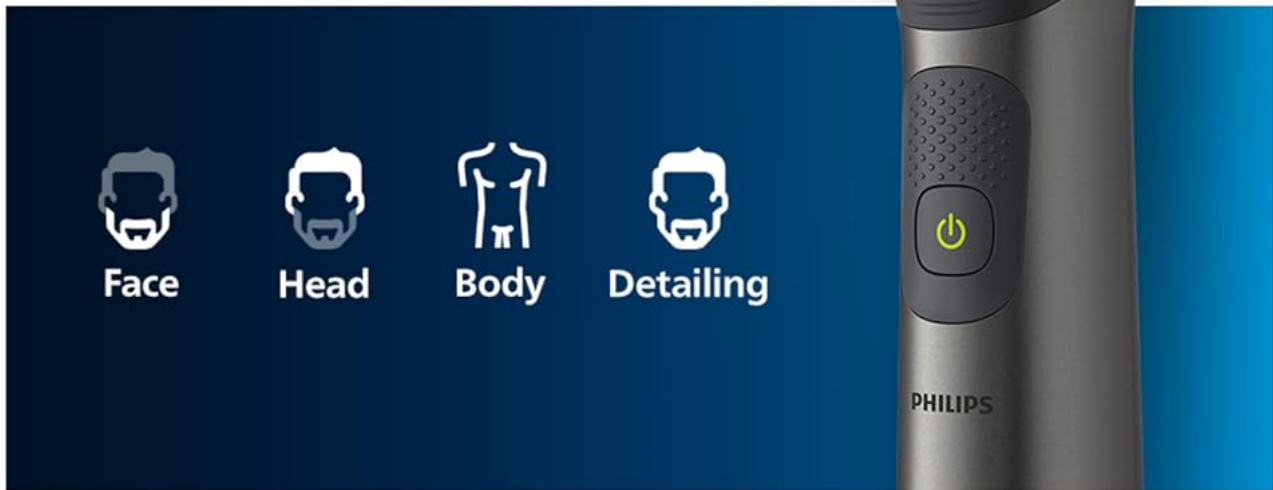 



Image: Visual representation of the trimmer's applications for face, head, body, and detailing.

Attaching and Removing Combs/Heads

- To attach a comb or head, align it with the trimmer's main blade and press firmly until it clicks into place.
- To remove, gently pull the attachment away from the trimmer head.

Adjusting Length Settings

 The trimmer and its multi-comb set offer 22 length settings, ranging from 0.5mm to 16mm, with precision steps of up to 0.2mm. Rotate the dial on the adjustable comb to select the desired length.

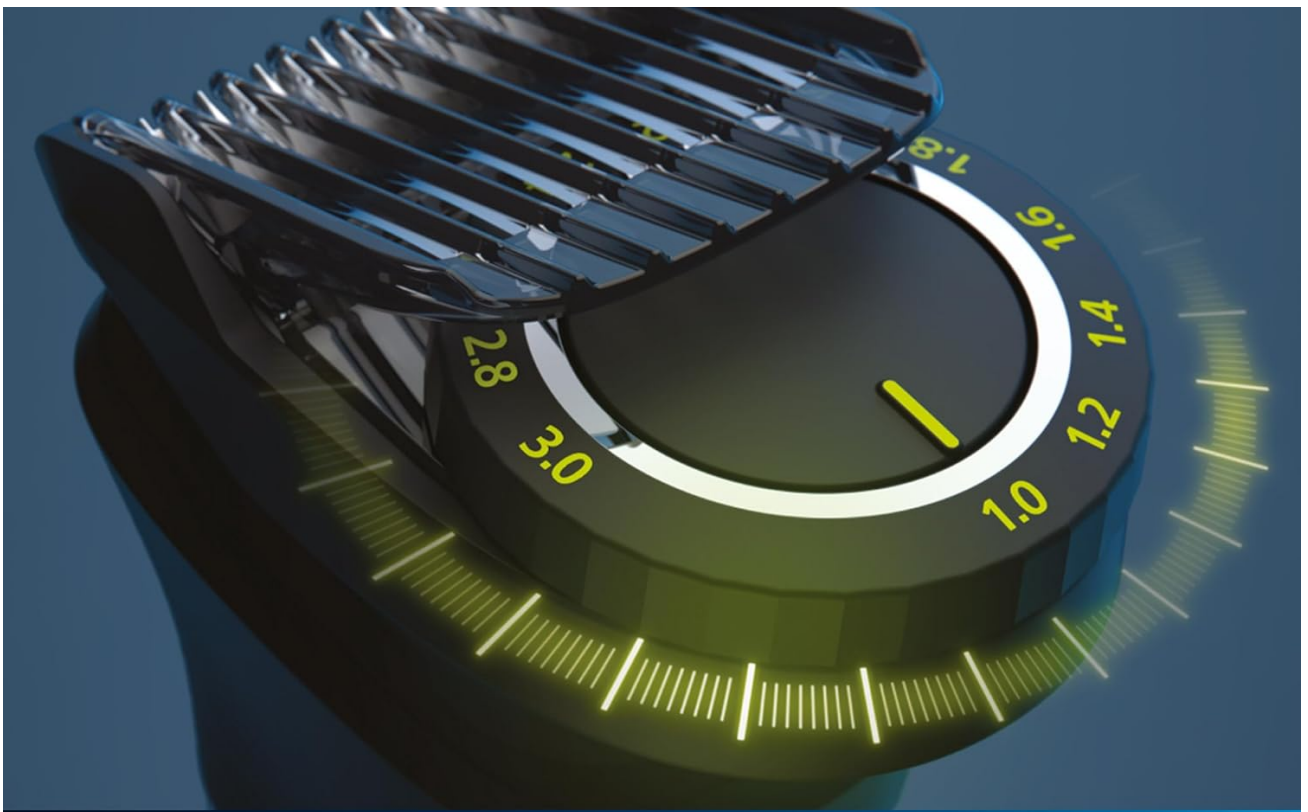

5x more precision
settings¹

Image: A detailed view of the adjustable comb, highlighting the precision dial for selecting various trimming lengths.

Grooming Techniques

- **Beard and Face Trimming:** Use the precision trimming guard or various beard combs to achieve desired beard lengths and styles. The Smart BeardSense technology automatically adjusts power for dense beards.



Image: A user demonstrating beard trimming with the device, ensuring a clean and even cut.

- **Hair Clipping:** Attach the hair combs for head grooming. Move the trimmer against the direction of hair growth for an even cut.



Image: A user cutting his own hair using the trimmer and a comb attachment, reflected in a mirror.

- **Body Grooming:** Utilize the body grooming attachments for trimming hair on the body, including sensitive areas.

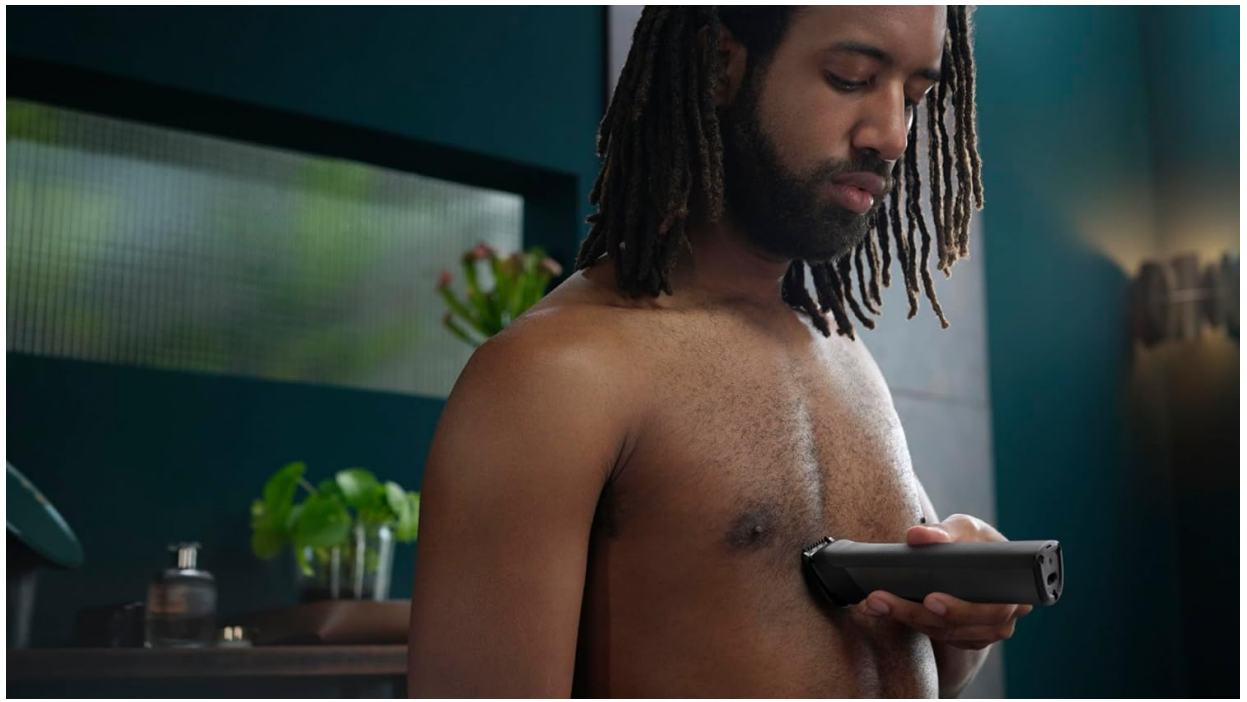 


Image: A user trimming hair on his chest with the Philips Multi Groomer, demonstrating body grooming functionality.

- **Nose and Ear Trimming:** Use the dedicated nose and ear trimmer attachment for removing unwanted hair.



Image: A user utilizing the specialized nose trimmer attachment for precise hair removal.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your Philips Multi Groomer.

Cleaning

The trimmer is fully washable, allowing for easy cleaning under running water.



Image: The trimmer head being rinsed under a faucet, demonstrating its waterproof design for easy cleaning.

1. After each use, turn off the trimmer and detach any combs or heads.
2. Rinse the trimmer head and attachments thoroughly under warm running water.
3. Shake off excess water and allow all parts to air dry completely before reattaching or storing.
4. The self-sharpening steel blades do not require oiling. The grease observed when removing the trimmer head is intentional for consistent performance.

TROUBLESHOOTING

If you encounter any issues with your Philips Multi Groomer, consider the following:

- **Device not turning on:** Ensure the device is fully charged. Connect it to a power source and allow sufficient charging time.
- **Reduced trimming performance:** Clean the trimmer head and attachments thoroughly to remove any accumulated hair. Ensure no hair is obstructing the blades.
- **Attachments not fitting:** Verify that you are using the correct attachment for the desired function and that it is aligned properly before pressing to secure.

For persistent issues, please refer to the support section for contact information.

SPECIFICATIONS

Feature	Detail
Model Number	MG7960/28
Brand	PHILIPS
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Runtime	Up to 170 minutes

Charging Time	5-minute quick charge for one trim
Blade Material	Stainless Steel (Self-sharpening)
Length Settings	22 settings (0.5mm to 16mm)
Special Features	Rechargeable, USB Charging, Smart BeardSense Technology, Fully Washable
Recommended Uses	Beard, Face, Head, Nose, Under Arm
Product Dimensions	7 x 14 x 23.01 cm
Weight	490 g
Country of Origin	Indonesia

WARRANTY AND SUPPORT

This Philips Multi Groomer Series 7000 is covered by the manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, product registration, or to inquire about replacement parts, please visit the official Philips support website or contact their customer service department. Contact information can typically be found in the product documentation or on the Philips brand website.