

[Manuals.plus](#) /

› [Ninja](#) /

› Ninja Foodi FP601CO Professional Plus Food Processor User Manual

## Ninja FP601CO

# Ninja Foodi FP601CO Professional Plus Food Processor User Manual

Model: FP601CO | Brand: Ninja

## INTRODUCTION

The Ninja Foodi FP601CO Professional Plus Food Processor is designed for versatile food preparation. It features a powerful 1000-watt motor and 4 intelligent Auto-iQ programs for chopping, pureeing, slicing, and mixing dough. The 9-cup processing bowl accommodates both small and large batches, making it suitable for various culinary tasks.

## IMPORTANT SAFEGUARDS

To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed when using this appliance:

- Read all instructions before operating the appliance.
- Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving blades or discs during operation to prevent personal injury and/or damage to the food processor.
- Never operate the appliance without the lid securely locked in place.
- Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.
- Do not process hot liquids in the food processor.

## WHAT'S INCLUDED

Your Ninja Foodi FP601CO Professional Plus Food Processor includes the following components:

- 1000-Watt Motor Base
- 9-Cup (2.1L) Processing Bowl
- Lid with Feed Chute and Pusher
- Chopping Blade Assembly
- Dough Blade Assembly
- Reversible Slicing/Shredding Disc
- Disc Spindle



### **Rendimiento profesional y versatilidad con solo tocar un botón.**

El procesador de alimentos Ninja® Profesional facilita la preparación de alimentos con su potente pico de 1000 Watts, 4 programas preestablecidos inteligentes Auto-iQ® y un exclusivo sistema de cuchillas para una máxima versatilidad. Ahora, puede pasar menos tiempo preparando y más tiempo disfrutando de comidas deliciosas.

Image: All components of the Ninja Foodi FP601CO Food Processor, including the motor base, processing bowl, lid, chopping blade, dough blade, slicing/shredding disc, and disc spindle.

## **SETUP**

Follow these steps to set up your food processor for use:

1. Place the motor base on a clean, dry, and level surface.
2. Place the 9-cup processing bowl onto the motor base and twist clockwise until it securely locks into place.
3. Carefully place the desired blade assembly (chopping or dough) or the disc spindle into the center of the processing bowl. If using the slicing/shredding disc, place it onto the disc spindle.
4. Add your ingredients to the processing bowl.
5. Place the lid onto the processing bowl, aligning the arrow on the lid with the arrow on the handle. Twist the lid clockwise until it clicks and locks into place. Ensure the pusher is in the feed chute if using the slicing/shredding disc.
6. Plug the power cord into an electrical outlet. The unit is now ready for operation.



Image: The Ninja Foodi FP601CO Food Processor fully assembled with the processing bowl and lid in place, ready for use.

## OPERATING INSTRUCTIONS

---

The Ninja Foodi FP601CO features a control panel with Auto-iQ programs and manual speed settings for precise control over your food preparation.

## Control Panel Overview



Image: Close-up of the Ninja Foodi FP601CO control panel, showing the power button, Auto-iQ programs (Chop, Puree, Dough, Disc), and manual speed settings (Low, High, Pulse).

## Auto-iQ Programs

These intelligent preset programs combine unique pulsing and pausing patterns to deliver consistent results with a single touch.

- **CHOP:** Ideal for evenly chopping ingredients such as onions, carrots, and nuts.
- **PUREE:** Creates smooth purees, sauces, and dips from various ingredients.
- **DOUGH:** Specifically designed for mixing doughs for items like pizza, cookies, and bread.
- **DISC:** Optimizes performance when using the reversible slicing/shredding disc.

## Manual Speed Settings

- **LOW:** Provides gentle mixing and processing for delicate ingredients.
- **HIGH:** Offers faster processing for harder ingredients or when a quicker result is desired.
- **PULSE:** Delivers controlled bursts of power for precise chopping and mixing. Hold down for continuous pulsing.

## Using the Slicing/Shredding Disc

To use the slicing/shredding disc:

1. Ensure the disc spindle is in the processing bowl.
2. Carefully place the reversible slicing/shredding disc onto the spindle.
3. Secure the lid with the pusher in the feed chute.
4. Turn on the unit and select the 'DISC' Auto-iQ program or a manual speed.
5. Gradually feed ingredients through the feed chute using the pusher. Do not force ingredients.



Image: The Ninja Foodi FP601CO Food Processor actively chopping vegetables in the processing bowl.

## MAINTENANCE AND CLEANING

Proper maintenance and cleaning will ensure the longevity and optimal performance of your food processor.

- Always unplug the motor base before cleaning.
- All removable parts, including the processing bowl, lid, blade assemblies, and disc, are BPA-free and dishwasher safe. Place them on the top rack of your dishwasher.
- For quick cleaning, add warm water and 1-2 drops of dish soap to the processing bowl. Secure the lid and run the unit on the PULSE setting for a few seconds. Rinse thoroughly.
- Wipe the motor base with a clean, damp cloth. Do not immerse the motor base in water or any other liquid.
- Store the food processor with the blades and discs safely stored within the bowl or in a designated storage

area.



#### 1000 Watts de Potencia

El motor de grado profesional tiene suficiente potencia para convertir los ingredientes más duros en purés suaves



#### Fácil de limpiar

Usa un poco de agua tibia y unas gotas de jabón. Todas las piezas son libres de BPA y apto para lavavajillas.



#### Capacidad de 9 tazas

Espere resultados consistentes ya sea que esté cortando un lote pequeño o todo un cuenco de ingredientes.

Image: The processing bowl and lid of the Ninja Foodi FP601CO Food Processor placed in a dishwasher, illustrating their dishwasher-safe feature.

## TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

- **Unit does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Verify that the processing bowl and lid are correctly assembled and locked into place. The unit has safety interlocks that prevent operation if not properly assembled.
- **Ingredients are not processing evenly:** For best results, ensure ingredients are cut into uniform, smaller pieces before processing. Use the PULSE function for better control over chopping and to redistribute ingredients. Do not overload the bowl.
- **Motor seems strained or unit stops during operation:** This may indicate an overload. Unplug the unit, remove some ingredients, and allow the motor to cool down for a few minutes before resuming. Process in smaller batches.
- **Lid is difficult to remove or attach:** Ensure the unit is unplugged. Check for any food debris obstructing the locking mechanism. Apply gentle pressure and twist to lock/unlock.

SPECIFICATIONS

|                        |                                                   |
|------------------------|---------------------------------------------------|
| Brand                  | Ninja                                             |
| Model Name             | FP601CO                                           |
| Wattage                | 1000 Watts                                        |
| Bowl Capacity          | 9 Cups (2.1 Liters)                               |
| Speeds                 | 3 (Low, High, Pulse) + 4 Auto-iQ Programs         |
| Voltage                | 120 Volts                                         |
| Material               | Stainless Steel (Blades), BPA-free Plastic (Bowl) |
| Dimensions (D x W x H) | 25 cm x 20 cm x 40 cm                             |
| Weight                 | 7.65 lbs                                          |
| Care Instructions      | Dishwasher Safe Parts                             |

Funciones

4 programas inteligentes Auto-iQ preestablecidos, hacen que la preparación de alimentos sea más fácil. Cuenta con 3 velocidades: bajo, alto y pulso.



Cuchilla para cortar  
Simplifica la preparación de alimentos con resultados de picado rápidos y uniformes.



Cuchilla para amasar  
Realiza mezclas perfectas y uniformes para preparar pizza, galletas y postres deliciosos.



Disco rebanador  
Rebana, ralla y tritura de forma rápida y uniforme todo tipo de alimentos y vegetales.

Image: Diagram illustrating the dimensions of the Ninja Foodi FP601CO Food Processor, showing its height of 40 cm and width of 25 cm.

WARRANTY AND SUPPORT

This Ninja Foodi FP601CO Food Processor is offered as a refurbished item. Please refer to the seller's specific return policy for details regarding returns and exchanges. A 90-day free return policy is typically available for refurbished products. Optional extended protection plans, such as those offered by Assurant, may be purchased separately to cover accidental damages for a longer period.

For product support or further assistance, please contact the retailer or refer to the official Ninja website for general product information.