

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AURUM](#) /

› [Parkside PRM 1800 B2 Electric Lawnmower User Manual](#)

## AURUM PARKSIDE® PRM 1800 C3

# Parkside PRM 1800 B2 Electric Lawnmower User Manual

Model: PARKSIDE® PRM 1800 C3

## 1. INTRODUCTION

This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your Parkside PRM 1800 B2 Electric Lawnmower. Please read this manual thoroughly before first use and keep it for future reference.

The Parkside PRM 1800 B2 is designed for cutting grass in private gardens. It features a powerful 1800 W motor and a 44 cm cutting width, making it suitable for medium to large lawns.

## 2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

### General Safety Warnings:

- Read all instructions carefully before operating the lawnmower.
- Keep children and bystanders away while operating the lawnmower.
- Wear appropriate personal protective equipment, including eye protection and sturdy footwear.
- Do not operate the lawnmower in wet conditions or rain.
- Always disconnect the power supply before cleaning, adjusting, or performing maintenance.
- Inspect the power cord for damage before each use.
- Ensure the blade is fully stopped before touching it.

### Electrical Safety:

- Only connect the lawnmower to a properly grounded outlet.
- Use only extension cords suitable for outdoor use and rated for the appliance's power.
- Avoid damaging the power cord. Do not carry the lawnmower by the cord or pull the cord to disconnect it from the outlet.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Parkside PRM 1800 B2 Electric Lawnmower.



Figure 1: Overview of the Parkside PRM 1800 B2 Electric Lawnmower. Shows the main body, handle, grass collection bag, and wheels.

Key components include:

- **Motor Housing:** Contains the 1800 W turbo motor.
- **Cutting Blade:** Sharp special steel blade with 44 cm cutting width.
- **Height Adjustment Lever:** For 7-level central cutting height adjustment (20-70 mm).
- **Handlebar:** Height-adjustable with soft-grip handles and integrated cable strain relief.
- **Grass Collection Bag:** 55 L capacity with fill indicator and carrying handle.
- **Wheels:** Wide wheels with lawn-protecting profile.
- **Edge Feeder:** On both sides for close-to-edge cutting.

### 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your lawnmower before first use.

#### 4.1 Handle Assembly:

1. Unfold the handlebar and secure it in place using the provided fasteners.
2. Adjust the handlebar height to a comfortable position for operation.
3. Ensure the cable strain relief is properly attached to prevent accidental disconnection of the power cord.

#### 4.2 Grass Collection Bag Attachment:

1. Assemble the grass collection bag according to the instructions provided in the packaging.
2. Lift the rear flap of the lawnmower.
3. Hook the grass collection bag onto the designated points at the rear of the lawnmower. Ensure it is securely seated.

#### 4.3 Cutting Height Adjustment:

The cutting height can be adjusted centrally to 7 different levels, from approximately 20 mm to 70 mm.

1. Ensure the lawnmower is switched off and disconnected from the power supply.
2. Locate the central height adjustment lever on the side of the lawnmower.
3. Pull the lever outwards and move it to the desired height setting.

4. Release the lever to lock it into position. Ensure all four wheels are at the same height.

## 5. OPERATING INSTRUCTIONS

---

Before starting, ensure all safety precautions are understood and followed.

### 5.1 Starting the Lawnmower:

1. Connect the lawnmower to a suitable outdoor power outlet.
2. Press and hold the safety button, then pull the switch lever towards the handle.
3. The motor will start. Release the safety button, but continue to hold the switch lever to keep the lawnmower running.

### 5.2 Mowing Technique:

- Mow in overlapping strips to ensure even coverage.
- For best results, mow when the grass is dry.
- Do not attempt to cut excessively long grass in one pass. Adjust the cutting height to a higher setting first, then gradually lower it.
- Utilize the grass edge feeder for clean cuts along borders and obstacles.

### 5.3 Stopping the Lawnmower:

Release the switch lever. The blade brake function will quickly stop the blade.

**WARNING: Always wait for the blade to come to a complete stop before approaching the lawnmower or performing any adjustments.**

## 6. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and optimal performance of your lawnmower.

### 6.1 Cleaning:

- After each use, disconnect the power supply.
- Clean the underside of the cutting deck and the blade area using a brush or scraper.
- Wipe down the exterior of the lawnmower with a damp cloth. Do not use high-pressure cleaners or running water directly on the motor housing.
- Empty and clean the grass collection bag regularly.

### 6.2 Blade Care:

- The special steel blade should be inspected regularly for sharpness and damage.
- A dull blade can tear grass, leading to an unhealthy lawn.
- Blade sharpening or replacement should be performed by a qualified service technician.

### 6.3 Storage:

- Clean the lawnmower thoroughly before storing.
- The foldable function allows for space-saving storage. Fold the handlebar down.
- Store the lawnmower in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- Keep out of reach of children.

## 7. TROUBLESHOOTING

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Lawnmower does not start.	No power supply. Safety switch not engaged. Overload protection activated.	Check power connection and outlet. Ensure safety button and switch lever are correctly pressed. Disconnect from power, wait a few minutes, then try again. Reduce load.
Uneven cutting.	Dull or damaged blade. Incorrect cutting height setting.	Have blade sharpened or replaced by a professional. Adjust cutting height evenly.
Excessive vibration.	Damaged or unbalanced blade. Loose components.	Inspect blade for damage; replace if necessary. Check all screws and fasteners for tightness.
Grass collection bag not filling properly.	Bag full. Chute clogged. Cutting height too low for grass length.	Empty grass bag. Clear any blockages from the discharge chute (ensure power is disconnected). Increase cutting height.

If the problem persists after attempting these solutions, please contact customer support.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	PARKSIDE® PRM 1800 C3
Connection Power	1800 W
Power Supply	220 - 240 V / 50 Hz
Idle Speed	3250 min <sup>-1</sup>
Cutting Width	Approx. 44 cm
Cutting Height Adjustment	7 levels, approx. 20 - 70 mm
Collection Bag Volume	Approx. 55 L
Sound Pressure Level (LpA)	Max. 85 dB (A)
Sound Power Level (LwA)	Max. 96 dB (A)
Vibration Emission Value (ah)	Max. 2.5 m/s <sup>2</sup>
Material	Plastic, Steel Alloy

Feature	Specification
Approximate Dimensions (L x W x H)	144 x 49 x 103 cm
Weight (without EK9)	14.000 g (14 kg)
WEEE Registration Number	DE12869203

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact AURUM customer service directly.

Keep your proof of purchase for any warranty claims.

## 10. DISPOSAL

Do not dispose of electrical appliances with household waste. According to European Directive 2012/19/EU on Waste Electrical and Electronic Equipment and its implementation into national law, electrical appliances that are no longer usable must be collected separately and disposed of in an environmentally sound manner.

Contact your local authority for information regarding disposal facilities.