

## Smeg TSF99PBUS

# SMEG 2 Slice Toaster and Sandwich Rack Combo (TSF99PBUS) Instruction Manual

Model: TSF99PBUS

## 1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using the appliance. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

## 2. PRODUCT OVERVIEW

The SMEG 2 Slice Toaster and Sandwich Rack Combo is designed to provide efficient and versatile toasting and sandwich preparation. This appliance features a retro-inspired design with modern functionalities.

## 2.1 Components

- **Toasting Slots:** Two wide slots for bread, bagels, or sandwiches.
- **Activating Lever:** Lowers food into the toasting slots and initiates the toasting cycle.
- **Browning Level Control:** A backlit chrome knob with 6 settings to adjust toast darkness.
- **Function Buttons:** Includes Reheat, Defrost, Cancel, and Bagel settings.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning.
- **Sandwich Racks:** Two stainless steel racks designed to hold sandwiches for toasting.



Image: Front view of the SMEG 2 Slice Toaster in Pastel Blue.



Image: Front view of the SMEG 2 Slice Toaster, highlighting the control panel with browning knob and function buttons.



Image: Two stainless steel sandwich racks, designed for use with the SMEG toaster.

### 3. SETUP

---

#### 3.1 Unpacking

1. Remove all packaging materials from the toaster and sandwich racks.
2. Ensure all components are present and undamaged.
3. Wipe the exterior of the toaster with a damp cloth. Wash the sandwich racks with warm, soapy water and dry thoroughly.

#### 3.2 Placement

- Place the toaster on a stable, heat-resistant, and dry surface.
- Ensure there is adequate clearance around the toaster, especially above the toasting slots, to prevent fire hazards.
- Do not place near curtains, walls, or other flammable materials.

#### 3.3 First Use

Before toasting food for the first time, it is recommended to run the toaster empty to burn off any manufacturing residues.

1. Plug the toaster into a grounded electrical outlet.
2. Set the browning level to 3 or 4.
3. Lower the activating lever without any food in the slots.
4. Allow the cycle to complete. A slight odor or smoke may be present; this is normal.

5. Repeat this process 2-3 times in a well-ventilated area.

## 4. OPERATING THE TOASTER

---

### 4.1 Basic Toasting

1. Insert slices of bread into the toasting slots.
2. Select your desired browning level using the control knob (settings 1-6, with 1 being lightest and 6 darkest).
3. Press the activating lever down until it locks into place. The selected function button will illuminate.
4. The toaster will automatically raise the toast when the cycle is complete.

### 4.2 Function Buttons

- **REHEAT (燠):** Briefly reheats toast without further browning. Press this button after lowering the lever.
- **DEFROST (冷冻):** Defrosts and toasts frozen bread. Press this button after lowering the lever.
- **BAGEL (面包圈):** Toasts the cut side of bagels while gently warming the other side. Press this button after lowering the lever.
- **CANCEL (STOP):** Stops the toasting cycle at any time. Press the illuminated STOP button on the browning control knob.

### 4.3 Using the Sandwich Racks

The sandwich racks allow you to toast filled sandwiches or other items that might be difficult to toast directly in the slots.

1. Prepare your sandwich and place it inside one of the sandwich racks. Ensure the filling is secure.
2. Insert the sandwich rack into a toasting slot.
3. Select a medium browning level (e.g., 3 or 4) on the control knob.
4. Lower the activating lever.
5. Monitor the sandwich to prevent over-browning or burning, especially with cheese fillings. Use the CANCEL button if needed.
6. Once toasted, carefully remove the hot sandwich rack using its handles.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your toaster.

### 5.1 General Cleaning

1. Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads.
3. Never immerse the toaster body in water or any other liquid.

### 5.2 Crumb Tray



Image: The removable crumb tray of the SMEG 2 Slice Toaster, shown partially extracted for cleaning.

1. Locate the removable crumb tray at the bottom of the toaster.
2. Pull the tray out to remove accumulated crumbs.
3. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
4. Push the crumb tray back into place until it clicks securely.

### 5.3 Toasting Slots

- Do not insert any metal objects into the toasting slots.
- If food becomes stuck, unplug the toaster and allow it to cool. Carefully dislodge the food using non-metallic tongs.

### 5.4 Sandwich Racks

- After each use, allow the sandwich racks to cool completely.
- Wash the racks with warm, soapy water. Use a non-abrasive brush if necessary to remove food residue.
- Rinse thoroughly and dry completely before storing or reusing.

## 6. TROUBLESHOOTING

---

If you encounter issues with your SMEG toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is fully inserted. Check circuit breaker. Try a different outlet.
Bread does not toast.	Activating lever not fully depressed; browning setting too low.	Push lever down until it locks. Increase browning level.
Toast is unevenly browned.	Uneven bread thickness; residue in slots.	Ensure bread slices are uniform. Clean crumb tray and check slots for debris (when unplugged and cool).
Food stuck in slots.	Oversized food; food expanded during toasting.	Unplug toaster and allow to cool. Carefully remove food with non-metallic tongs.
Smoke coming from toaster.	Food residue/crumbs burning; food too large or greasy.	Immediately press CANCEL and unplug. Clean crumb tray. Avoid overfilling slots or using very greasy items.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Smeg
Model Number	TSF99PBUS
Color	Pastel Blue
Material	Stainless Steel
Product Dimensions	8"D x 8"W x 10"H
Specific Uses For Product	Bagel, Bread, Sandwich
Wattage	980 watts
Number of Slices	2
Special Feature	Cancel Function
Style	2 Slice Toaster with Sandwich Racks
Voltage	120 Volts (AC)
Number of Settings	6 (Browning Levels)
UPC	812895024883
Manufacturer	SMEG
Item Weight	9.38 pounds
ASIN	B0C9SSL2N4

Feature	Detail
Date First Available	June 29, 2023

## 8. WARRANTY AND SUPPORT

---

This SMEG appliance is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and registration, please refer to the warranty card included with your product or visit the official Smeg website.

For technical support, service, or to order replacement parts, please contact Smeg customer service through their official channels. Keep your purchase receipt and model number (TSF99PBUS) handy when contacting support.