

Manuals.plus /

› Silonn /

› Silonn Nugget Ice Maker SLIM17B User Manual

Silonn SLIM17B

Silonn Nugget Ice Maker User Manual

Model: SLIM17B

INTRODUCTION

Welcome to the Silonn Nugget Ice Maker user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new ice maker. Please read this manual thoroughly before first use and keep it for future reference.

Product Overview

The Silonn Nugget Ice Maker (Model: SLIM17B) is a compact and portable countertop appliance designed to produce chewable nugget ice quickly and efficiently. It features a self-cleaning function and quiet operation, making it ideal for home, office, or party use.

What's Included

- Silonn Nugget Ice Maker Unit
- Ice Scoop
- Ice Basket
- User Manual (this document)

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or any part of the ice maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure the appliance is placed on a stable, level surface.
- Keep ventilation openings clear.

SETUP

Before first use, ensure the ice maker is properly set up.

1. **Unpacking:** Carefully remove the ice maker from its packaging. Remove all packing materials, including any tape or protective film.
2. **Placement:** Place the ice maker on a flat, stable surface away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit (at least 5 inches of space on all sides).
3. **Initial Cleaning:** Before making ice for the first time, clean the interior of the ice maker. Refer to the "Maintenance and Cleaning" section for detailed instructions.
4. **Power Connection:** Plug the ice maker into a grounded electrical outlet. Ensure the voltage matches the specifications of your unit.
5. **Water Fill:** Open the water reservoir cover and fill the reservoir with clean, potable water up to the MAX fill line. Do not overfill.



Figure 1: Silonn Nugget Ice Maker ready for use. Ensure proper placement and water filling before operation.

OPERATING INSTRUCTIONS

Follow these steps to operate your Silonn Nugget Ice Maker.

1. **Power On:** Press the "ICE/CLEAN" button once to turn on the ice maker. The indicator light will illuminate.
2. **Ice Production:** The ice maker will automatically begin the ice-making cycle. The first batch of nugget ice typically takes about 6 minutes.
3. **Ice Collection:** As ice is produced, it will drop into the ice basket. The unit will pause ice production when the ice basket is full, indicated by the "ICE FULL" light.
4. **Add Water Indicator:** If the water level in the reservoir is low, the "ADD WATER" light will illuminate, and the ice maker will pause. Refill the water reservoir to resume ice production.
5. **Power Off:** To turn off the ice maker, press the "ICE/CLEAN" button again.



**Cool drinks,
delicious ice cubes**

Figure 2: Front panel of the ice maker showing the "ICE FULL" and "ADD WATER" indicator lights, and the "ICE/CLEAN" button.

The Silonn Nugget Ice Maker is designed for quiet operation, allowing it to be used in various settings without significant disturbance.

Ice-full Reminder

Do not make ice for a long time, when the ice is full, it will stop working to save energy.



Figure 3: The ice maker operates quietly, suitable for various environments.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and longevity of your ice maker.

Self-Cleaning Function

The ice maker features an automatic self-cleaning cycle:

1. Ensure the water reservoir is filled with clean water.
2. Press and hold the "ICE/CLEAN" button for 5 seconds. The self-cleaning cycle will begin and typically lasts about 15 minutes.
3. After the cycle, drain any remaining water from the unit.



Figure 4: The self-cleaning function circulates water to clean internal components.

Manual Cleaning and Descaling

For thorough cleaning or descaling, especially in hard water areas:

- **Removable Cover:** The top cover of the ice maker is removable, allowing access to internal components for deep cleaning.
- **Descaling:** Hard water can lead to mineral buildup.
 - In moderately hard water areas (1-120mg/L calcium carbonate), descale monthly.
 - In hard to very hard water areas (121-250mg/L calcium carbonate), descale every two to three weeks.
 - Use a descaling solution recommended for ice makers or a mixture of water and white vinegar. Follow the descaling product's instructions.
- **Draining:** Regularly drain the water from the unit using the drain plug at the bottom to prevent stagnant water and mineral buildup.
- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth.



Figure 5: Hard water can affect your ice maker. Regular descaling is recommended based on water hardness in your area.

TROUBLESHOOTING

If you encounter issues with your Silonn Nugget Ice Maker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Ice maker not producing ice.	No water in reservoir; Power issue; Ambient temperature too high.	Fill water reservoir; Check power connection; Ensure unit is in a cool, well-ventilated area.
"ADD WATER" light is on.	Water level is low.	Add water to the reservoir up to the MAX fill line.
"ICE FULL" light is on.	Ice basket is full.	Remove ice from the basket. The unit will resume production automatically.
Ice melts quickly.	Ice maker is not a freezer; Ambient temperature.	This unit is designed to make ice, not store it long-term. Transfer ice to a freezer for storage. Ensure unit is not in a hot environment.
Unusual noise during operation.	Normal operation sounds (compressor, water pump); Unit not level.	Some sounds are normal. Ensure the unit is on a stable, level surface. If noise is excessive or unusual, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	SLIM17B
Product Dimensions (W x D x H)	11.3" x 8.66" x 12.68"
Weight	Approximately 20.5 Pounds
Ice Production Capacity	Up to 33 lbs per 24 hours
First Batch Ice Time	Approx. 6 minutes
Wattage	192 watts
Ice Type	Chewable Nugget Ice

Compact and Portable



Figure 6: Compact and portable design with detailed dimensions.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the original product packaging or visit the official Silonn website. Keep your purchase receipt as proof of purchase for warranty claims.

You can also find additional information and support on the Silonn Brand Store: [Silonn Official Store](#)