

ROFALL P1U-4

ROFALL USB Computer Speaker with Microphone

MODEL: P1U-4

Introduction

This manual provides instructions for the setup, operation, and maintenance of your ROFALL USB Computer Speaker with Microphone, Model P1U-4. This device is designed to enhance audio output and voice input for various computer-based activities, including online meetings, personal calls, and media playback.

Package Contents

- USB Computer Speaker (Model P1U-4) x 1
- Type-C Charging Cable x 1
- Product Manual x 1

Product Features

- **Integrated Microphone:** Features a built-in high-performance microphone with smart chip technology for effective ambient noise reduction, providing clear voice pickup.
- **Two EQ Sound Modes:** Easily switch between Music/Movie Mode and Voice Mode using the multi-functional button. Music/Movie Mode offers enhanced bass or balanced sound, while Voice Mode optimizes audio for online meetings and video calls.
- **Plug & Play Functionality:** Requires no driver installation. Connects directly via USB for immediate use.
- **Universal Compatibility:** Compatible with most computers and USB devices, including laptops from brands like Lenovo, ThinkPad, MacBook, HP, and Dell. Supports various operating systems such as Windows, Chrome OS, Mac OS, and Linux.


SMALL BUT MIGHTY



Louder
Sound



Punchy
Bass

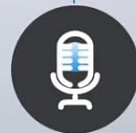

Built in
Microphone

Figure 1: Internal components and microphone placement.

NOISE CANCELLING ENHANCE THE DELIVERED VOICE



Figure 2: Noise cancellation feature for enhanced voice clarity.

Setup Instructions

1. **Connect the Speaker:** Plug the USB-A end of the provided Type-C charging cable into an available USB port on your computer. Connect the Type-C end of the cable to the Type-C port on the speaker unit.
2. **Power On:** Long press the Power Button (K Button) located on the side of the speaker for 2 seconds to turn on the device. A light indicator will illuminate.
3. **Select Audio Device:** On your computer's taskbar or system settings, select "USB Audio 4.0" as your default audio output and input device.



Figure 3: Connecting the speaker to a laptop.



Figure 4: Example of selecting the speaker as the audio device in macOS settings.

Operating Instructions

Controls Overview



Figure 5: Speaker control layout.

- **Power Button (K Button):** Long press for 2 seconds to power the speaker on or off. Short press to switch between Music/Movie Mode and Voice Mode.
- **Volume Knob:** Rotate the knob on the top surface to adjust the volume. Press the knob to play or pause audio.
- **Charge LED:** Indicates power status and charging.

Using the Speakerphone

For optimal voice pickup during calls or meetings, position the speaker in front of you or centrally on a table. The 360° voice pickup ensures clear communication.

360° VOICE PICKUP



Figure 6: Speaker in use for a meeting, demonstrating 360° voice pickup.

TRUE FULL-DUPLEX USB SPEAKERPHONE



Figure 7: Speaker used for full-duplex communication during a video call.

Compatibility

The ROFALL USB Computer Speaker is compatible with a wide range of devices and operating systems:

- **Operating Systems:** Windows, Chrome OS, Mac OS, Linux.
- **Devices:** Laptops and PCs from various brands including Lenovo, ThinkPad, MacBook, HP, Dell, and other universal USB devices.
- **Applications:** Works with popular communication platforms such as Skype, Google Hangouts, Zoom, Cisco Webex, and Microsoft Teams.

UNIVERSAL COMPATIBILITY

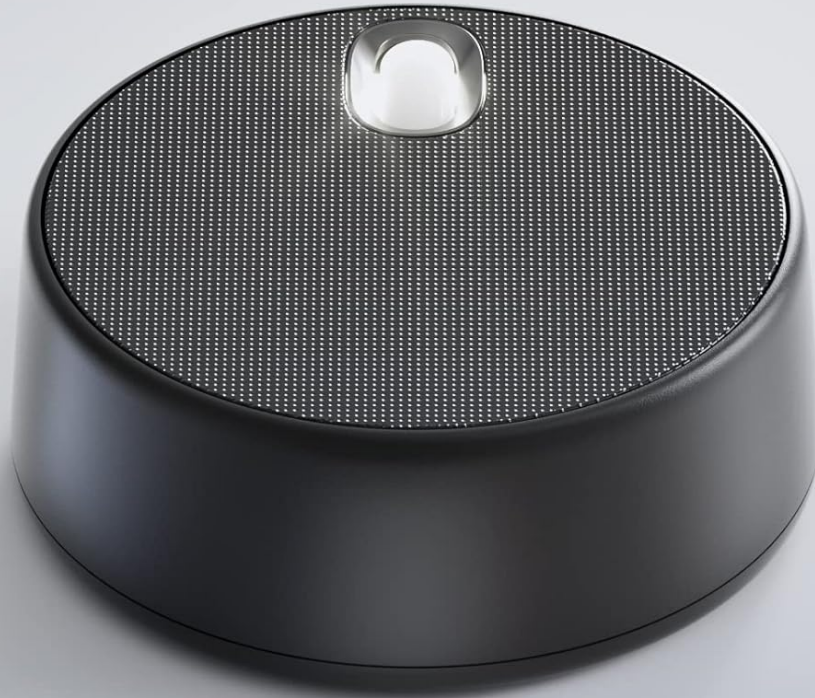


Figure 8: Compatible communication platforms.

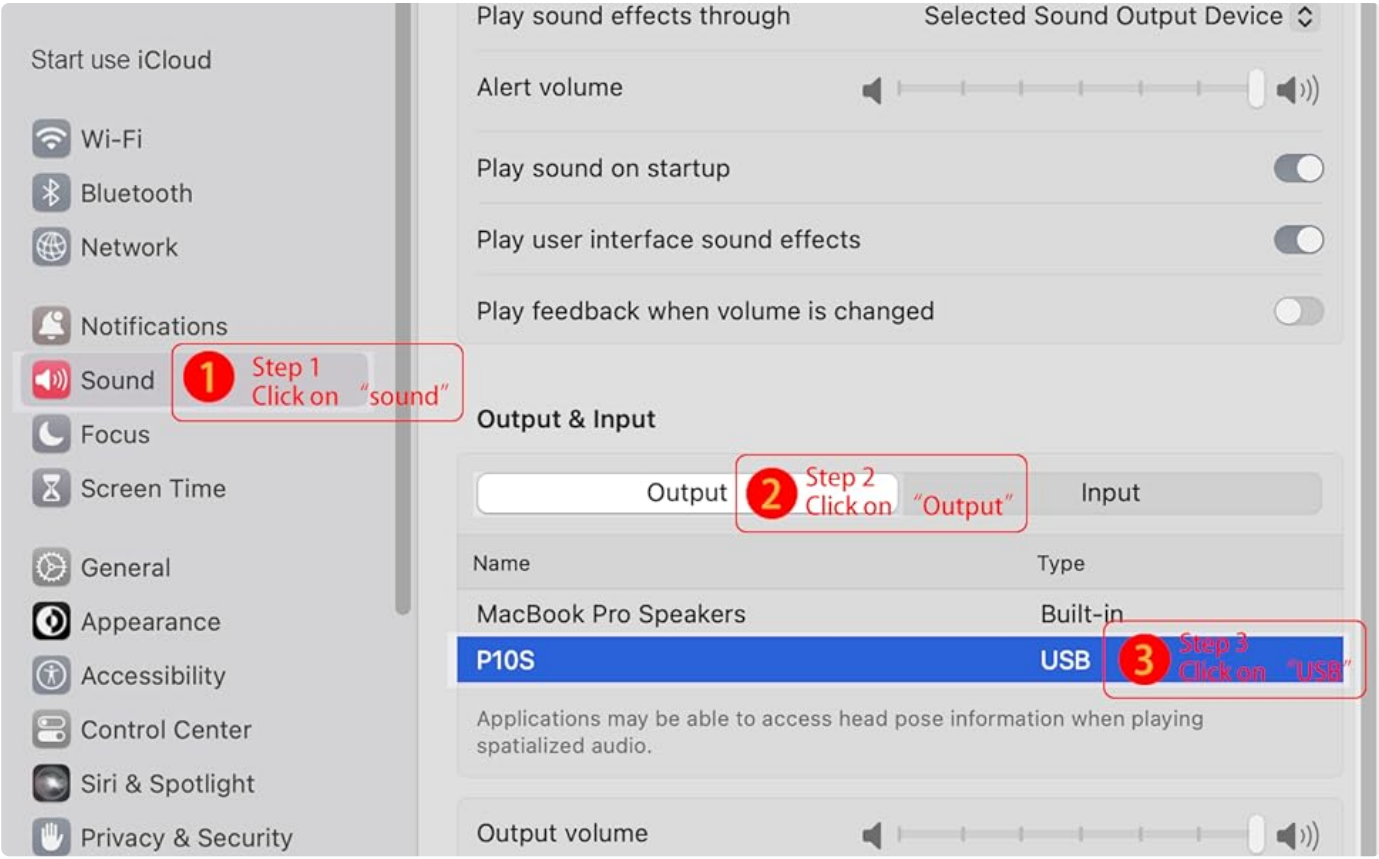


Figure 9: Compatible operating systems and computer brands.

Specifications

Feature	Specification
Model Name	P1U-4
Mounting Type	Plug Mount
Material	Metal
Speaker Type	Computer
Special Feature	Built-in Microphone, USB Port
Recommended Uses	For Computers
Compatible Devices	Laptop
Subwoofer Diameter	2.5 Inches
Surround Sound Channel Configuration	2.0
Color	Black
Product Dimensions	4.13"D x 4.06"W x 1.89"H
Item Weight	104 Grams (3.67 ounces)
Warranty Type	Limited
Maximum Range	10 Meters

Number of Items	1
Control Method	Touch
Power Source	Corded Electric
Audio Driver Type	Dynamic Driver
Audio Driver Size	5 Centimeters
Connectivity Technology	USB
Audio Output Mode	Mono

Maintenance

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Handling:** Handle the device with care to prevent physical damage. Avoid dropping or exposing it to excessive force.
- **Moisture:** This product is not waterproof. Keep it away from water and high humidity environments.

Troubleshooting

- **No Sound/Microphone Not Working:**
 - Ensure the speaker is properly connected to a functional USB port on your computer.
 - Verify that the speaker is powered on (check the LED indicator).
 - Confirm that "USB Audio 4.0" is selected as the default audio input and output device in your computer's sound settings.
 - Check your computer's volume levels and ensure they are not muted.
- **Poor Sound Quality:**
 - Adjust the volume using the knob on the speaker and your computer's volume controls.
 - Ensure the speaker is placed on a stable surface and not obstructed.
 - Try switching between the two EQ sound modes to see if it improves audio for your specific content.
- **Device Not Recognized:**
 - Try connecting the speaker to a different USB port on your computer.
 - Restart your computer and reconnect the speaker.

Warranty and Support

This product comes with a Limited Warranty. For detailed warranty information or technical support, please refer to the contact information provided with your purchase or visit the official ROFALL website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question