

[Manuals.plus](#) /

› [DELUX](#) /

› DELUX KF17 Full Size Folding Bluetooth Keyboard with Touchpad User Manual

DELUX KF17

DELUX KF17 Full Size Folding Bluetooth Keyboard with Touchpad

USER MANUAL

Introduction

Thank you for choosing the DELUX KF17 Full Size Folding Bluetooth Keyboard. This portable, multi-device, and multi-system compatible keyboard features 78 keys and an integrated 2-in-1 touchpad. Designed for convenience and efficiency, it is ideal for users on the go. Please read this manual carefully to ensure proper setup and optimal performance.

Package Contents

Upon unpacking, please ensure all items listed below are present:

- DELUX KF17 Folding Keyboard
- Adjustable Folding Stand
- USB-C Charge Cable
- User Manual



Image: DELUX KF17 keyboard package contents.

Setup

1. Unfolding the Keyboard

The keyboard features a tri-fold design with magnetic closures. Gently unfold the keyboard until it lies flat. The magnetic mechanism will help secure it in the open position. Rubber stoppers are integrated to prevent keys from mashing when folded.

TRI-FOLDED AND PORTABLE



Image: DELUX KF17 folding keyboard in folded and unfolded states, highlighting its compact design and full-size layout.

2. Charging the Keyboard

Before first use, fully charge the keyboard. Connect the provided USB-C cable to the charging port on the keyboard and to a USB power source. A full charge takes approximately 1.5 hours and provides up to 46 hours of usage time.

LONG BATTERY LIFE



1.5 Hours
Charging time

7
Days

Daily Use
(8H/Day)



Image: The DELUX KF17 keyboard connected to a USB-C charging cable.

3. Bluetooth Pairing

The KF17 supports connection with up to three devices via Bluetooth 5.1. Follow these steps to pair your device:

1. Turn on the keyboard using the power switch located on the side.
2. Press and hold the **Fn** key, then press one of the Bluetooth channel keys **BT1**, **BT2**, or **BT3** to select a channel.
3. Press and hold the **Fn** key and the **Pairing** key (usually indicated by a Bluetooth symbol) until the Bluetooth indicator light blinks rapidly. This indicates the keyboard is in pairing mode.
4. On your device (smartphone, tablet, laptop), go to Bluetooth settings and search for available devices. Select "DELUX KF17 Keyboard" to connect.
5. Once successfully paired, the indicator light will stop blinking and remain solid for a few seconds before turning off.

To switch between paired devices, simply press **Fn + BT1**, **BT2**, or **BT3**.

BT 5.1 MULTI-DEVICE WORKFLOW

Connect with up to 3 devices.

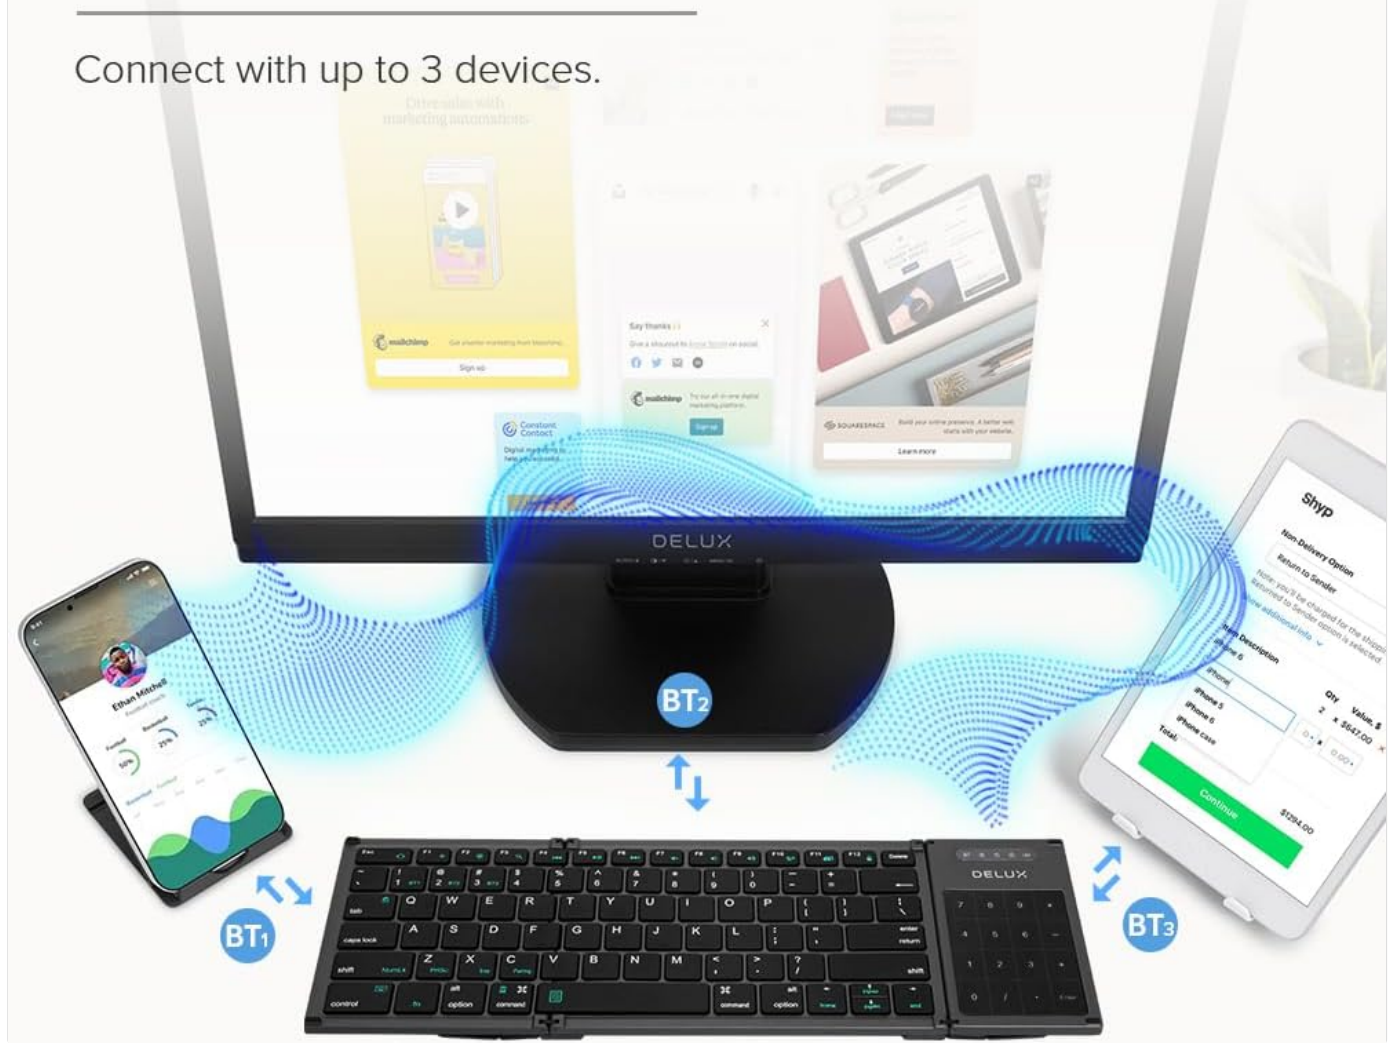 


Image: The DELUX KF17 keyboard connected to multiple devices simultaneously.

4. Setting Up the Adjustable Stand

The included adjustable stand can be used to prop up your smartphone or tablet for an optimal viewing angle while typing. Unfold the stand and adjust it to your desired angle. It folds flat for easy portability.

Operating the Keyboard

1. Keyboard Layout and Function Keys

The KF17 features a full-size 78-key QWERTY layout with scissor-switch keys for a comfortable typing experience. Many keys have secondary functions accessible by holding down the **Fn** key and pressing the desired key.

SCISSOR-SWITCH STRUCTURE



Scissor Switch

Image: Close-up view of the keyboard's scissor-switch key mechanism.

 
2. 2-in-1 Touchpad and Numeric Pad

The right-hand section of the keyboard functions as both a touchpad and a numeric pad. You can switch between these modes by pressing **Fn + Spacebar** (or the dedicated NumLock key if present).

Touchpad Gestures: The touchpad supports multi-touch gestures, which may vary slightly depending on your operating system (Windows, Android, iOS/iPadOS, macOS).

- **Single-finger tap:** Mouse left-click / Tap-Tab (Android)
- **Two-finger tap:** Mouse right-click (Windows) / Double tap and drag (iOS/iPadOS)
- **Two-finger slide:** Scroll (Mouse Wheel)
- **Two-finger pinch:** Zoom in/out
- **Three-finger swipe up:** Open Task View (Windows) / Deck (macOS)
- **Three-finger swipe down:** Back to Desktop (Windows) / App Switcher (iOS/iPadOS)
- **Four-finger tap:** Action Center (Windows) / Screenshot (macOS)

TOUCHPAD FUNCTION INTRODUCTION FOR ANDROID

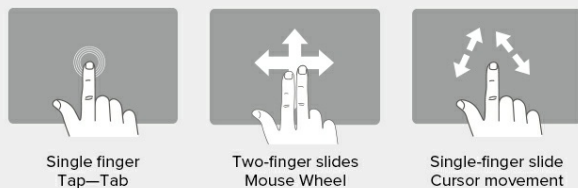

Note: Different brands and versions of Android devices may have different operating gestures.

TOUCHPAD FUNCTION INTRODUCTION FOR WINDOWS 10/11


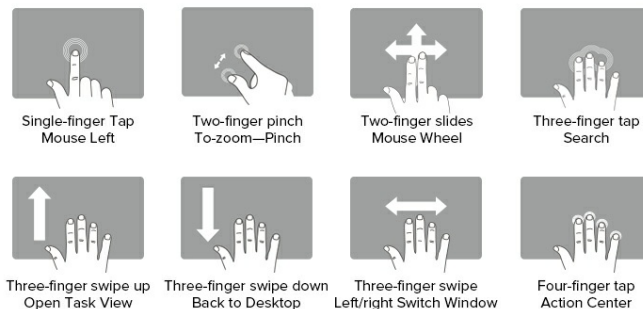 


Image: Touchpad gesture guide for Android and Windows.

 TOUCHPAD FUNCTION INTRODUCTION FOR IOS/IPAD OS(13.4 ABOVE)/MAC OS(11.6 ABOVE)

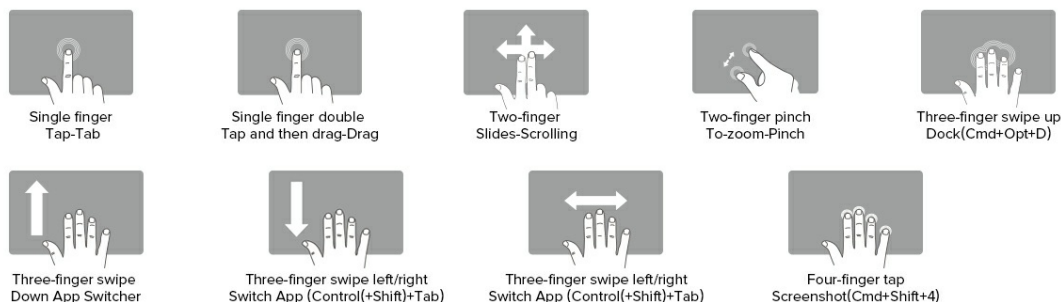

Note: some of the gesture features are only available on iPadOS and macOS

Customization: Settings-Accessibility-Touch-AssistiveTouch-Devices-tab on "DELUX KF16 Keyboard" to customize functions

Image: Touchpad gesture guide for iOS/iPadOS and macOS.

3. Multimedia Control

Access multimedia functions by holding the **Fn** key and pressing the corresponding F-keys (F1-F12). These include volume control, media playback, and more.

MULTI-MEDIA CONTROL

By pressing the key combination: **fn + [F1-F12 keys]** to the corresponding key function.



Maintenance

To ensure the longevity and optimal performance of your DELUX KF17 keyboard, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the keyboard to protect the keys and touchpad. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the keyboard to liquids. In case of accidental spills, immediately power off the keyboard and allow it to dry completely before attempting to use it again.
- **Handle with Care:** While durable, avoid dropping the keyboard or applying excessive force to the keys or hinges.

Troubleshooting

If you encounter issues with your DELUX KF17 keyboard, please refer to the following common solutions:

- **Keyboard not connecting via Bluetooth:**
 - Ensure the keyboard is powered on and fully charged.
 - Verify that Bluetooth is enabled on your device.
 - Put the keyboard into pairing mode (**Fn + Pairing**) and re-attempt pairing from your device's Bluetooth settings.
 - Try forgetting the device on your host system and re-pairing.
 - Ensure you are within the 10-meter working distance.
- **Touchpad not responding or behaving erratically:**
 - Ensure the touchpad is enabled and not in numeric pad mode (**Fn + Spacebar** to toggle).
 - Clean the touchpad surface to remove any dirt or moisture.
 - Restart the keyboard and your connected device.
 - Some touchpad gestures may require specific OS versions or settings (e.g., AssistiveTouch on iOS).
- **Keys not responding:**
 - Check the battery level and charge if necessary.
 - Ensure the keyboard is properly connected to your device.
 - If specific keys are not working, ensure no debris is lodged beneath them.
- **Battery indicator light is red:**
 - This indicates low battery. Connect the keyboard to a power source using the USB-C cable to charge it.

Specifications

Feature	Detail
Model Number	KF17
Connectivity Technology	Bluetooth 5.1

Number of Keys	78
Keyboard Description	Flexible, Full-Size, 3-fold
Special Features	Foldable, Lightweight, Rechargeable, 2-in-1 Touchpad/Numeric Pad, Quiet Keys
Compatible Devices	Personal Computer, Smartphones, Tablets, Laptops, Smart TVs (Windows, Mac OS, iOS, Android, HarmonyOS)
Battery Type	1 Lithium Ion battery (included)
Charging Time	Approx. 1.5 hours
Usage Time	Up to 46 hours
Product Dimensions (unfolded)	13.5"L x 7.2"W x 0.47"H (342mm x 182mm x 12mm)
Item Weight	8.3 ounces (235g)
Material	Metal, Plastic

Warranty and Support

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official DELUX website. You can also find additional resources and contact information on the [DELUX Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question