

[Manuals.plus](#) /

› [Pomya](#) /

› Pomya X100 USB Wired Gaming Mouse User Manual

Pomya Pomya3gtepknfy8-12

Pomya X100 USB Wired Gaming Mouse User Manual

Model: X100 (Pomya3gtepknfy8-12)

1. PRODUCT OVERVIEW

The Pomya X100 is an ergonomic USB wired gaming mouse designed for comfortable and precise control across various computing tasks, including gaming, office work, and general home use. It features adjustable DPI settings and customizable RGB backlighting.

Special key combination:

Switch light mode 1 :

Press DPI- button 3 seconds to turn off or turn on led light
or

Switch light mode 2 :

Forward / back button + DPI-



Image: Top-down view of the Pomya X100 USB Wired Gaming Mouse, showcasing its ergonomic shape and button layout.

X100 Cool glowing gaming mouse

ERGONOMIC DESIGN

Ultra-thin appearance, ergonomic design,
comfortable grip, enjoy wireless pleasure



Image: Illustration highlighting the ergonomic design for comfortable grip and the mouse's durability with a 10 million click test rating.

2. SETUP INSTRUCTIONS

2.1 Connecting the Mouse

1. Locate an available USB port on your computer (desktop or laptop).
2. Insert the USB connector of the Pomya X100 Gaming Mouse into the USB port.
3. The mouse is designed for plug-and-play functionality. Your operating system should automatically detect and install the necessary drivers. No additional software installation is typically required.

The mouse features a 1.5-meter USB 2.0 cable for flexible placement.



Image: The Pomya X100 USB Wired Gaming Mouse with its integrated USB cable, ready for connection.

3. OPERATING INSTRUCTIONS

3.1 DPI Adjustment

The Pomya X100 mouse offers 4 adjustable DPI (Dots Per Inch) levels for varying cursor sensitivity. You can cycle through these settings using the DPI buttons located on the top of the mouse.

- **DPI+ Button:** Increases DPI sensitivity.
- **DPI- Button:** Decreases DPI sensitivity.

The available DPI settings are: 1200 DPI, 1800 DPI, 2400 DPI, and 3600 DPI.

4 GEAR ADJUSTABLE DPI

1200-1800-2400-3600DPI (4 DPI stages)

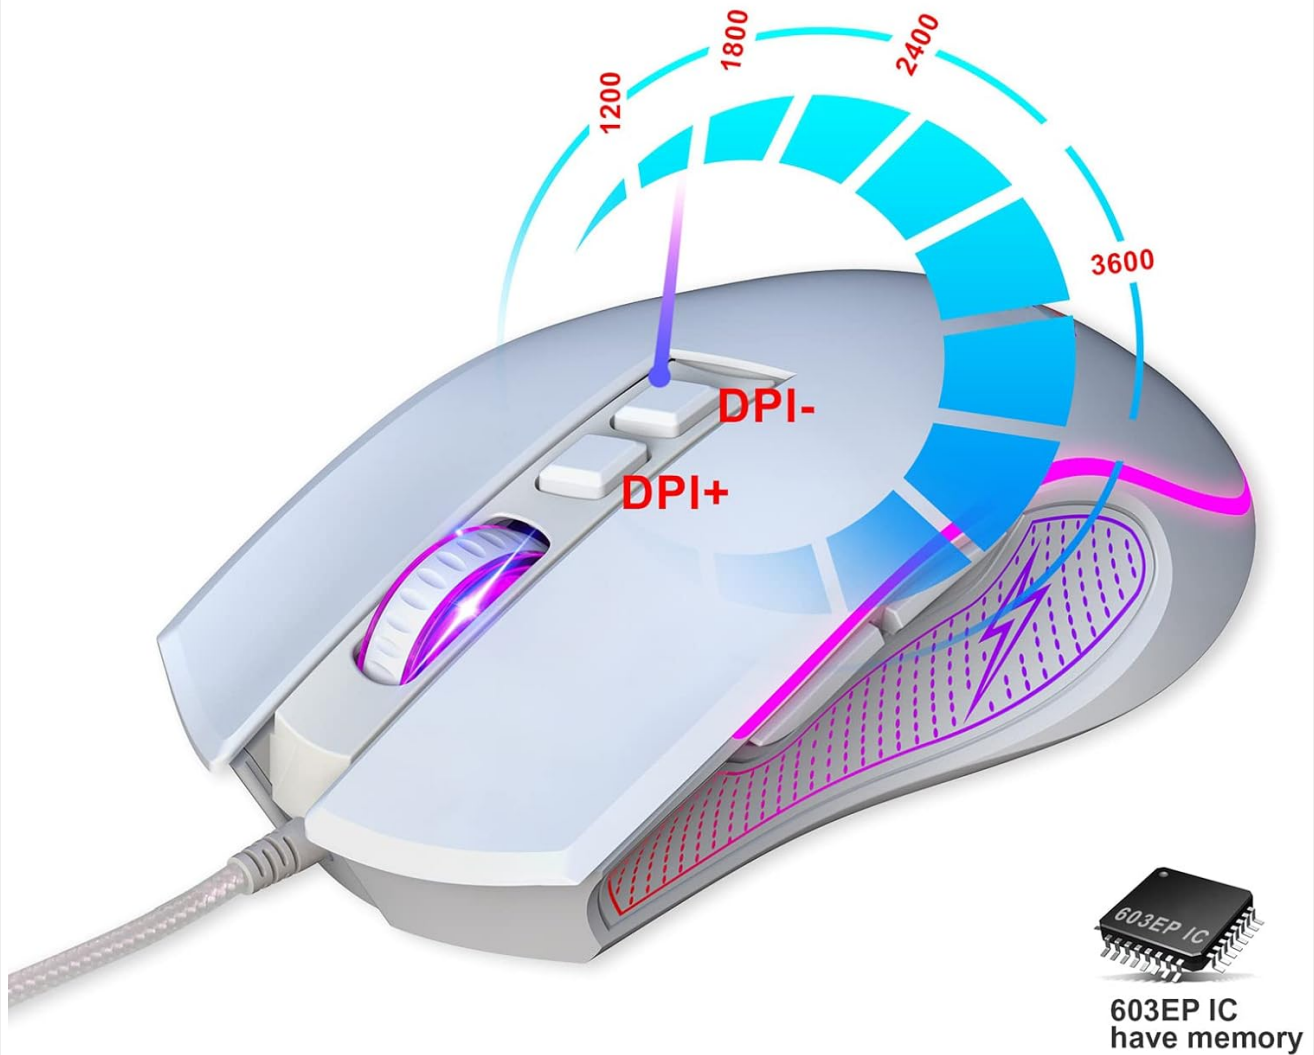


Image: Diagram illustrating the 4 adjustable DPI levels (1200, 1800, 2400, 3600) and the location of the DPI+ and DPI- buttons on the mouse.

3.2 DPI Indicator Light

When adjusting DPI, the mouse's red light will flash to indicate the current DPI level:

- **1200 DPI:** Red light flashes once.
- **1800 DPI:** Red light flashes 2 times.
- **2400 DPI:** Red light flashes 3 times.
- **3600 DPI:** Red light flashes 4 times.



Image: Visual representation of the DPI indicator light behavior, showing the number of red light flashes corresponding to each DPI setting.

3.3 RGB Backlighting Control

The mouse features 7-color RGB backlighting with a breathing light effect.

- **To turn the LED light on/off:** Long press the DPI- button for 3 seconds.
- **To switch light modes (if available):** Press the Forward button + DPI- button simultaneously. (Note: Specific light modes may vary or cycle automatically).



Image: The Pomya X100 Gaming Mouse displaying its colorful breathing light effect, cycling through various RGB colors.

X100 Cool glowing gaming mouse

7-COLOR BREATHING LIGHT EFFECT

○ Red / ○ Yellow / ○ Green / ○ Light blue / ○ Dark Blue / ○ Pink / ○ Purple
7 color cycle breathing



Image: A series of Pomya X100 mice, each illuminated with a different color from the 7-color breathing light cycle (Red, Yellow, Green, Light Blue, Dark Blue, Pink, Purple).

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the internal components.
- **Storage:** Store the mouse in a dry environment, away from extreme temperatures and direct sunlight.
- **Cable Care:** Avoid sharp bends or excessive pulling on the USB cable to prevent damage.

5. TROUBLESHOOTING

- **Mouse not responding:**
 - Ensure the USB cable is securely plugged into a working USB port on your computer.
 - Try plugging the mouse into a different USB port.
 - Restart your computer.
- **RGB lights not working:**

- Long press the DPI- button for 3 seconds to toggle the LED lights on/off.
- Ensure the mouse is properly connected to your computer.

- **DPI adjoktment not working:**

- Ensure you are pressing the correct DPI+ or DPI- buttons.
- Check if the mouse is recognized by your operating system.

6. SPECIFICATIONS

Feature	Specification
Model	X100 (Pomya3gtepknfy8-12)
Brand	Pomya
DPI Settings	1200 / 1800 / 2400 / 3600
FPS	Max 4000fps
Movement Detection	Optical Sensor
Number of Buttons	6
Connectivity	Wired USB 2.0
Cable Length	1.5 meters
Backlighting	7 Colors RGB Breathing Effect
Material	ABS
Compatible OS	Linux, Windows 7, Windows XP (and newer versions)
Compatible Devices	Laptop, Personal Computer
Dimensions (Parcel)	14 x 9 x 5 cm
Origin	China

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question