

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Re-Flix](#) /

› Re-Flix Superior Light 4-in-1 Universal Remote Control Instruction Manual for SABA LD22VSW265S TV

Re-Flix 747516

Re-Flix Superior Light 4-in-1 Universal Remote Control Instruction Manual

INTRODUCTION

This manual provides instructions for the Re-Flix Superior Light 4-in-1 Universal Remote Control, model 747516. This remote is pre-programmed for use with SABA LD22VSW265S televisions and other compatible devices. Please read these instructions carefully before use.

PACKAGE CONTENTS

- 1 x Re-Flix Superior Light 4-in-1 Universal Remote Control
- (Batteries are not included)

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA 1.5V batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks.

Note: The remote control retains its programming even when batteries are removed or replaced.

2. Initial Use (Pre-programmed)

This remote control is pre-programmed for the SABA LD22VSW265S TV model. After installing batteries, it is ready for immediate use with the specified device. No additional codes or setup steps are required for the primary device.

Important: Ensure the model designation of your device or original remote control matches the model name specified in the product description (SABA LD22VSW265S).

3. Programming Additional Devices (Optional)

To program additional devices, a separate USB programming unit is required. This unit is not included with the remote control. Refer to the programming unit's manual for detailed instructions on how to program

other devices.

OPERATING INSTRUCTIONS

The Re-Flix Superior Light 4-in-1 remote control features a standard layout for intuitive operation. Below is a general overview of key buttons and their functions.



Figure 1: Front view of the Re-Flix Superior Light 4-in-1 Universal Remote Control, showing all buttons and their labels. The remote is black with white and colored buttons.

Button Functions Overview:

- **Power (Red Button):** Turns the connected device (e.g., TV) on or off.
- **TV/DTV, SAT, DVD, AUX:** Selects the device mode for control. Press the corresponding button to switch control to your TV, Satellite receiver, DVD player, or Auxiliary device.
- **Numeric Keypad (0-9):** Used for direct channel selection or inputting numbers.
- **SOURCE:** Cycles through input sources (HDMI, AV, etc.) on your TV.
- **MENU:** Opens the main menu of the selected device.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current program or input.
- **BACK:** Returns to the previous screen or channel.
- **Volume Up/Down (V+, V-):** Adjusts the volume level.
- **Channel Up/Down (P+, P-):** Changes the channel.
- **MUTE:** Mutes or unmutes the audio.
- **Colored Buttons (Red, Green, Yellow, Blue):** Often used for specific functions within smart TV apps or teletext, as indicated on screen.
- **NET TV, SMART TUBE, SMART VIDEO, EPG:** Dedicated buttons for smart TV features, streaming services, and Electronic Program Guide.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or buttons become unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

Important: Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the device's infrared receiver.
 - Make sure you are within the operational range (up to 10 meters).
- **Remote controls some functions but not others:**
 - Verify that the remote is in the correct device mode (e.g., TV mode for TV functions).
 - Confirm that your device model (SABA LD22VSW265S) is fully compatible with the pre-programming.
 - **Cannot program additional devices:**
 - Remember that a separate USB programming unit is required for this function.
 - Consult the manual for the USB programming unit for specific instructions.

SPECIFICATIONS



Figure 2: Side profile of the Re-Flix Superior Light 4-in-1 Universal Remote Control, illustrating its slim design.

Feature	Detail
Brand	Re-Flix
Model Number	747516
Compatible Devices	Television (pre-programmed for SABA LD22VSW265S)
Connectivity Technology	Infrared
Max Number of Supported Devices	1 (expandable with programming unit)
Maximum Range	10 Metres
Power Source	2 x AAA 1.5V Batteries (not included)
Weight	89 g
Dimensions	21.0 x 4.7 x 2.0 cm



Figure 3: Back view of the Re-Flix Superior Light 4-in-1 Universal Remote Control, showing the battery compartment and product label with model information.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website. Keep your purchase receipt as proof of purchase.

Manufacturer: Re-Flix

Model: 747516

