

[Manuals.plus](#) /

› [Re-Flix](#) /

› Re-Flix Superior Light Remote Control for Takara KDV100B-V2 DVD/BD - User Manual

Re-Flix 747516

Re-Flix Superior Light Remote Control User Manual

For Takara KDV100B-V2 DVD/BD Players

1. INTRODUCTION

This manual provides essential instructions for the Re-Flix Superior Light Remote Control, specifically pre-programmed for use with Takara KDV100B-V2 DVD/BD players. This remote is designed for immediate functionality upon battery insertion, eliminating the need for complex setup codes.

2. PACKAGE CONTENTS

- 1 x Re-Flix Superior Light Remote Control

Note: Two (2) 1.5V AAA batteries are required and are not included in the package.

3. SETUP

3.1. Inserting Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) 1.5V AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Back of the remote control with the battery compartment. This view illustrates where to insert the AAA batteries.

3.2. Initial Use

The Re-Flix Superior Light Remote Control is pre-programmed for the Takara KDV100B-V2 DVD/BD player. Once batteries are correctly inserted, the remote is ready for immediate use with your device. No additional programming or code entry is required for this specific model.

4. OPERATING THE REMOTE CONTROL

Point the remote control directly at the infrared (IR) receiver of your Takara KDV100B-V2 DVD/BD player. Press the desired function button to control your device. The buttons are designed to correspond to the

standard functions of your original remote control.



Image: Front of the remote control, displaying the various function buttons for operation.

4.1. Important Note on Programming Other Devices

This remote control is specifically pre-programmed for the Takara KDV100B-V2 DVD/BD player. If you wish to program this remote for other devices, a separate USB programming device is required. This USB programming device is not included with this product and must be acquired separately.

5. MAINTENANCE

5.1. Battery Replacement

When the remote control's performance diminishes or it ceases to function, replace both AAA batteries with new ones. Always ensure correct polarity during insertion. Old batteries should be disposed of according to local regulations.

5.2. Cleaning

Clean the remote control with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no physical obstructions between the remote control and the device's IR receiver.
 - Verify that the remote control is pointed directly at the device's IR receiver.
- **Some functions not working as expected:**
 - Confirm that your device is indeed the Takara KDV100B-V2 DVD/BD player. This remote is specifically pre-programmed for this model.
 - If you have custom-programmed the remote for a different device, some button functions may not perfectly match the original remote's layout or capabilities.

7. SPECIFICATIONS

- **Model Number:** 747516
- **Brand:** Re-Flix
- **Compatible Devices:** Takara KDV100B-V2 DVD/BD Player
- **Batteries:** 2 x 1.5V AAA (not included)
- **Dimensions:** 21.0 x 4.7 x 2.0 cm
- **Weight:** 89 g
- **Color:** Black

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical assistance, or customer support, please refer to the documentation provided by your retailer or contact Re-Flix customer service directly through their official website or contact channels.