

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [XIVUE](#) /
- › [XIVUE Replacement Remote Control User Manual](#)

## XIVUE Replacement Remote for Toilet

# XIVUE Replacement Remote Control User Manual

For TOTO WASHLET Models: THU6056, THU6055, S500E, S500, S550, 550E

## INTRODUCTION

This manual provides comprehensive instructions for the XIVUE Replacement Remote Control, specifically designed for select TOTO WASHLET models. It covers essential information regarding product compatibility, package contents, initial setup, detailed operation of functions, routine maintenance, and troubleshooting common issues. Please read this manual thoroughly to ensure proper and effective use of your new remote control.







Image: This image displays the replacement remote control alongside its dedicated wall mount case, illustrating the complete package contents.

## SETUP INSTRUCTIONS

Follow these steps for the initial setup of your replacement remote control:

- Battery Installation:** Locate the battery compartment on the back of the remote control. Gently slide open the cover. Insert two (2) AAA 1.5V batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. Close the battery cover securely until it clicks into place.
- Mounting the Bracket:** Select a convenient and accessible location near your TOTO WASHLET for the wall mount case. Using appropriate screws (not supplied), securely fasten the bracket to the wall. Ensure the surface is clean and dry before mounting.
- Placing the Remote:** Once the wall mount bracket is firmly installed, slide the remote control into the bracket. This provides a secure and accessible storage solution for your remote.



1. Water 2. Seat 3. Dryer

1. Water 2. Seat 3. Dryer

DRYER STOP REAR FRONT

POSITION PRESSURE

Water Temp Seat Temp Dryer Temp

Energy Saver Light TO-01 Beep Wand Cleaning

The control panel is a vertical strip on the right side of the machine. At the top, there is a black rectangular area containing a green LCD display. To the left of the display are four white rectangular indicators. To the right, the text 'TEMP POSITION' is written vertically next to a fan-like icon. Below the display, the text '1. Water 2. Seat 3. Dryer' is printed twice. The panel features several rows of buttons: a row with three buttons (green, yellow, blue) labeled 'DRYER', 'STOP', and 'REAR'; a row with three buttons (white, white, blue) labeled 'FRONT'; a row with three buttons (white, white, white) labeled 'POSITION' and 'PRESSURE'; a row with three buttons (white, white, white) with icons of a person and a spray nozzle; a row with three blue buttons labeled 'Water Temp', 'Seat Temp', and 'Dryer Temp'; and a row with three blue buttons. At the bottom, there are four small white buttons labeled 'Energy Saver', 'Light', 'TO-01', 'Beep', and 'Wand Cleaning'.



Image: This image shows the rear side of the remote control, highlighting the battery compartment where two AAA batteries are to be inserted for power.

## OPERATING THE REMOTE CONTROL

The remote control provides comprehensive control over your TOTO WASHLET's functions. Familiarize yourself with the button layout and their corresponding actions using the diagram and descriptions below.

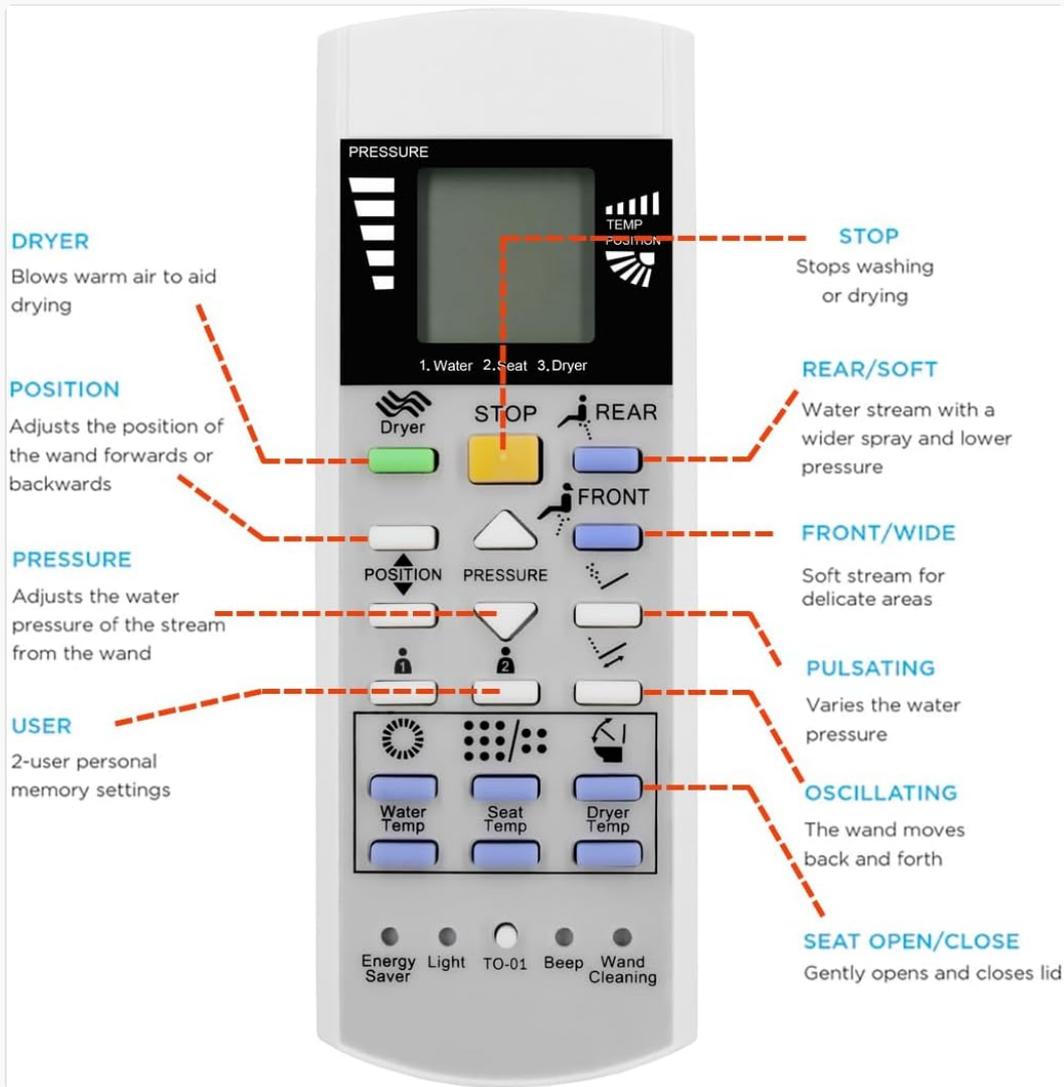


Image: This detailed diagram illustrates the front face of the remote control, with clear labels pointing to each button and describing its specific function.

### Key Functions:

- **DRYER:** Activates the warm air drying function after washing.
- **STOP:** Immediately ceases any active washing or drying operation.
- **REAR/SOFT:** Initiates a water stream for rear cleansing, typically with a wider spray and lower pressure.
- **FRONT/WIDE:** Initiates a gentle water stream for delicate front cleansing areas.
- **POSITION:** Adjusts the forward or backward position of the cleansing wand.
- **PRESSURE:** Modifies the intensity or pressure of the water stream.
- **PULSATING:** Engages a function that varies the water pressure for a pulsating sensation during cleansing.

- **OSCILLATING:** Activates a function that moves the cleansing wand back and forth for a wider cleaning area.
- **USER (1 & 2):** Allows users to save and recall two personalized settings for their preferred wash functions.
- **Water Temp:** Adjusts the temperature of the wash water.
- **Seat Temp:** Adjusts the temperature of the heated toilet seat.
- **Dryer Temp:** Adjusts the temperature of the warm air dryer.
- **Energy Saver:** Toggles the WASHLET's energy-saving mode on or off.
- **Light:** Controls the illumination of the WASHLET's indicator light.
- **TO-01:** This is a specific function button; refer to your original TOTO WASHLET manual for its precise operation.
- **Beep:** Toggles the audible feedback (beep sound) of the remote control on or off.
- **Wand Cleaning:** Initiates the self-cleaning cycle for the cleansing wand.
- **SEAT OPEN/CLOSE:** Gently opens and closes the toilet lid, if your WASHLET model supports this feature.

## MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your remote control:

- **Cleaning:** To clean the remote control, wipe its surface with a soft, slightly damp cloth. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the plastic finish and internal electronics. Ensure no liquid enters the battery compartment or button crevices.
- **Battery Replacement:** Replace the batteries promptly when the remote's response becomes sluggish, the display dims, or it ceases to function. Always use new AAA 1.5V batteries. Dispose of used batteries according to local regulations.
- **Storage:** When not in active use, store the remote control in its provided wall mount case. This helps prevent accidental damage, misplacement, and keeps it away from direct sunlight or extreme temperatures, which can degrade battery life and electronic components.

## TROUBLESHOOTING

If you encounter issues with your remote control, refer to the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Remote not responding or inconsistent operation.	Dead or low batteries; Incorrect battery installation.	Replace batteries with new AAA 1.5V batteries. Ensure correct polarity (+/-) when inserting.
Limited operating range or intermittent connection.	Obstruction between remote and WASHLET receiver; Interference from other electronic devices.	Ensure a clear line of sight between the remote and the WASHLET. Move away from strong sources of electromagnetic interference.
Specific functions (e.g., water pressure, seat temp) not working.	WASHLET specific issue; Remote button malfunction; Feature not supported by your specific WASHLET model.	Consult your original TOTO WASHLET user manual to confirm feature availability. If other functions work, the specific button on the remote may be faulty.

## SPECIFICATIONS

---

Below are the technical specifications for the XIVUE Replacement Remote Control:

- **Model Designation:** Replacement Remote for Toilet
- **Compatible TOTO WASHLET Models:** THU6056, THU6055, S500E, S500, S550, 550E
- **Power Source:** 2 x AAA 1.5V Batteries (not included)
- **Approximate Dimensions (L x W x H):** 6.5 x 3.31 x 1.85 inches
- **Approximate Item Weight (without batteries):** 2.39 ounces
- **Manufacturer:** XIVUE
- **Special Feature:** Ergonomic design for comfortable handling

This manual is for informational purposes only. For detailed information on your specific TOTO WASHLET functions, please refer to its original user manual. For further assistance regarding this replacement remote control, please contact the manufacturer.

© 2023 XIVUE. All rights reserved.