

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEGO](#) /

› [LEGO Disney Castle \(43222\) Building Set Instruction Manual](#)

LEGO 43222

LEGO Disney Castle (43222) Building Set Instruction Manual

Model: 43222 | Brand: LEGO

1. PRODUCT OVERVIEW

The LEGO Disney Castle (43222) is an intricate building set designed for enthusiasts of Disney Princess characters and their partners. This detailed model showcases various rooms, classic Disney references, and nostalgic details, including a special time capsule commemorating 100 years of Disney movies. Key interactive features include a spinning dance floor in the grand ballroom and an 'enchanted' fireplace that rotates to reveal the iconic spinning wheel from the Sleeping Beauty movie.

This premium collectible set includes 8 minifigures of well-known characters: Disney's Cinderella, Prince Charming, Snow White, Prince Florian, Princess Tiana, Prince Naveen, Rapunzel, and Flynn Ryder. While suitable for role-play, the assembled castle also serves as an impressive display piece.



Figure 1: The fully assembled LEGO Disney Castle (43222) from the front, highlighting its grand scale and detailed architecture.



Figure 2: A cutaway view of the LEGO Disney Castle (43222), illustrating the various interior rooms and their detailed furnishings.

2. SETUP AND ASSEMBLY

The LEGO Disney Castle (43222) is a large-scale building project, consisting of numerous pieces. Careful attention to the provided instruction manuals is crucial for successful assembly.

2.1 Unpacking

Carefully open the product packaging and remove all bags of LEGO bricks and instruction booklets. It is recommended to sort the bags by number as indicated in the instructions to streamline the building process.

2.2 Assembly Process

1. Follow the step-by-step instructions provided in the included booklets. Each step clearly illustrates which pieces are needed and how they connect.
2. Work on a clean, flat surface to prevent losing small pieces.
3. Ensure all connections are firm and secure before proceeding to the next step.
4. The set is divided into numbered bags, corresponding to sections of the build. Open bags only as instructed to

manage the large number of pieces effectively.



Figure 3: A close-up of the assembly process, showing the detailed construction of the castle.

3. OPERATING FEATURES

The LEGO Disney Castle (43222) includes several interactive features that enhance play and display.

3.1 Spinning Dance Floor

Located in the grand ballroom, the dance floor can be manually spun to simulate characters dancing. Gently rotate the designated mechanism to activate this feature.



Figure 4: Cinderella and Prince Charming minifigures on the spinning dance floor, illustrating an interactive feature of the castle.

3.2 Enchanted Fireplace

The 'enchanted' fireplace features a rotating mechanism. Turn the designated part to reveal the iconic spinning wheel from the Sleeping Beauty story, adding a magical touch to the set.

3.3 Minifigure Placement

The set includes 8 minifigures. These can be placed throughout the castle's various rooms and balconies to recreate scenes or create new adventures.



Figure 5: Rapunzel minifigure engaged in painting within a detailed room of the castle, showcasing interior play possibilities.

4. MAINTENANCE

To ensure the longevity and appearance of your LEGO Disney Castle (43222), follow these simple maintenance guidelines:

- **Cleaning:** Dust regularly with a soft, dry cloth or a soft-bristled brush. For deeper cleaning, use a mild soap solution and a soft cloth, then rinse with clean water and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** If disassembling for storage, keep all pieces in sealed bags or containers to prevent loss and damage. Store in a cool, dry place away from direct sunlight to prevent color fading.
- **Handling:** Handle the assembled model with care, especially when moving it, to prevent pieces from detaching.

5. TROUBLESHOOTING

Most issues with LEGO sets can be resolved by carefully reviewing the instructions or checking for common assembly errors.

5.1 Missing Pieces

If you discover a missing piece during assembly, first double-check all bags and the building area. Sometimes small pieces can be overlooked. If a piece is genuinely missing, contact LEGO Customer Service for assistance.

5.2 Incorrect Assembly

If a section of the model does not look correct or pieces do not fit properly, carefully retrace your steps in the instruction manual. Disassemble the problematic section and reassemble it, paying close attention to the diagrams and piece orientation.

5.3 Stability Issues

If the assembled castle feels unstable, ensure all bricks are firmly pressed together. Loose connections can compromise the structural integrity of the model. Re-examine the base and critical support structures for any gaps.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	21.65 x 7.87 x 19.69 inches
Item Weight	15.4 pounds
ASIN	B0C9WDG86C
Item Model Number	43222
Manufacturer Recommended Age	18 years and up
Language	English
Manufacturer	Lego
Included Minifigures	Cinderella, Prince Charming, Snow White, Prince Florian, Princess Tiana, Prince Naveen, Rapunzel, Flynn Ryder

7. SAFETY INFORMATION

LEGO® components are rigorously tested (dropped, heated, crushed, twisted, and analyzed) to ensure they meet stringent global safety standards. This product is intended for users aged 18 years and up due to its complexity and the presence of small parts which may pose a choking hazard for younger children.

8. WARRANTY AND SUPPORT

Specific warranty details for the LEGO Disney Castle (43222) are not provided within this instruction manual. For information regarding product warranty, missing parts, or further support, please refer to the official LEGO website or contact LEGO Customer Service directly. Keep your proof of purchase for any warranty claims.