

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [YQSAVIOR](#) /
- › [YQSAVIOR Android 13 Tablet YQ10SMAX User Manual](#)

YQSAVIOR YQ10SMAX

YQSAVIOR Android 13 Tablet YQ10SMAX User Manual

Model: YQ10SMAX

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your YQSAVIOR Android 13 Tablet, model YQ10SMAX. Please read this guide thoroughly to ensure proper use and to maximize your tablet's performance.



Image: YQSAVIOR Android 13 Tablet highlighting its key specifications including RAM, ROM, and expandable storage.

2. SETUP

2.1 Package Contents

Verify that your package contains the following items:

- YQSAVIOR Android 13 Tablet (YQ10SMAX)
- Charging Adapter (5V/2A)
- USB-C Cable
- Keyboard
- Mouse
- Stylus (if included in your specific package)
- Screen Protector (user-applied)

2.2 Initial Charging

Before first use, fully charge the tablet. Connect the provided USB-C cable to the tablet's charging port and the other end to the charging adapter. Plug the adapter into a power outlet. The battery indicator on the screen will show charging status. A full charge may take several hours.

Large capacity battery



710 Time standby
Standby time



5V/2A
Adapter



3.5mm
Headphone jack

6000 mAh



Image: YQSAVIOR tablet with charging cable and adapter, illustrating the 6000mAh battery capacity and 5V/2A adapter.

2.3 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the YQSAVIOR logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power menu appears. Select "Power off" from the options.
- **To Restart:** Press and hold the Power button until a power menu appears. Select "Restart" from the options.

2.4 Connecting to Wi-Fi

To access the internet, connect your tablet to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle the Wi-Fi switch to the **On** position.
3. Select your desired Wi-Fi network from the list of available networks.
4. Enter the network password if prompted, then tap **Connect**.

The tablet supports 2.4G, 5G, and Wi-Fi 6 networks for optimal connectivity.

2.5 Inserting a Micro SD Card

To expand storage, you can insert a Micro SD card (up to 1TB):

1. Locate the Micro SD card slot on the side of the tablet.
2. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. The tablet will detect the card, and you may be prompted to format it for use. Follow the on-screen instructions.

2.6 Connecting Accessories (Keyboard, Mouse)

The tablet supports Bluetooth accessories like the included keyboard and mouse:

1. Ensure the accessory (keyboard/mouse) is powered on and in pairing mode. Refer to the accessory's individual manual for specific pairing instructions.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Toggle Bluetooth to **On**.
4. Tap **Pair new device**.
5. Select the accessory from the list of available devices and follow any on-screen prompts to complete pairing.

Dual smart speaker

Give a more backward sound quality and presence.
Music appreciation, movie appreciation, game scenes can be perfectly reproduced.



5G+Wi-Fi 6



Bluetooth 5.0



Double speaker



Image: YQSAVIOR tablet with an external keyboard, demonstrating its use for productivity.

2.7 Applying the Screen Protector

A screen protector is included for added display protection. Apply it carefully to avoid bubbles and ensure proper adhesion. Clean the screen thoroughly before application.

3. OPERATING THE TABLET

3.1 Basic Navigation (Android 13)

Your tablet runs on Android 13. Common gestures include:

- **Tap:** Select an item or open an app.
- **Swipe:** Navigate through screens, scroll content, or dismiss notifications.
- **Pinch-to-zoom:** Enlarge or reduce content on the screen.
- **Long press:** Access contextual menus or move app icons.

3.2 Display and Visuals

The 10.1-inch IPS HD screen offers a resolution of 1280x800 pixels. Adjust brightness and display settings in **Settings > Display** for optimal viewing comfort.



Image: YQSAVIOR tablet showcasing its 10-inch IPS display with a resolution of 1280x800.

3.3 Camera Functionality

The tablet is equipped with an 8MP rear camera. Open the Camera app to capture photos and videos. Settings within the app allow for various adjustments.

3.4 Audio and Sound

The tablet features dual smart speakers for audio output. A 3.5mm headphone jack is also available for private listening. Adjust volume using the physical volume buttons or through **Settings > Sound & vibration**.



Image: YQSAVIOR tablet illustrating its dual smart speakers, along with Wi-Fi 6 and Bluetooth 5.0 connectivity features.

3.5 Battery Management

The tablet is powered by a 6000mAh battery, providing an average of 5 hours of usage. To optimize battery life:

- Reduce screen brightness.
- Close unused applications running in the background.
- Disable Wi-Fi, Bluetooth, or GPS when not in use.
- Utilize battery saver modes available in **Settings > Battery**.

4. MAINTENANCE

4.1 Cleaning the Tablet

To clean your tablet:

- Power off the device before cleaning.
- Use a soft, lint-free cloth, slightly dampened with water or a screen cleaner, to wipe the screen and body.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

4.2 Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

5. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet Not Powering On:** Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes before attempting to power on again.
- **Short Battery Life:** Review battery management tips in Section 3.5. Background apps, high screen brightness, and continuous Wi-Fi/Bluetooth usage can drain the battery quickly.
- **Overheating:** If the tablet becomes excessively warm, close all running applications and allow it to cool down. Avoid using the tablet in direct sunlight or while charging in poorly ventilated areas. Prolonged heavy usage can also cause warmth.
- **Wi-Fi Connectivity Issues:** Ensure your Wi-Fi router is working correctly. Try restarting both the tablet and the router. Verify the Wi-Fi password is correct.

- **Unresponsive Touchscreen:** Restart the tablet. If specific areas are unresponsive, ensure the screen is clean and free of debris. If a screen protector is applied, ensure it is correctly installed and not interfering with touch sensitivity.
- **Micro SD Card Not Detected:** Ensure the card is fully and correctly inserted. Try reinserting it. If the issue persists, test the Micro SD card in another device to confirm it is functional.
- **Accessory Pairing Problems:** Ensure Bluetooth is enabled on the tablet and the accessory is in pairing mode. Try unpairing and re-pairing the accessory.
- **Tablet Slow or Unresponsive:** Close unnecessary background applications. Clear cache data for apps. If performance issues persist, consider a factory reset (see below).

5.1 Factory Reset

A factory reset will erase all data on your tablet and restore it to its original factory settings. Back up any important data before proceeding.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your choice and follow the on-screen instructions.

6. SPECIFICATIONS

Feature	Specification
Model	YQ10SMAX
Operating System	Android 13
Screen Size	10.1 Inches
Screen Resolution	1280x800 Pixels
Processor	2 GHz Quad-Core (Allwinner)
RAM	12 GB
Internal Storage (ROM)	128 GB
Expandable Storage	Up to 1 TB (Micro SD)
Graphics Coprocessor	ARM Dedicated GPU
Wireless Type	802.11ax (Wi-Fi 6), 2.4G/5G
Bluetooth	5.0
Battery Capacity	6000mAh
Average Battery Life	5 Hours
Rear Webcam Resolution	8 MP
Item Weight	2.9 pounds
Product Dimensions	10 x 4.6 x 0.3 inches

7. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation provided with your purchase or contact YQSAVIOR customer support directly. Contact details can typically be found on the manufacturer's official website or on your purchase receipt.