



[Manuals.plus](#) /

> [TABU](#) /

> TABU Portable Washing Machine, 2 in 1 Washer Machine, Twin Tub Washing and Spining Combo Machine, 17.8LBS Portable Washer for Apartment, Dorms, RVs, Camping and More (Grey)

TABU 410012710#TA4

TABU Portable Washing Machine User Manual

Model: 410012710#TA4

1. INTRODUCTION

Thank you for choosing the TABU Portable Washing Machine. This 2-in-1 twin tub appliance is designed for efficient and convenient laundry care in compact living spaces such as apartments, dorms, RVs, and during camping trips. With its dual functionality for washing and spinning, it helps save time and effort. Please read this manual thoroughly before operation to ensure safe and proper use, and keep it for future reference.



Figure 1: Front view of the TABU Portable Washing Machine.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the power supply (110V/60Hz) matches the appliance requirements.
- Do not operate the machine with a damaged cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical components in water.
- Always unplug the machine before cleaning or maintenance.

- Do not overload the machine beyond its specified capacity (11lbs for washer, 6.8lbs for spin cycle).
- Ensure the machine is placed on a stable, level surface to prevent vibration and movement.
- Do not open the spin tub lid while it is operating. The machine has a safety feature that stops operation when the lid is opened.

3. PRODUCT OVERVIEW

The TABU Portable Washing Machine features a twin-tub design, separating washing and spinning functions for efficiency. Below are the main components and controls:

3.1. Control Panel

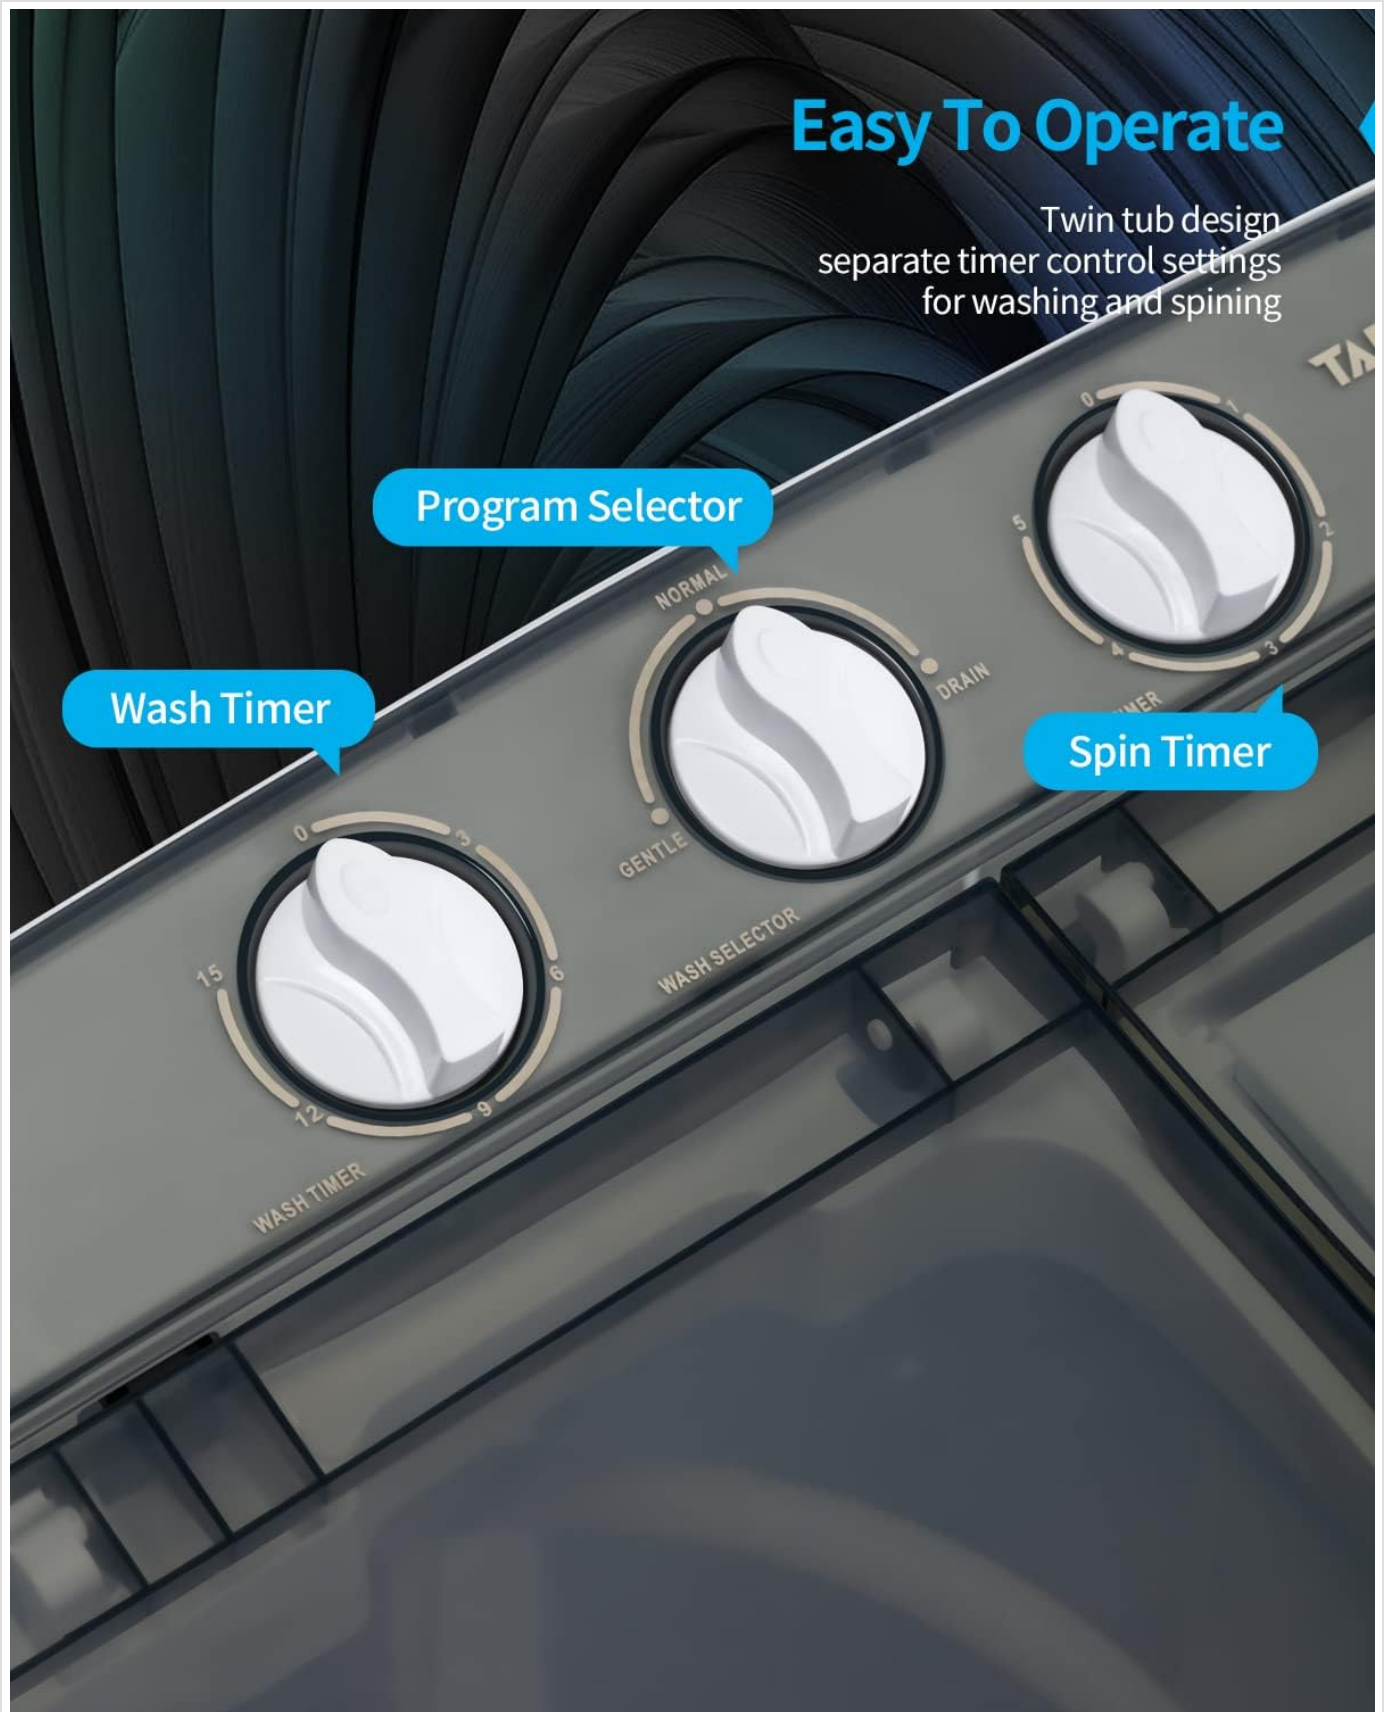


Figure 2: Close-up of the control panel with labeled knobs.

- **Wash Timer:** Sets the washing duration (up to 15 minutes).
- **Wash Selector:** Choose between 'Normal' or 'Gentle' wash cycles.
- **Drain Options:** Select to drain water from the wash tub.
- **Spin Timer:** Sets the spinning duration (up to 5 minutes).

3.2. Main Components



Figure 3: Diagram showing the Washer Tub, Spin Tub, Water Inlet, and Drain Hose.

- **Washer Tub:** For washing clothes. Capacity: 11 lbs.
- **Spin Tub:** For spinning clothes dry. Capacity: 6.8 lbs.
- **Water Inlet:** Point for adding water to the washer tub.
- **Drain Hose:** For gravity drainage of dirty water. Length: 29.5 inches.

4. SETUP

Before first use, ensure the following:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage during transit.
2. **Placement:** Place the machine on a firm, level, and stable surface. Ensure it is near a water source and a drain. Avoid placing it on uneven surfaces to prevent excessive vibration during operation.
3. **Drain Hose:** Position the drain hose to allow for proper gravity drainage into a sink, bathtub, or floor drain. The hose is 29.5 inches long.
4. **Power Connection:** Plug the power cord into a grounded 110V/60Hz electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Washing Clothes

1. **Load Laundry:** Open the lid of the washer tub. Place clothes loosely into the washer tub. Do not exceed the 11 lbs capacity.
2. **Add Water:** Fill the washer tub with water through the water inlet. You can use a hose or pour water manually. Ensure the water level covers the clothes.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the washer tub.
4. **Set Wash Timer:** Turn the 'Wash Timer' knob to your desired washing duration (up to 15 minutes).
5. **Select Wash Mode:** Turn the 'Wash Selector' knob to 'Normal' for regular clothes or 'Gentle' for delicate items.
6. **Start Washing:** The machine will begin washing automatically once the timer is set.
7. **Drain Water:** Once the wash cycle is complete, turn the 'Drain Options' knob to 'Drain' to empty the water from the washer tub.

5.2. Spinning Clothes

1. **Transfer Clothes:** Carefully transfer the washed clothes from the washer tub to the spin tub. Ensure clothes are evenly distributed to prevent imbalance. Do not exceed the 6.8 lbs capacity of the spin tub.
2. **Secure Lid:** Close the lid of the spin tub securely.
3. **Set Spin Timer:** Turn the 'Spin Timer' knob to your desired spinning duration (up to 5 minutes).
4. **Start Spinning:** The spin tub will begin rotating. For safety, the spin cycle will automatically stop if the lid is opened during operation.
5. **Remove Clothes:** Once the spin cycle is complete, open the lid and carefully remove the spun clothes. They will be damp but significantly drier than after washing.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Tubs:** After each use, wipe down the inside of both the washer and spin tubs with a clean, damp cloth to remove any detergent residue or lint.
- **Exterior Cleaning:** Clean the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Drain Hose:** Periodically check the drain hose for any blockages or kinks. Ensure it is clear for efficient drainage.
- **Storage:** If storing the machine for an extended period, ensure both tubs are completely dry to prevent mold or mildew. Store in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	No power; Timer not set.	Check power connection; Ensure timer knob is turned.
Excessive vibration/noise during spin	Uneven load; Machine not level.	Redistribute clothes evenly in the spin tub; Place machine on a flat, stable surface.
Water not draining	Drain hose kinked/blocked; Drain option not selected.	Straighten drain hose; Clear any blockages; Turn 'Drain Options' knob to 'Drain'.
Spin tub stops when lid is opened	Safety feature activated.	This is normal operation. Close the lid to resume spinning.

8. SPECIFICATIONS

Product Dimension



Figure 4: Diagram illustrating the dimensions of the washing machine.

- **Brand:** TABU
- **Model:** 410012710#TA4
- **Total Capacity:** 17.8 lbs
- **Washer Capacity:** 11 lbs
- **Spin Cycle Capacity:** 6.8 lbs
- **Overall Dimensions (D x W x H):** 13.8 x 21.2 x 25.2 inches

- **Item Weight:** 11 pounds
- **Max Spin Speed:** 1300 RPM
- **Power Supply:** 110V/60Hz
- **Total Power:** 360W (Wash: 240W / Dry: 120W)
- **Material Type:** ABS
- **Color:** Grey
- **Installation Type:** Freestanding
- **Access Location:** Top Load
- **Control Console:** Knob

Mini Body But **Large Capacity**


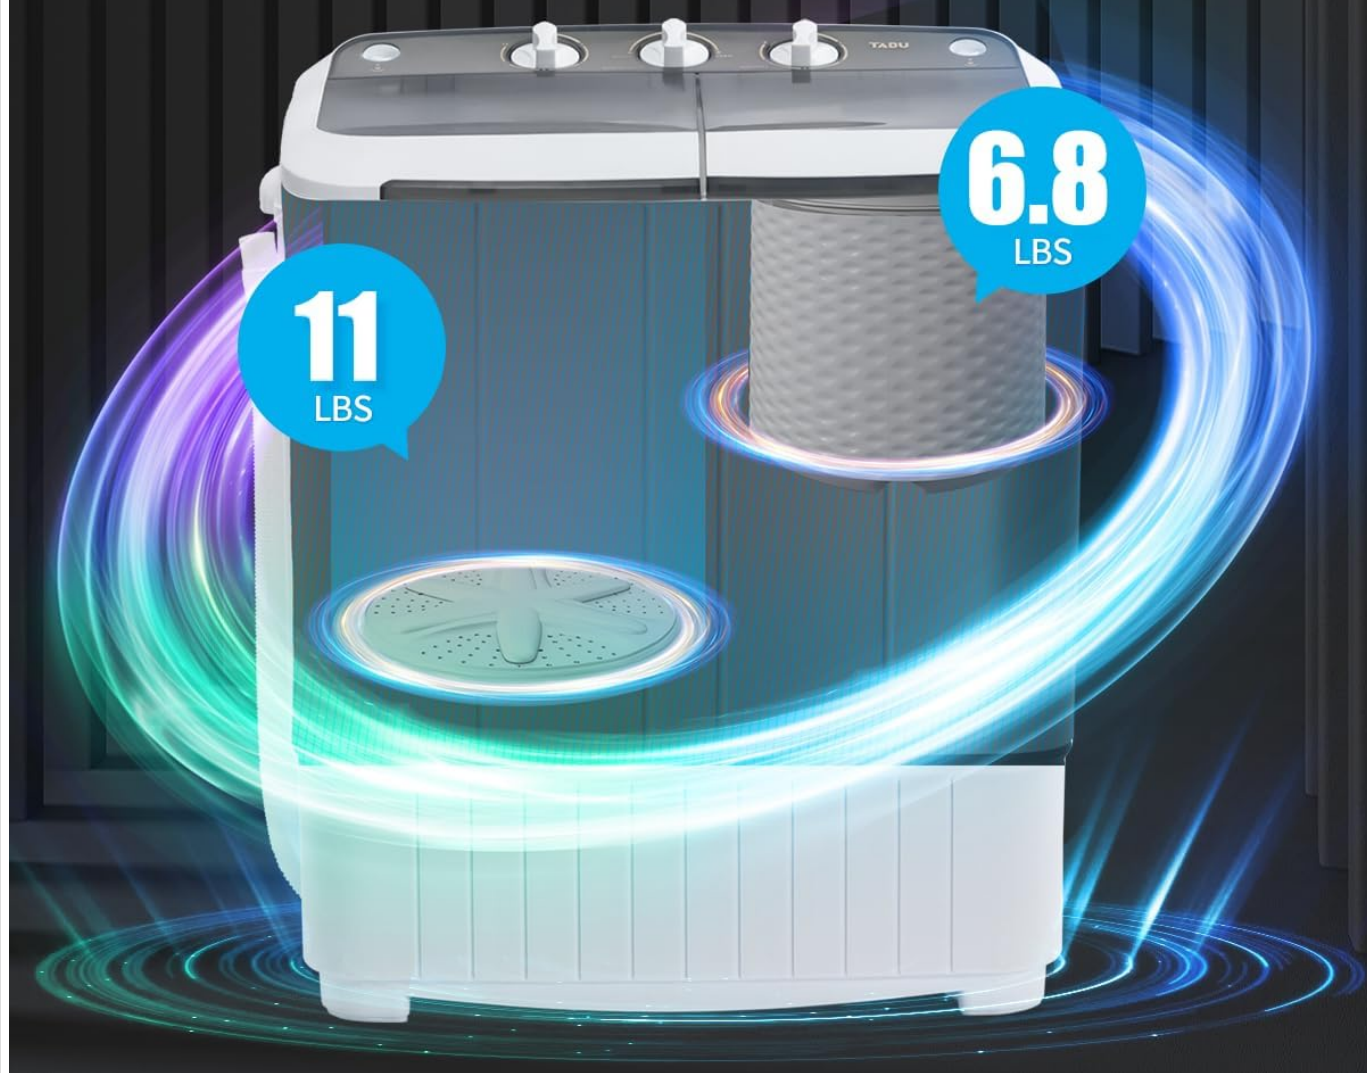


Figure 5: Visual representation of the machine's capacity for various clothing items.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TABU customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

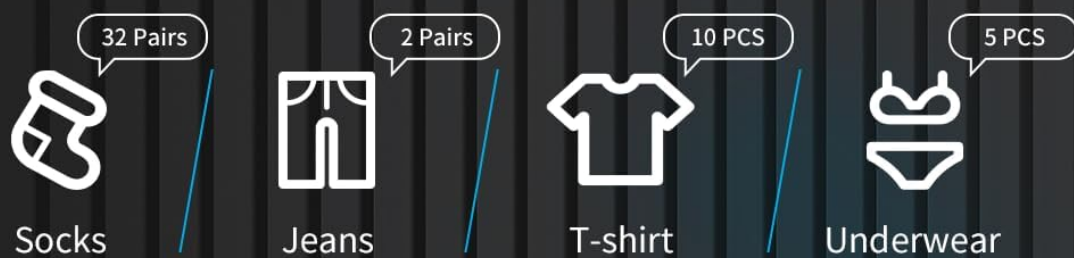