

[manuals.plus](#) /

› [MIAOKE](#) /

› [MIAOKE Portable Blender Instruction Manual \(Model: B0CB15T769\)](#)

**MIAOKE B0CB15T769**

# MIAOKE Portable Blender Instruction Manual

Model: B0CB15T769

## 1. PRODUCT OVERVIEW

---

The MIAOKE Portable Blender is designed for convenient preparation of juices, shakes, and smoothies. Its compact size and USB rechargeable battery make it suitable for home, office, travel, and sports use.



Image: MIAOKE Portable Blender with fruit, illustrating its design and included USB-C cable.

## 2. PACKAGE CONTENTS

---

Please check the package for the following items:

- MIAOKE Portable Blender (Main Unit)
- USB Type-C Charging Cable
- Instruction Manual

## 3. PRODUCT COMPONENTS

---

Familiarize yourself with the different parts of your MIAOKE Portable Blender:



Image: Detailed diagram of the blender's components.

- **Non-slip Cup Covers:** Top and bottom covers for secure sealing.
- **Portable Silicone Handle:** For easy carrying.
- **PCTG/350ml Cup:** The blending container, made from BPA-free material.
- **Six-blade 304 Food-Grade Blades:** Stainless steel blades for efficient blending.
- **3000mAh Rechargeable Battery:** Integrated power source.
- **Non-slip Rubber Bottom:** Provides stability during use.
- **LED Display:** Shows blending countdown and battery status.

#### 4. CHARGING THE BLENDER

Before first use, fully charge the blender. The LED display will indicate charging status.

# USB

## Rechargeable Battery

**3000mAh**  
LARGE BATTERY



Charging Adapter



Power Bank



Laptop



Car Charging



Image: Various methods for charging the blender via USB.

1. Connect the provided USB Type-C cable to the charging port on the blender base.
2. Connect the other end of the USB cable to a compatible power source such as a wall adapter, power bank, laptop, or car charger.
3. The LED display will show the charging progress. A full charge typically takes 3-5 hours.
4. Once fully charged, the display will indicate 100%. Disconnect the charging cable.

## 5. SETUP AND FIRST USE

Follow these steps for initial setup and preparing your first blend:

1. **Initial Cleaning:** Before first use, disassemble the cup and blade base. Wash all parts that come into contact with food using warm soapy water. Rinse thoroughly and dry.
2. **Assembly:** Ensure the blade base is securely twisted onto the cup. The blender will not operate if the cup is not properly aligned and locked with the base.
3. **Charging:** Ensure the blender is fully charged as described in Section 4.

## 6. OPERATING INSTRUCTIONS

Prepare your favorite drinks with these simple steps:

## Simple steps to make delicious meals



1



2



3



4

4. Double-click the button to start working



5

5. Repeat shaking up and down left and right 6-10 times



6

6. Enjoy your nutritious drink when you're done

Image: Visual guide for operating the blender.

- 1. Prepare Ingredients:** Cut fruits and vegetables into small pieces, approximately 1-2 cm (0.4-0.8 inches).
- 2. Add Ingredients:** Place the cut ingredients into the blender cup. Do not fill more than half of the cup with solid ingredients.
- 3. Add Liquid:** Pour water, milk, or other liquids into the cup. The total volume of ingredients (solids + liquids) should not exceed 2/3 of the cup's capacity.
- 4. Secure Lid:** Ensure the blade base is tightly screwed onto the cup. The blender has a safety mechanism and will not start if the cup is not properly locked.
- 5. Start Blending:** Double-click the power button on the base to start the blending cycle. The LED display will show a 30-second countdown.
- 6. Blend:** During blending, gently shake the blender up and down, left and right, 6-10 times to ensure thorough mixing.
- 7. Enjoy:** Once the 30-second cycle is complete, the blender will stop automatically. Unscrew the blade base and enjoy your fresh drink.

### Tips for Best Results:

- For thicker mixtures, add more liquid.
- Avoid blending excessively hard ingredients or large ice cubes, as this may strain the motor.
- Do not operate the blender when empty.



Image: Illustration of the powerful 6-blade system and various blending possibilities.

## 7. CLEANING AND MAINTENANCE

Proper cleaning ensures hygiene and extends the life of your blender.

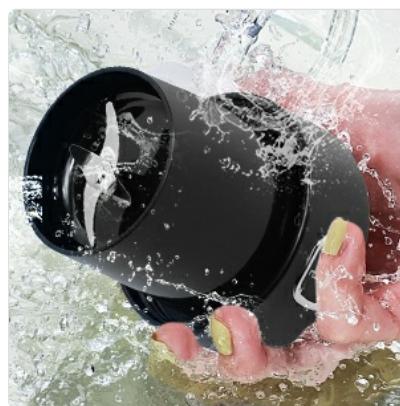


Image: Hand-washing the blade assembly.

- **Immediate Cleaning:** After each use, rinse the cup and blade assembly immediately to prevent food residue from drying.
- **Blade Assembly:** Unscrew the blade base from the cup. Rinse the blades and the interior of the base under running water. Use a brush if necessary to remove stubborn residue. Be cautious around the sharp blades.
- **Cup:** Wash the cup with warm soapy water and rinse thoroughly.
- **Base Unit:** The main base unit containing the motor and battery should **not** be submerged in water. Wipe it clean with a damp cloth.
- **Drying:** Allow all parts to air dry completely before reassembling or storing.

- **Storage:** Store the blender in a clean, dry place away from direct sunlight.

## 8. TROUBLESHOOTING

Refer to the following common issues and their solutions:

### Notes & Common Code Solutions



1. "F3" bottle is not completely locked when it is not safe to open, we need to tighten the bottle until the screen displays "88" Blanks three times. double-click on the open button can be opened normally!



2. "F2" in six consecutive use will automatically start the overload protection, is to better protect the juicer, need to be stationary for five minutes after the automatic recovery!



3. "88" In normal use, if the blade is too large fruit stuck, the motor enters a blocking state, the line protection program starts, blocking 3 seconds, the digital tube display "88" automatically extinguished within 3 seconds.

Image: LED display error codes and their explanations.

Issue/Error Code	Description	Solution
"F3" Displayed	The bottle is not completely locked onto the base.	Tighten the bottle until it is securely locked. Double-click the power button to operate normally.
"F2" Displayed	Overload protection activated after six consecutive uses.	To protect the motor, allow the blender to rest for five minutes for automatic recovery before further use.
"88" Displayed	Blade is stuck due to large fruit pieces or excessive load. Motor enters a blocking state.	The line protection program will activate, and the display will extinguish within 3 seconds. Remove the obstruction, cut ingredients into smaller pieces, and try again.

Issue/Error Code	Description	Solution
<b>Blender does not turn on</b>	Low battery, improper assembly, or power button not pressed correctly.	Ensure the blender is fully charged. Verify the cup is securely locked onto the base. Double-click the power button firmly.
<b>Poor blending results</b>	Ingredients are too large, too little liquid, or too much solid content.	Cut ingredients into smaller pieces. Add more liquid. Do not exceed recommended fill levels (1/2 solids, 2/3 total).

## 9. TECHNICAL SPECIFICATIONS

Feature	Specification
<b>Brand</b>	MIAOKE
<b>Model</b>	B0CB15T769
<b>Capacity</b>	350 ml (11.8 oz)
<b>Battery Capacity</b>	3000 mAh
<b>Charging Time</b>	3-5 hours for full charge
<b>Voltage</b>	7.4 Volts
<b>Blades</b>	6-blade 304 Stainless Steel
<b>Material</b>	PCTG (cup), BPA Free
<b>Dimensions (Approx.)</b>	3.1 inches (Diameter) x 9 inches (Height)
<b>Weight</b>	Approximately 460g (1.01 lbs)
<b>Special Features</b>	Portable, LED Display, USB Rechargeable

## 10. WARRANTY AND SUPPORT

Your MIAOKE Portable Blender comes with a 12-month carefree guarantee.

- **Warranty Period:** 12 months from the date of purchase.
- **Customer Service:** If you encounter any issues or have questions regarding your MIAOKE Portable Blender, please contact our 24-hour customer service. We are committed to providing a satisfactory solution.
- **Contact Information:** Please refer to the contact details provided on the product packaging or the official MIAOKE website for support.

### Related Documents - B0CB15T769

	<h2><a href="#">F9 Laptop Desk with Wireless Charger - User Manual</a></h2> <p>User manual for the F9 Laptop Desk with integrated wireless charging. Features adjustable height and tilt, charger specifications, usage instructions, warnings, FCC compliance, and product requirements. Includes dimensions and model details.</p>
<h3>USE AND CARE</h3>  <small>mwoutdoors.com</small>	<h3><a href="#">mwoutdoors Outdoor Side Table Use and Care Guide</a></h3> <p>Comprehensive guide for the use and care of mwoutdoors outdoor side tables, including assembly notes, safety precautions, and customer support contact information.</p>